

MS 271, 291

***STIHL***



2 - 44      Instruction Manual



## Contents

|    |                                                         |    |
|----|---------------------------------------------------------|----|
| 1  | Introduction.....                                       | 2  |
| 2  | Guide to Using this Manual.....                         | 2  |
| 3  | Safety Precautions.....                                 | 3  |
| 4  | Reactive Forces.....                                    | 7  |
| 5  | Working Techniques.....                                 | 8  |
| 6  | Cutting Attachment.....                                 | 15 |
| 7  | Mounting the Bar and Chain (side chain tensioner).....  | 15 |
| 8  | Mounting the Bar and Chain (quick chain tensioner)..... | 16 |
| 9  | Tensioning the Saw Chain (side chain tensioner).....    | 18 |
| 10 | Tensioning the Saw Chain (quick chain tensioner).....   | 18 |
| 11 | Checking Chain Tension.....                             | 19 |
| 12 | Fuel.....                                               | 19 |
| 13 | Fueling.....                                            | 20 |
| 14 | Chain Lubricant.....                                    | 22 |
| 15 | Filling Chain Oil Tank.....                             | 22 |
| 16 | Checking Chain Lubrication.....                         | 23 |
| 17 | Chain Brake.....                                        | 23 |
| 18 | Winter Operation.....                                   | 24 |
| 19 | Starting / Stopping the Engine.....                     | 24 |
| 20 | Operating Instructions.....                             | 28 |
| 21 | Taking Care of the Guide Bar.....                       | 29 |
| 22 | Shroud.....                                             | 29 |
| 23 | Air Filter System.....                                  | 29 |
| 24 | Cleaning the Air Filter.....                            | 30 |
| 25 | Adjusting the Carburetor.....                           | 30 |
| 26 | Spark Plug.....                                         | 31 |
| 27 | Storing the Machine.....                                | 32 |
| 28 | Checking and Replacing the Chain Sprocket.....          | 32 |
| 29 | Maintaining and Sharpening the Saw Chain.....           | 33 |
| 30 | Maintenance and Care.....                               | 37 |
| 31 | Minimize Wear and Avoid Damage.....                     | 38 |
| 32 | Main Parts.....                                         | 39 |
| 33 | Specifications.....                                     | 40 |
| 34 | Ordering Spare Parts.....                               | 42 |
| 35 | Maintenance and Repairs.....                            | 42 |
| 36 | Disposal.....                                           | 42 |
| 37 | EC Declaration of Conformity.....                       | 42 |
| 38 | UKCA Declaration of Conformity.....                     | 43 |
| 39 | Addresses.....                                          | 44 |

## 1 Introduction

Dear Customer,

Thank you for choosing a quality engineered STIHL product.

It has been built using modern production techniques and comprehensive quality assurance.

Every effort has been made to ensure your satisfaction and trouble-free use of the product.

Please contact your dealer or our sales company if you have any queries concerning this product.

Your



Dr. Nikolas Stihl

## 2 Guide to Using this Manual

This Instruction Manual refers to a STIHL chain saw, also called a machine in this Instruction Manual.

### 2.1 Pictograms

Pictograms that appear on the machine are explained in this Instruction Manual.

Depending on the machine and equipment version, the following pictograms may appear on the machine.



Fuel tank; fuel mixture of gasoline and engine oil



Tank for chain oil; chain oil



Engage and release chain brake



Coasting brake



Direction of chain travel



Ematic; chain oil flow adjustment



Tension saw chain



Intake air baffle: winter operation



Intake air baffle: summer operation



Handle heating



Actuate decompression valve



Actuate manual fuel pump

## 2.2 Symbols in text



### WARNING

Warning where there is a risk of an accident or personal injury or serious damage to property.

### NOTICE

Caution where there is a risk of damaging the machine or its individual components.

## 2.3 Engineering improvements

STIHL's philosophy is to continually improve all of its products. For this reason we may modify the design, engineering and appearance of our products periodically.

Therefore, some changes, modifications and improvements may not be covered in this manual.

## 3 Safety Precautions



Special safety precautions must be observed to reduce the risk of personal injury when working with a chain saw because of the very high chain speed and very sharp cutters.



It is important that you read the instruction manual before first use and keep it in a safe place for future reference. Non-observance of the instruction manual may result in serious or even fatal injury.

### 3.1 General

Observe all applicable local safety regulations, standards and ordinances.

The use of noise emitting power tools may be restricted to certain times by national or local regulations.

If you have not used this model before: Have your dealer or other experienced user show you how to operate your machine or attend a special course in its operation.

Minors should never be allowed to use a chain saw.

Keep bystanders, especially children, and animals away from the work area.

The user is responsible for avoiding injury to third parties or damage to their property.

Do not lend or rent your chain saw without the instruction manual. Be sure that anyone using it understands the information contained in this manual.

To operate a chain saw you must be rested, in good physical condition and mental health. If you have any condition that might be aggravated by strenuous work, check with your doctor before operating a chain saw.

Do not operate the chain saw if you are under the influence of any substance (drugs, alcohol) which might impair vision, dexterity or judgment.

To reduce the risk of accidents or injury, put off the work in poor weather conditions (rain, snow, ice, wind).

Persons with pacemakers only: The ignition system of your chain saw produces an electromagnetic field of a very low intensity. This field may interfere with some pacemakers. To reduce health risks, STIHL recommends that persons with pacemakers consult their physician and the pacemaker manufacturer before operating this power tool.

### 3.2 Intended use

The machine may only be used to saw wood and wooden objects.

Do not use the machine for any other purpose – risk of accidents!

Do not modify the machine in any way – this may increase the risk of personal injury. STIHL excludes all liability for personal injury and damage to property caused while using unauthorised attachments.

### 3.3 Clothing and Equipment

Wear proper protective clothing and equipment.



Clothing must be sturdy and snug-fitting, but allow complete freedom of movement. Wear snug fitting clothing with **cut-retardant pads** – no loose-fitting jacket.

Avoid clothing that could get caught on branches, brush or moving parts of the machine. Do not wear a scarf, necktie or jewellery. Tie up and confine long hair (headscarf, cap, hard hat, etc.).



Wear suitable **safety shoes** – with cut-retardant material, non-slip soles and steel toe caps.



## WARNING



To reduce the risk of eye injuries, wear tight-fitting safety goggles conforming to standard EN 166 or a face shield. Make sure that the safety goggles and the face shield fit correctly.

Wear "personal" hearing protection – for example, ear defenders.

Wear a hard hat wherever there is any risk of falling objects.




Wear sturdy protective gloves made of a resistant material (e.g. leather).

STIHL can supply a comprehensive range of personal protective equipment.

## 3.4 Transporting

Before any transport – even over short distances – switch off the machine, engage the chain brake and attach the chain scabbard. This avoids the risk of the saw chain starting unintentionally.

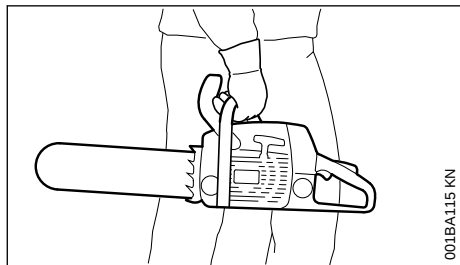

Always carry the chain saw by the handle – with the hot muffler away from your body, the guide bar must point to the rear. To avoid serious burn injuries, avoid touching hot parts of the machine, especially the surface of the muffler.

In vehicles: Properly secure your saw to prevent turnover, fuel spillage and damage.

## 3.5 Cleaning

Clean plastic parts with a cloth. Harsh detergents can damage the plastic.

Clean the dust and dirt off the machine – do not use any grease solvents for this purpose.

Clean the ventilation slots if necessary.

Do not use a high-pressure cleaner to clean the machine. The hard jet of water can damage parts of the machine.

## 3.6 Accessories

Only use those tools, guide bars, chains, chain sprockets, accessories or technically equivalent components that have been approved by STIHL for this machine. If you have any questions in this respect, consult a servicing dealer. Use only high quality tools and accessories. Otherwise, there may be a risk of accidents and damage to the machine.

STIHL recommends the use of genuine STIHL tools, guide bars, chains, chain sprockets and accessories. They are specifically designed to match your model and meet your performance requirements.

## 3.7 Refuelling



**Gasoline is an extremely flammable fuel** – keep clear of naked flames and fire – do not spill any fuel – no smoking.

Switch off the engine before refuelling.

Never refuel the machine while the engine is still hot – the fuel may spill over – **risk of fire!**

Open the fuel filler cap carefully so that any excess pressure is relieved gradually and fuel does not splash out.

The machine may only be refuelled in a well ventilated place. Clean the machine immediately if fuel is spilled. Do not spill fuel over your clothing – contaminated clothing must be changed immediately.

The machines can be equipped with the following filler caps as standard:

### Cliplock filler cap (bayonet-type)



Place the cliplock filler cap (bayonet-type) in position, turn as far as stop and fold the cliplock down.

This helps reduce the risk of unit vibrations causing an incorrectly tightened filler cap to loosen or come off and spill quantities of fuel.



Look out for leaks! Never start the engine if fuel has been spilled or is leaking – **Fatal burns may result!**

### 3.8 Before Starting Work

Check that your saw is properly assembled and in good condition – refer to appropriate chapters in the instruction manual.

- Check the fuel system for leaks, paying special attention to visible parts such as the tank cap, hose connections and the manual fuel pump (on machines so equipped). If there are any leaks or damage, do not start the engine – **risk of fire**. Have your saw repaired by a servicing dealer before using it again.
- Check operation of chain brake, front hand guard
- Correctly mounted guide bar
- Correctly tensioned chain
- The trigger and trigger lockout must move freely and spring back to the idle position when they are released.
- Master Control lever must move easily to **STOP, 0** or  $\odot$
- Check that the spark plug boot is secure – a loose boot may cause arcing that could ignite combustible fumes **and cause a fire**.
- Never attempt to modify the controls or safety devices in any way.
- Keep the handles dry and clean – free from oil and dirt – for safe control of the saw.
- Make sure there is sufficient fuel and chain oil in the tanks.

**To reduce the risk of personal injury**, do not operate your saw if it is damaged or not properly assembled.

### 3.9 Starting the chain saw

Always work on a level surface. Ensure a firm and secure footing. Hold the machine securely – the chain must not touch any objects or the floor – danger of injury due to the rotating saw chain.

Your chain saw is a one-person saw. Do not allow other persons to be in the working area – not even while starting.

Do not start the chain saw if the chain is in a cut.


Move at least 3 meters away from the place where the machine was refuelled and never start the motor in enclosed spaces.

Lock the chain with the chain brake before starting – **risk of injury** due to rotating chain!

Do not drop-start the engine – start as described in the Instruction Manual.

### 3.10 During operation

Ensure you always have a firm and safe footing. Take special care when the bark is wet – **danger of slipping!**

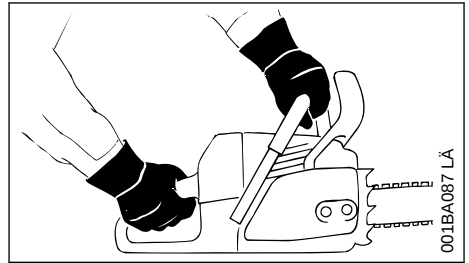

Always hold the chain saw **firmly with both hands**: Right hand on the rear handle – even if you are left-handed. To ensure reliable control, wrap your thumbs tightly around the handlebar and handle.

In the event of impending danger or in an emergency, switch off the engine immediately by moving the Master Control lever / stop switch to **STOP, 0** or  $\odot$ .

Never let the machine run unattended.

Exercise caution with slippery surfaces, water, snow, ice, steep slopes, uneven ground or green wood that has just been stripped of its bark – **danger of slipping!**

Use caution with tree stumps, roots, ditches – **danger of stumbling!**

Do not work alone – keep within calling distance of others who are trained in emergency procedures and can provide help in an emergency. Helpers at the cutting site must also wear protective clothing (helmet!) and stand well clear of the branches being cut.

More care and attention than usual are required when wearing ear protection, as warning sounds (shouts, beeps, etc.) cannot be heard properly.

Take a break in good time to avoid tiredness or exhaustion – **risk of accidents!**

Dust (e. g., sawdust), fumes and smoke produced while using the machine may be hazardous to health. If dust is generated, wear a dust mask.

When the engine is running: Note that the saw chain continues to rotate for a short period after you let go of the throttle trigger – coasting effect.

**No smoking** when working with or near the chain saw - **risk of fire!** Combustible fuel vapour may escape from the fuel system.

Examine the saw chain periodically at short intervals and as soon as you note any tangible changes:

- Switch off the engine; wait until the saw chain is stationary
- Check condition and secure fitting
- Check sharpness

Never touch the saw chain when the engine is running. If the saw chain becomes jammed by an object, switch off the engine immediately before attempting to remove the object – **risk of injury!**

Always turn off the engine before leaving the machine unattended.

To change the saw chain, switch off the engine. **Risk of injury** from the motor starting unintentionally!

Keep easily combustible materials (e. g., wood chips, bark, dry grass, fuel) away from hot exhaust gases and hot mufflers – **risk of fire!** Mufflers with catalytic converters can become especially hot.

Never work without chain lubrication – monitor the oil level in the oil tank. Stop work immediately if the oil level in the oil tank is too low and top up with chain oil – see also "Topping up with chain oil" and "Check chain lubrication".

If the machine is subjected to unusually high loads for which it was not designed (e. g., heavy impact or a fall), always check that it is in good condition before continuing work – see also "Before starting work".

Check the fuel system for leaks and make sure the safety devices are working properly. Never continue using a machine that is not in perfect working order. In case of doubt, have the unit checked by your servicing dealer.

Check for correct idling, so that the saw chain stops moving when the throttle trigger is released. Check the idle setting regularly and correct when possible. Have the machine repaired by a STIHL servicing dealer if the saw chain still continues to move during idling.



The chain saw produces poisonous exhaust gases as soon as the engine starts. These gases may be colourless and odourless and may contain unburnt hydrocarbons and benzene. Never work with the machine indoors or in poorly ventilated areas, even if

your machine is equipped with a catalytic converter.

Ensure proper ventilation when working in trenches, hollows or other confined locations – **risk of fatal injury from breathing toxic fumes!**

If you feel sick, have a headache, vision problems (e. g., your field of vision gets smaller), hearing problems, dizziness or inability to concentrate, stop work immediately. Such symptoms may be caused by an excessively high concentration of exhaust emissions – **risk of accident!**

### 3.11 After finishing work

Switch off the motor, engage the chain brake and attach the chain scabbard.

### 3.12 Storage

When the machine is not in use, it should be stored in such a way that no-one is endangered. Secure the machine against unauthorised use.

Store the machine in a safe, dry room.

### 3.13 Vibrations

Prolonged use of the power tool may result in vibration-induced circulation problems in the hands (whitefinger disease).

No general recommendation can be given for the length of usage because it depends on several factors.

The period of usage is prolonged by:

- Hand protection (wearing warm gloves)
- Work breaks

The period of usage is shortened by:

- Any personal tendency to suffer from poor circulation (symptoms: frequently cold fingers, tingling sensations).
- Low outside temperatures.
- The force with which the handles are held (a tight grip restricts circulation).

Continual and regular users should monitor closely the condition of their hands and fingers. If any of the above symptoms appear (e.g. tingling sensation in fingers), seek medical advice.

### 3.14 Maintenance and repairs

Always switch off the engine before any repair, cleaning or maintenance work and any work on the chain. **Risk of injury** if the engine starts inadvertently!

Exception: adjustment of carburettor and idle speed.

The machine must be serviced regularly. Do not attempt any maintenance or repair work not described in the Instruction Manual. All other work should be carried out by a servicing dealer.

STIHL recommends that maintenance and repair work be carried out only by authorised STIHL dealers. STIHL dealers receive regular training and are supplied with technical information.

Use only high-quality spare parts. Otherwise, there may be a risk of accidents and damage to the machine. If you have any questions in this respect, consult a servicing dealer.

Do not modify the machine in any way – this may increase the risk of personal injury – **risk of accidents!**

To reduce the **risk of fire** due to ignition outside the cylinder, move the master control level to **STOP, 0** or **⊖** before turning the engine over on the starter when the spark plug boot is removed or the spark plug is unscrewed!

Do not service or store the machine near a naked flame – **risk of fire** due to the fuel.

Check fuel cap regularly for tightness.

Use only spark plugs that are in perfect condition and have been approved by STIHL – see "Specifications".

Check ignition lead (insulation in good condition, secure connection).

Check that the muffler is in perfect working condition.

Do not use the machine if the muffler is damaged or missing – **risk of fire, damage to hearing!**

Never touch a hot muffler – **risk of burns!**

The condition of the anti-vibration elements influences vibration behaviour – inspect anti-vibration elements periodically.

**Inspect chain catcher** – replace if damaged.

**Switch off the engine**

- To check the chain tension
- To retension the chain
- To replace the chain
- For remedying malfunctions

**Observe sharpening instructions** – for safe and proper handling, always keep the chain and guide bar in flawless condition. Keep the chain properly sharpened, tensioned and well lubricated.

Change chain, guide bar and chain sprocket in due time.

Regularly check that the clutch drum is in perfect working condition.

Always store fuel and chain lubricant only in the specified type of containers and ensure they are correctly labelled. Store in a dry, cool and secure place protected against light and sunlight.

In the event of a chain brake malfunction, switch off the machine immediately – **risk of injury!** Consult a servicing dealer – do not use the machine until the malfunction has been remedied, see "Chain brake".


## 4 Reactive Forces

The most common reactive forces that occur during cutting are: kickback, pushback and pull-in.

### 4.1 Dangers of kickback




**Kickback can result in serious or fatal injury.**

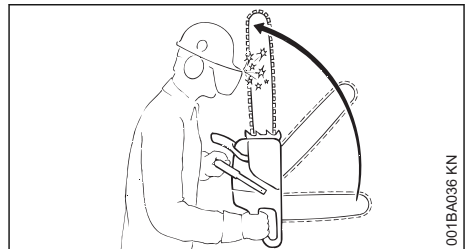

(Kickback) occurs when the saw is suddenly thrown up and back in an uncontrolled arc towards the operator.

### 4.2 Kickback occurs if, e. g.,

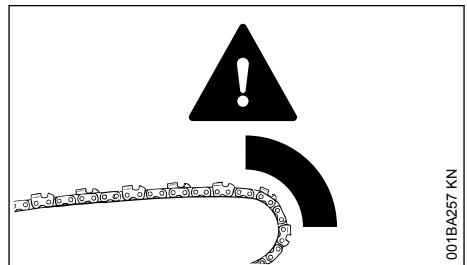

- when the upper quadrant of the bar nose unintentionally contacts wood or another solid object, e.g. when another limb is touched accidentally during limbing.

- when the chain at the nose of the guide bar is pinched in the cut.


### 4.3 Quickstop chain brake:

This device reduces the risk of injury in certain situations – it cannot prevent kickback. When activated, the chain brake stops the saw chain within a fraction of a second – see the section "Saw chain" in this Instruction Manual.

### 4.4 To reduce the risk of kickback

- Work cautiously and avoid situations which could cause kickback.
- Hold the saw firmly with both hands and maintain a secure grip.
- always cut at full throttle.
- Be aware of the location of the guide bar nose at all times.
- do not cut with the bar nose.
- Take special care with small, tough limbs, they may catch the chain.
- never cut several limbs at once.
- do not overreach.
- never cut above shoulder height.
- Use extreme caution when re-entering a previous cut.
- Do not attempt plunge cuts if you are not experience in this cutting technique.
- be alert for shifting of the log or other forces that may cause the cut to close and pinch the chain.
- always cut with a correctly sharpened, properly tensioned chain – the depth gauge setting must not be too large.
- Use a low kickback chain and a narrow radius guide bar.


### 4.5 Pull-in (A)

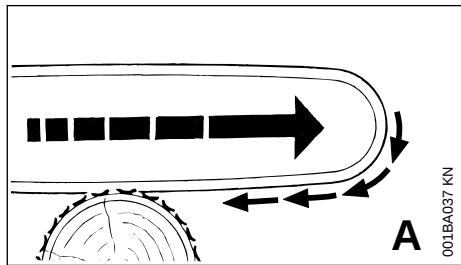

Pull-in occurs when the chain on the bottom of the bar is suddenly pinched, caught or encounters a foreign object in the wood. The reaction of the chain pulls the saw forward – **to reduce this**

**risk, always engage the spiked bumper securely in the tree or limb.**

### 4.6 Pushback (B)

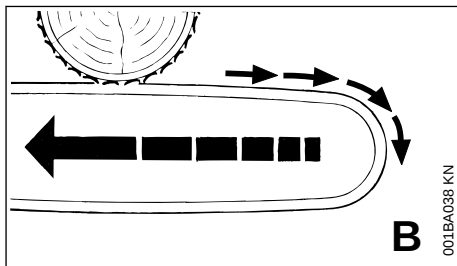

Pushback occurs when the chain on the top of the bar is suddenly pinched, caught or encounters a foreign object in the wood. The reaction of the chain drives the saw straight back toward the operator – **to avoid this risk:**

- Be alert to situations that may cause the top of the guide bar to be pinched
- Do not twist the guide bar in the cut

### 4.7 Exercise extreme caution

- with leaners
- with trees that have fallen unfavorably between other trees and are under strain
- when working in blowdown areas.

In these cases, do not use a chain saw – use a hoist, winch or drag line instead.

Pull out exposed and cleared logs. Select clear area for cutting.

**Deadwood** (dry, decayed or rotted wood) represents a considerable risk that is difficult to assess. Identifying the extent of the dangers is complicated, if not impossible. Use aids such as a cable winch or tractor in such cases.

**When felling in the vicinity of roads, railways, power lines, etc.,** take extra precautions. If necessary, inform the police, utility company or railway authority.

## 5 Working Techniques

Sawing and felling work, including all related work (plunge cutting, limbing, etc.) may only be carried out by persons who have been specially trained and instructed. Persons who are not experienced chain saw users should not carry out any such work – increased risk of accidents!

Country-specific legislation on felling technique must be complied with during felling work.


## 5.1 Sawing

Do not operate your saw with the starting throttle lock engaged. Engine speed cannot be controlled with the throttle trigger in this position.

Work calmly and carefully – in daylight conditions and only when visibility is good. Ensure you do not endanger others – stay alert at all times.

It is advisable for first-time users to practice cutting logs on a sawbuck – see "Sawing thin wood".

Use the shortest possible guide bar: The chain, guide bar and chain sprocket must match each other and your saw.

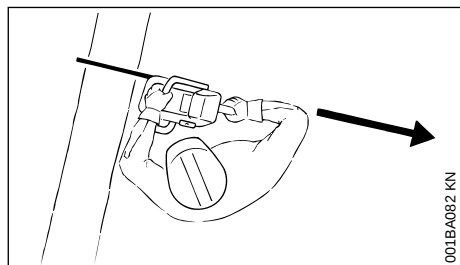

Position the saw so that your body is **clear of the cutting attachment**.

Always pull the saw out of the cut with the chain running.

Use your chain saw for cutting only. It is not designed for prying or shoveling away limbs, roots or other objects.

Do not underbuck freely hanging limbs.

Be careful when cutting scrub and young trees. Thin shoots can be scooped up by the chain saw and hurled towards the user.

Be careful when cutting splintered wood – **Risk of injury from ejected pieces of wood!**

Make sure your saw does not touch any foreign materials: Stones, nails, etc. may be flung off and damage the saw chain. The chain saw may kick back unexpectedly – **risk of accident!**

If a rotating saw chain hits a stone or another hard object, sparks may be generated which may ignite easily flammable materials under certain conditions. Also dried-out plants and brushwood are combustible, above all in hot and dry weather. If there is a risk of fire, do not use the chain saw in the vicinity of easily combustible materials, dry plants or scrub. It is mandatory

that you ask the responsible forestry office about the current fire hazard.



If on a slope, stand on the uphill side of the log. Watch out for rolling logs.

### When working at heights:

- Always use a lift bucket
- Never use the machine while standing on a ladder or in a tree
- Never work on an insecure support
- Never work above shoulder height
- Never use the machine with just one hand

Begin cutting with the saw at full throttle and engage the spiked bumper firmly in the wood, and then continue cutting.

Never work without the spiked bumper because the saw may pull you forwards and off balance. Always hold the spiked bumper securely against the tree or limb.

At the end of the cut, the chain saw is no longer supported by the cutting attachment in the cut. The chain saw's weight must be borne by the user – **risk of loss of control!**

### Sawing thin wood:



- Use a sturdy and stable support – sawhorse.
- Never hold the log with your leg or foot.
- never allow another person to hold the log or help in any other way.

### Limbing

- use a low kickback chain.
- Work with the saw supported wherever possible.
- do not stand on the log while limbing it.
- do not cut with the bar nose.
- watch for limbs which are under tension.
- never cut several limbs at once.

### Lying or standing logs under tension:

Always make the cuts in the correct order (first compression side (1), then tension side (2)), otherwise the cutting attachment may stick in the cut or kick back – **risk of injury!**

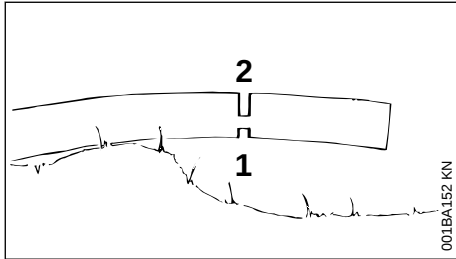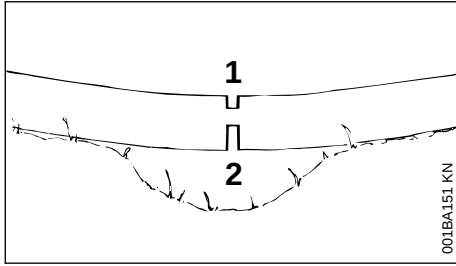


- Make relieving cut at the compression side (1)
- Make bucking cut at the tension side (2)

Be wary of **pushback** when making bucking cut from the bottom upwards (underbuck).

#### NOTICE

Do not cut a lying log at a point where it is touching the ground because the saw chain will otherwise be damaged.

#### Ripping:

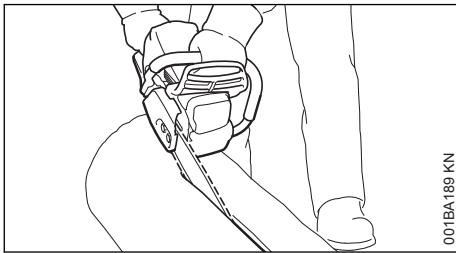


Sawing technique without use of the spiked bumper – risk of pull-in – position the guide bar at as shallow an angle as possible – be especially careful – increased **risk of kickback!**

## 5.2 Preparing for felling

Check that there are no other persons in the felling area – other than helpers.

Make sure no-one is endangered by the falling tree – the noise of your engine may drown any warning calls.

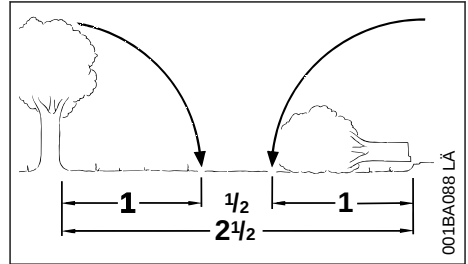


Maintain a distance of at least 2 1/2 tree lengths from the next felling site.

#### Determining direction of fall and escape path

Select gap in stand into which you want the tree to fall.

Pay special attention to the following points:

- The natural inclination of the tree
- Unusually heavy limb structure, asymmetrical growth, damage to tree
- The wind direction and speed – do not fell in high winds
- Direction of slope
- Neighboring trees
- Snow load
- Take the general condition of the tree into account – be especially careful with trunk damage or deadwood (brittle, rotten or dead wood)

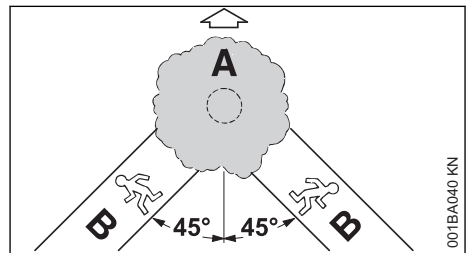

#### A Direction of fall


#### B Escape path (escape routes)

- Establish escape paths for each worker – approx. 45° diagonally opposite to the direction of fall
- Clear escape paths, eliminate obstacles
- Put down tools and equipment at a safe distance – but not on the escape paths

- When felling, stand only to the side of the falling trunk and only move back laterally onto the escape path
- Plan escape paths on slopes parallel to the slope
- When walking away along the escape path, watch out for falling limbs and watch the top of the tree.

### Preparing work area at base of tree


- First clear the tree base and work area from interfering limbs and brush to provide a secure footing.
- Carefully clear the base of the trunk (e.g., with an axe) – sand, stones and other foreign objects will blunt the saw chain

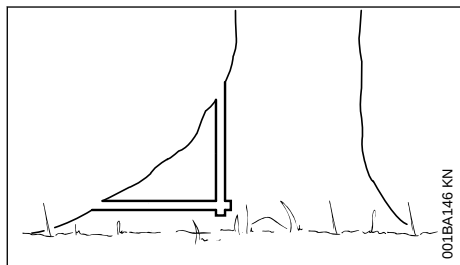

- Remove largest buttresses: first the largest buttress – saw first vertically, then horizontally – only if the tree is in sound condition

## 5.3 Felling notch

### Preparing the felling notch

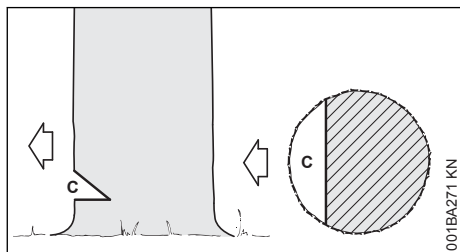


The felling notch (C) determines the direction of fall.

Important:

- Make a felling notch at right angle to direction of fall
- Saw as close to the ground as possible
- Cut to a depth of approx. 1/5 to 1/3 of the diameter of the trunk

### Determine direction of fall with gunning sight on cover and fan housing

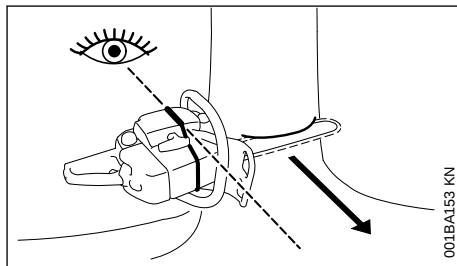

Your chainsaw has a gunning sight on the cover and fan housing. Use this gunning sight.


### Making the felling notch

When making a felling notch, align the chainsaw so that the notch lies at a right angle to the direction of fall.

During the procedure, various sequences are permitted for making a felling notch with a bottom (horizontal) cut and top (angled) cut – comply with national legislation regarding felling technique.


- ▶ Make a bottom (horizontal) cut
- ▶ Make the top (angled) cut approx. 45° - 60° to the bottom cut

### Checking the direction of fall

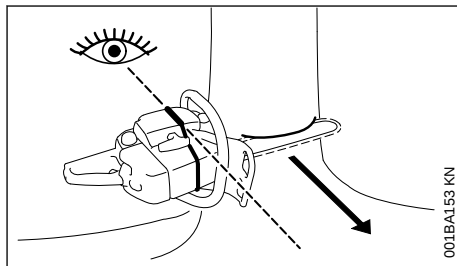

- ▶ Insert the chainsaw with guide bar in the bottom of the felling notch. The gunning sight must point in the planned direction of fall – if necessary, correct direction of fall by re-cutting the felling notch.

## 5.4 Sapwood cuts

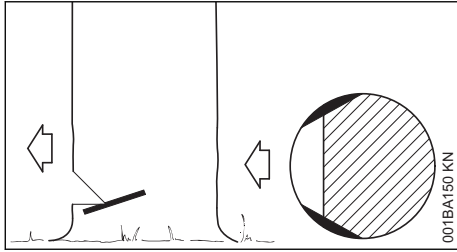


Sapwood cuts in long-fibered softwood help prevent sapwood splintering when the tree falls. Make cuts at both sides of the trunk at same height as bottom of felling notch to a depth of about 1/10 of trunk diameter. On large diameter trees, cut to no more than width of guide bar.

Do not make sapwood cuts if wood is diseased.

## 5.5 Basic information on felling cut

### Basic dimensions

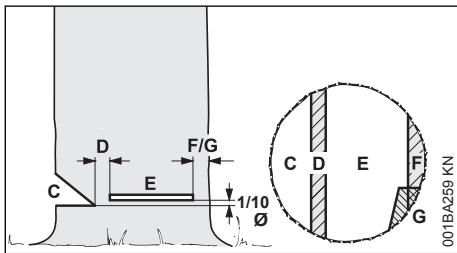

The **felling notch (C)** determines the direction of fall.

The **hinge (D)** functions like a real hinge to guide the tree to the ground.

- Width of hinge: approx. 1/10 of the trunk diameter
- Never saw through the hinge while felling – otherwise the tree will fall in a direction other than the one planned – **risk of accident!**
- With rotten trunks, leave a wider hinge

The tree is felled with the **felling cut (E)**.

- Cut horizontally
- 1/10 (at least 3 cm) of tree diameter higher than bottom of felling notch (C).


The **holding strap (F)** or **stabilizing strap (G)** supports the tree and helps prevent it from falling prematurely.

- Width of strip: approx. 1/10 to 1/5 of the trunk diameter
- Do not cut into the strip during the felling cut

- With rotten trunks, leave a wider strip


### Plunge cutting

- For relieving cuts during shortening
- For wood carving

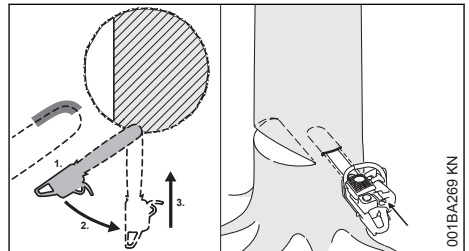

- Use a low kickback saw chain and proceed with special care

1. Begin cut by applying the lower portion of the guide bar nose – do not use upper portion because of **risk of kickback**. Cut at full strength until the depth of the kerf is twice the width of the guide bar
2. Swing the machine slowly into the plunge cutting position – **risk of kickback and pushback!**
3. Make the plunge cut very carefully. **Risk of pushback.**

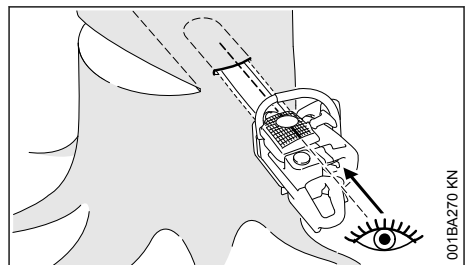

Where possible, use a plunge blade. The plunge blade and the upper/lower side of the guide bar are parallel.

During plunge cutting, the plunge bar helps to keep the hinge parallel in form, i.e. the same thickness at all points. To do this, guide the plunge bar parallel to the sink chord.

### Felling wedges

Insert the felling wedge as soon as possible, i.e. as soon as no obstruction of saw control is to be expected. Position the felling wedge in the felling cut and drive in with suitable tools.

Only use aluminum or plastic wedges – do not use steel wedges. Steel wedges can seriously

damage the saw chain and cause dangerous kickback.


Select suitable felling wedges dependent on the trunk diameter and the width of the kerf (analogue to felling cut (E)).

Contact the STIHL dealer for the selection of the felling wedge (suitable length, width and height).

## 5.6 Selecting the appropriate felling cut

The selection of the appropriate felling cut is dependent on the same tree characteristics that must be noted when determining the direction of fall and the escape paths.

There are various different features of these characteristics. This User Manual will only describe the two most commonly occurring variants:

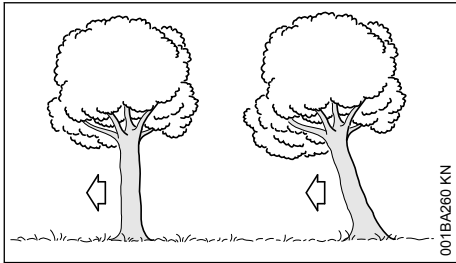


|        |                                                          |
|--------|----------------------------------------------------------|
| left:  | Normal tree – vertically upright tree with uniform crown |
| right: | Leaner tree - crown pointing in direction of fall        |

## 5.7 Felling cut with stabilizing strap (normal tree)


### A) Thin trunks

Implement this felling cut when the trunk diameter is smaller than the cutting length of the chainsaw.

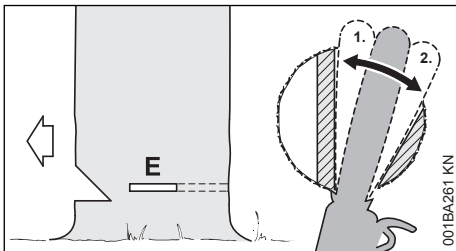

Shout a warning before starting the felling cut.

- Plunge cut the felling cut (E) – plunge the guide bar fully in
- Engage the spiked bumper behind the hinge and use this as the rotation point – reposition the chainsaw as little as possible
- Make the felling cut up to the hinge (1)
  - Do not cut into the hinge
- Make the felling cut up to the stabilizing strap (2)
  - Do not cut into the stabilizing strap

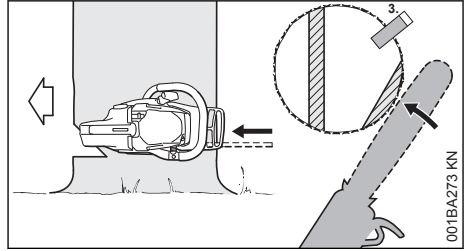


- Set the felling wedge (3)

Shout a second warning immediately before the tree falls.

- Cut through the stabilizing strap, horizontal level with the felling cut, with arms fully extended

### B) Thick trunks

Implement this felling cut when the trunk diameter is greater than the cutting length of the machine.

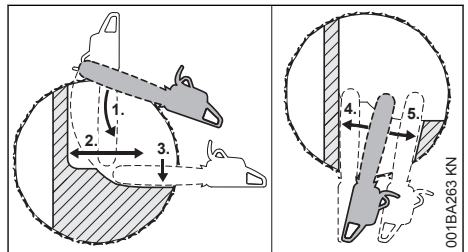


Shout a warning before starting the felling cut.

- Engage the spiked bumper at the height of the felling cut and use this as the rotation point – reposition the chainsaw as little as possible
- Tip of the guide bar must penetrate the wood before the hinge (1) – guide the chainsaw absolutely horizontally and swivel as widely as possible
- Make the felling cut up to the hinge (2)
  - Do not cut into the hinge
- Make the felling cut up to the stabilizing strap (3)
  - Do not cut into the stabilizing strap

The felling cut must be continued on the opposite side of the trunk.

Ensure that the second cut is at the same level as the first cut.

- ▶ Plunge cut the felling cut
- ▶ Make the felling cut up to the hinge (4)
  - Do not cut into the hinge
- ▶ Make the felling cut up to the stabilizing strap (5)
  - Do not cut into the stabilizing strap

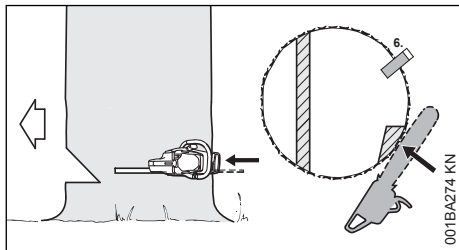

- ▶ Set the felling wedge (6)


Shout a second warning immediately before the tree falls.

- ▶ Cut through the stabilizing strap, horizontal level with the felling cut, with arms fully extended


## 5.8 Felling Cut with Holding Strap (Leaner)

### A) Thin trunks

Implement this felling cut when the trunk diameter is smaller than the cutting length of the chainsaw.

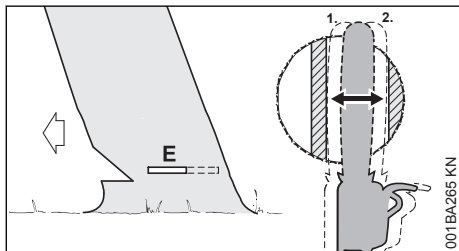


- ▶ Plunge cut the guide bar into the trunk until it exits on the other side
- ▶ Make the felling cut (E) towards the hinge (1)
  - Cut horizontally
  - Do not cut into the hinge
- ▶ Make the felling cut towards the holding strap (2)
  - Cut horizontally
  - Do not cut into the holding strap.

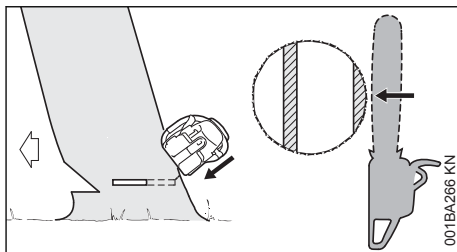

Shout a second warning immediately before the tree falls.

- ▶ With outstretched arms, cut through the holding strap at a downward angle from outside.

### B) Thick trunks

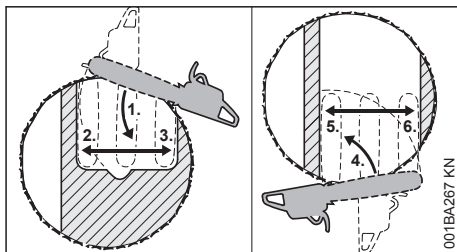

Perform this felling cut when the tree diameter is greater than the cutting length of the chainsaw.


- ▶ Engage the spiked bumper behind the holding strap and use it as a pivot – avoid repositioning the chainsaw more than necessary.
- ▶ The guide bar nose enters the wood (1) before it reaches the hinge – hold the chainsaw horizontally and swing it as far as possible.
  - Do not cut into the holding strap or hinge.
- ▶ Make the felling cut up to the hinge (2)
  - Do not cut into the hinge
- ▶ Make the felling cut up to the holding strap (3)
  - Do not cut into the holding strap.

The felling cut must be continued on the opposite side of the trunk.

Ensure that the second cut is at the same level as the first cut.

- ▶ Engage the spiked bumper behind the hinge and use this as the rotation point – reposition the chainsaw as little as possible
- ▶ Tip of the guide bar must penetrate the wood before the holding strap (4) – guide the chainsaw absolutely horizontally and swivel as widely as possible
- ▶ Make the felling cut up to the hinge (5)
  - Do not cut into the hinge
- ▶ Make the felling cut up to the holding strap (6)

- Do not cut into the holding strap.

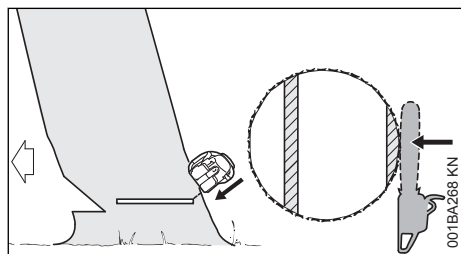


Shout a second warning immediately before the tree falls.

- With outstretched arms, cut through the holding strap at a downward angle from outside.

## 6 Cutting Attachment

A cutting attachment consists of the saw chain, guide bar and chain sprocket.


The cutting attachment that comes standard is designed to exactly match the chain saw.

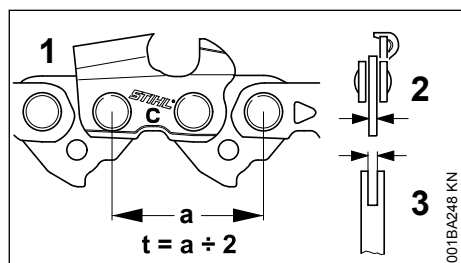

- The pitch (t) of the saw chain (1), chain sprocket and the nose sprocket of the Rollo-matic guide bar must match.
- The drive link gauge (2) of the saw chain (1) must match the groove width of the guide bar (3).

If non-matching components are used, the cutting attachment may be damaged beyond repair after a short period of operation.

### 6.1 Chain Scabbard

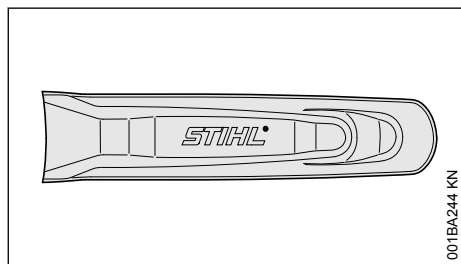

Your saw comes standard with a chain scabbard that matches the cutting attachment.


If guide bars of different lengths are mounted to the saw, always use a chain scabbard of the correct length which covers the complete guide bar.

The length of the matching guide bars is marked on the side of the chain scabbard.

Guide bars longer than 90 cm require one scabbard extension. Guide bars longer than 120 cm require two scabbard extensions.

Depending on the model, the scabbard extension either comes standard with the saw or is available as a special accessory.


### 6.2 Fitting Chain Scabbard Extension

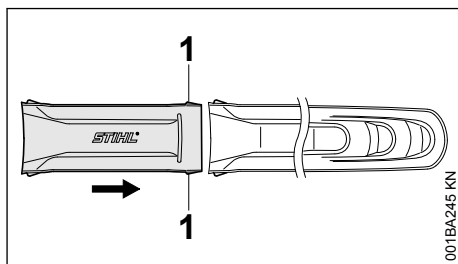


- Push the scabbard extension and chain scabbard together – the lugs (1) must engage in the chain scabbard.

## 7 Mounting the Bar and Chain (side chain tensioner)

### 7.1 Removing the chain sprocket cover

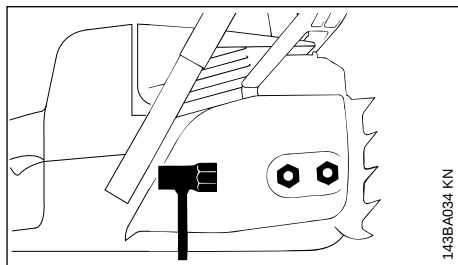


- Unscrew the nuts and take off the chain sprocket cover.

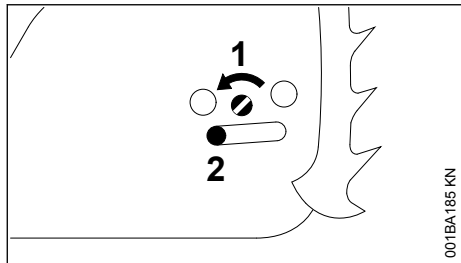


- Turn the screw (1) counterclockwise until the tensioner slide (2) butts against the left end of the housing slot.

## 7.2 Disengaging the chain brake.

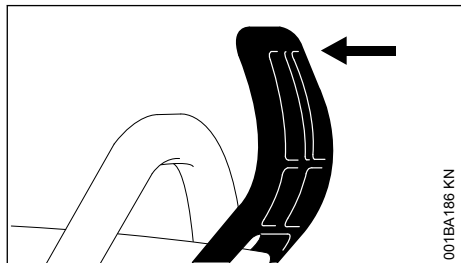

- Pull the hand guard towards the front handle until there is an audible click – the chain brake is disengaged.


## 7.3 Fitting the chain

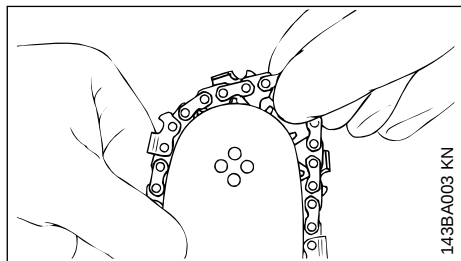

### WARNING

Wear work gloves to protect your hands from the sharp cutters.


- Fit the chain – start at the bar nose.

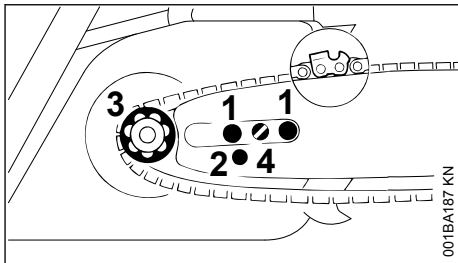

- Fit the guide bar over the studs (1) – the cutting edges on the top of the bar must point to the right.
- Engage the peg of the tensioner slide in the locating hole (2) – place the chain over sprocket (3) at the same time.
- Turn the tensioning screw (4) clockwise until there is very little chain sag on the underside of the bar – and the drive link tangs are engaged in the bar groove.
- Refit the sprocket cover and screw on the nuts only fingertight.
- Go to chapter on "Tensioning the Saw Chain"


## 8 Mounting the Bar and Chain (quick chain tensioner)

### 8.1 Removing the chain sprocket cover

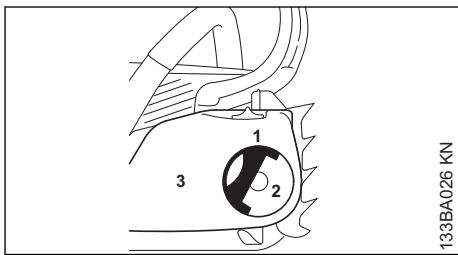


- Pull the hinged handle (1) out (until it engages)
- Turn the wingnut (2) counterclockwise until it hangs loose
- In the sprocket cover (3).
- Remove the chain sprocket cover


## 8.2 Fitting the tensioning gear

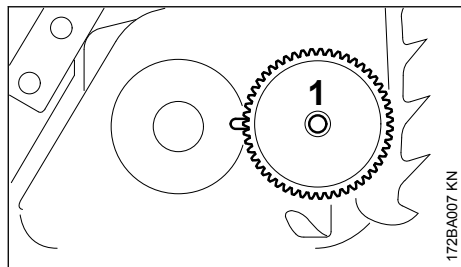


- Remove the tensioning gear (1) and turn it over.

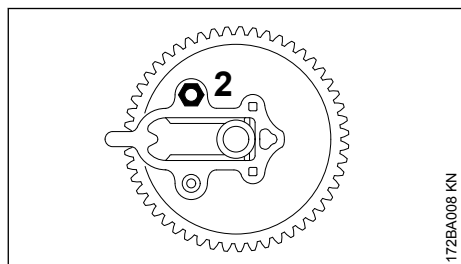

- Unscrew the nut (2).

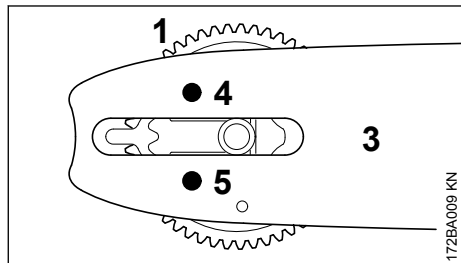


- Position the tensioning gear (1) against the guide bar (3) so that the stud (4) projects through the upper hole and the short guide peg (5) locates in the lower hole.

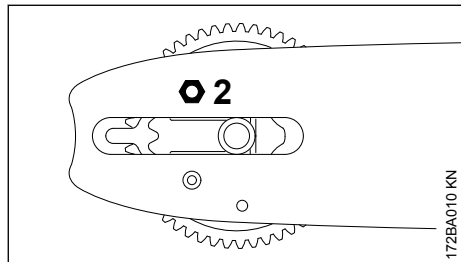


- Screw the nut (2) on to the stud as far as stop by hand.

## 8.3 Disengage the chain brake.

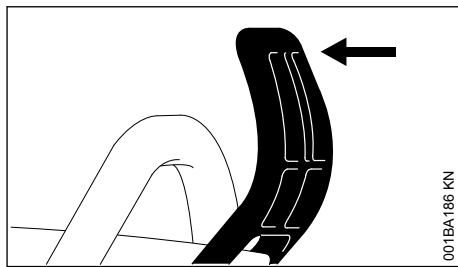

- Pull the hand guard towards the front handle until there is an audible click – the chain brake is disengaged.


## 8.4 Fitting the saw chain

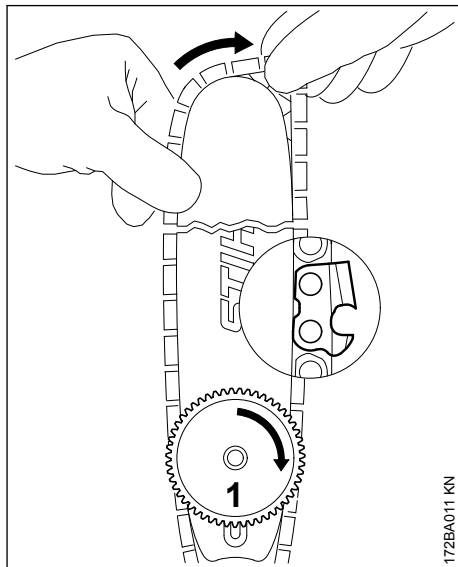


### WARNING

Wear work gloves to protect your hands from the sharp cutters.


- Fit the chain – start at the bar nose. Pay attention to the position of the tensioning gear and the cutting edges.
- Turn the tensioning gear (1) clockwise as far as stop.
- Turn the guide bar so that the tensioning gear is facing you.

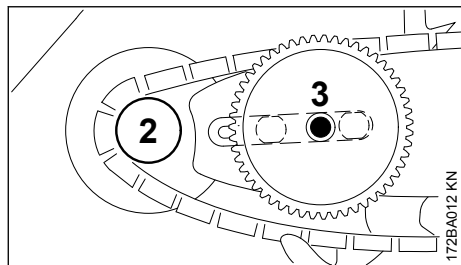


- ▶ Fit the chain over the sprocket (2).
- ▶ Fit guide bar in position – the collar screw (3) engages the hole in the tensioning gear. The heads of the two short collar screws locate in the guide bar slot.

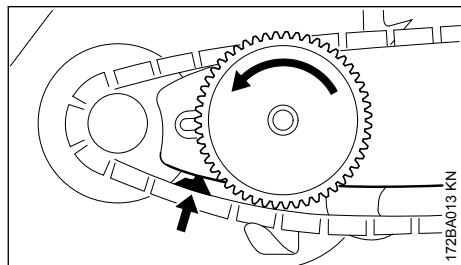

- ▶ Guide the drive link into the bar groove (see arrow) and turn the tensioning gear to the left as far as possible

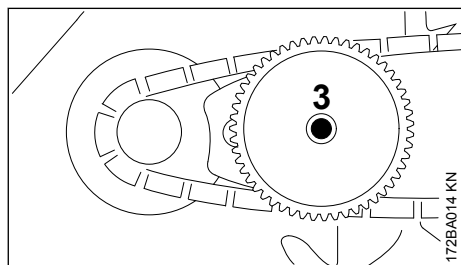


- ▶ Fit the chain sprocket cover so that the wing nut locates on the collar screw (3).

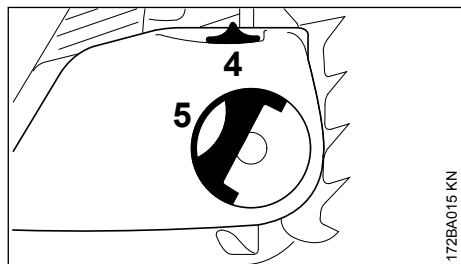

When fitting the chain sprocket cover, the teeth of the adjusting wheel and the tensioning gear must mesh; if necessary,

- ▶ Turn the adjusting wheel (4) a little until the chain sprocket cover can be slid completely against the engine housing
- ▶ Pull the hinged handle (5) out (until it engages in the upright position)
- ▶ Fit wing nut and tighten lightly
- ▶ Go to chapter on "Tensioning the Saw Chain"

## 9 Tensioning the Saw Chain (side chain tensioner)

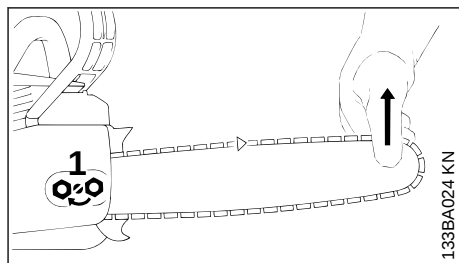


Retensioning during cutting work:

- ▶ Shut off the engine.
- ▶ Loosen the nuts.
- ▶ Hold the bar nose up.
- ▶ Use a screwdriver to turn the tensioning screw (1) clockwise until the chain fits snugly against the underside of the bar.
- ▶ While still holding the bar nose up, tighten down the nuts firmly.
- ▶ Go to "Checking Chain Tension".

A new chain has to be retensioned more often than one that has been in use for some time.

- ▶ Check chain tension frequently – see chapter on "Operating Instructions".

## 10 Tensioning the Saw Chain (quick chain tensioner)

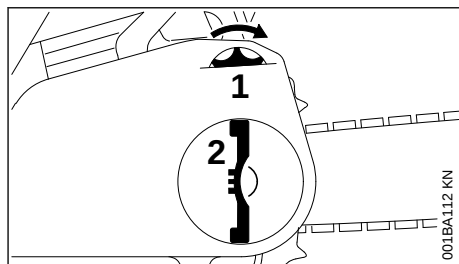


Retensioning during cutting work:

- ▶ Shut off the engine.
- ▶ Pull out the hinged clip and loosen the wing-nut.
- ▶ Turn the adjusting wheel (1) clockwise as far as stop.
- ▶ Tighten down the wingnut (2) firmly by hand.
- ▶ Fold down the hinged clip.
- ▶ Go to "Checking Chain Tension"

A new chain has to be retensioned more often than one that has been in use for some time.

- ▶ Check chain tension frequently – see chapter on "Operating Instructions".

## 11 Checking Chain Tension

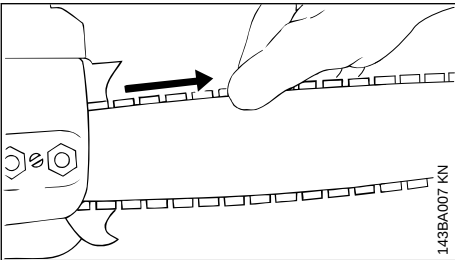

- ▶ Shut off the engine.
- ▶ Wear work gloves to protect your hands.
- ▶ The chain must fit snugly against the underside of the bar and it must still be possible to pull the chain along the bar by hand.
- ▶ If necessary, retension the chain.

A new chain has to be retensioned more often than one that has been in use for some time.

- ▶ Check chain tension frequently – see chapter on "Operating Instructions".

## 12 Fuel

The engine requires a mixture of gasoline and engine oil.

**WARNING**

Avoid direct skin contact with fuel and breathing in of gasoline fumes.

### 12.1 STIHL MotoMix

STIHL recommends using STIHL MotoMix. This pre-blended fuel is free of benzene and lead, is distinguished by a high octane rating, and always provides the proper mixing ratio.

STIHL MotoMix uses STIHL HP Ultra two-stroke engine oil for optimum engine life.

MotoMix is not available in all markets.

## 12.2 Mixing fuel

**NOTICE**

Unsuitable fuels or a mixing ratio that deviates from the specification can lead to severe engine damage. The engine, seals, fuel lines and fuel tank may be damaged if low-quality gasoline or engine oil is used.

### 12.2.1 Gasoline

Use only **high-quality gasoline** with an octane rating of at least 90 ROC – leaded or unleaded.

Gasoline with an alcohol component exceeding 10% can cause impaired engine performance in engines with manually adjustable carburetors and thus should not be used in these engines.

Engines with M-Tronic deliver full engine performance using gasoline with an alcohol component of up to 27% (E27).

### 12.2.2 Engine oil

If you mix the fuel yourself, use only STIHL two-stroke engine oil or another high-performance engine oil classified as JASO FB, JASO FC, JASO FD, ISO-L-EGB, ISO-L-EGC or ISO-L-EGD.

STIHL specifies STIHL HP Ultra two-stroke engine oil or an equivalent high-performance engine oil in order to maintain emission limits over the machine's service life.

### 12.2.3 Mixing ratio

with STIHL two-stroke engine oil 1:50; 1:50 = 1 part oil + 50 parts gasoline

### 12.2.4 Examples

| Quantity of gaso-<br>line | STIHL two-stroke<br>engine oil 1:50 |       |
|---------------------------|-------------------------------------|-------|
| Liters                    | Liters                              | (ml)  |
| 1                         | 0.02                                | (20)  |
| 5                         | 0.10                                | (100) |
| 10                        | 0.20                                | (200) |
| 15                        | 0.30                                | (300) |
| 20                        | 0.40                                | (400) |
| 25                        | 0.50                                | (500) |

- ▶ Pour oil into an approved safety fuel canister first, then add gasoline and mix thoroughly

## 12.3 Storing fuel mixture

Store in approved safety fuel canisters only in a dry, cool and secure place protected against light and sunlight.

**Fuel mixture deteriorates with age** – mix only as much as needed for a few weeks. Do not store fuel mixture for longer than 30 days. The fuel mixture can become unusable more quickly if exposed to light, sunlight or low or high temperatures.

STIHL MotoMix however can be stored for up to 5 years without any problems.

- Shake the canister containing the fuel mixture thoroughly before refueling

### WARNING

Pressure may have built up in the canister – open it carefully.


- The fuel tank and the canister in which fuel mixture is stored should be cleaned thoroughly from time to time

Residual fuel and the liquid used for cleaning must be disposed of in accordance with regulations and without harming the environment!

## 13 Fueling




### 13.1 Preparing the machine

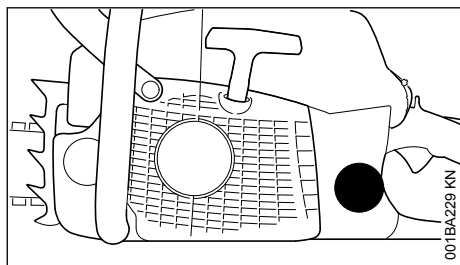


- Before fueling, clean the cap and the area around it to ensure that no dirt falls into the fuel tank
- Always position the machine so that the cap is facing upwards


### 13.2 Opening

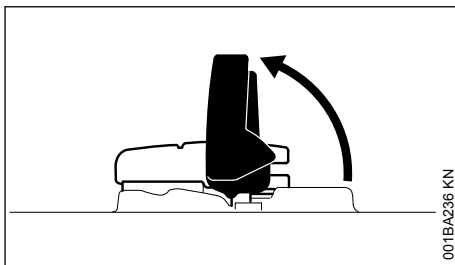


- Raise grip to vertical position.

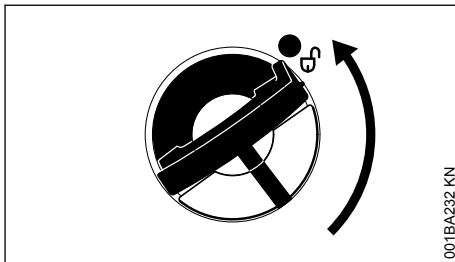

- Turn the cap counterclockwise (about a quarter turn).

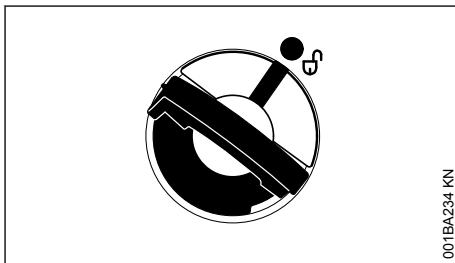

Marks on tank cap and fuel tank must line up.

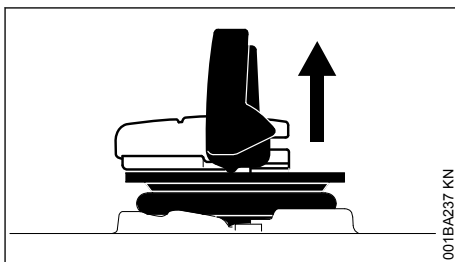

- Remove the tank cap.


### 13.3 Filling Up with Fuel

Take care not to spill fuel while fueling and do not overfill the tank.

STIHL recommends you use the STIHL filler nozzle for fuel (special accessory).


- Fill the fuel tank.

### 13.4 Closing

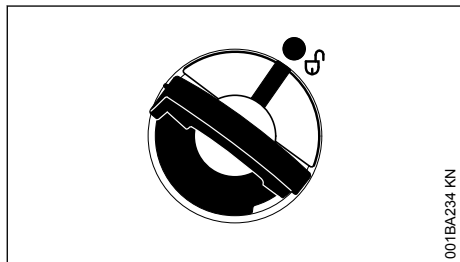


Grip must be vertical:


- Fit the cap – marks on tank cap and fuel tank must line up.
- Press the cap down as far as stop.

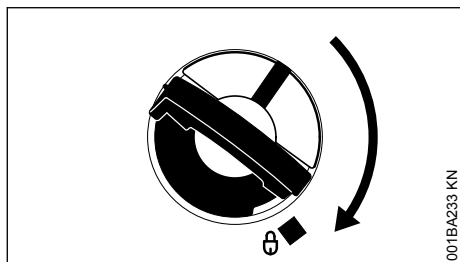


- While holding the cap depressed, turn it clockwise until it engages in position.

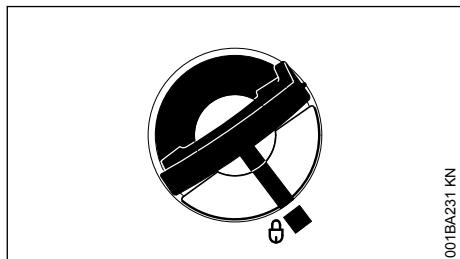

The marks on the tank cap and fuel tank are then in alignment.

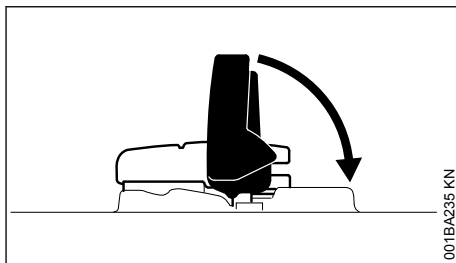

- Fold the grip down.

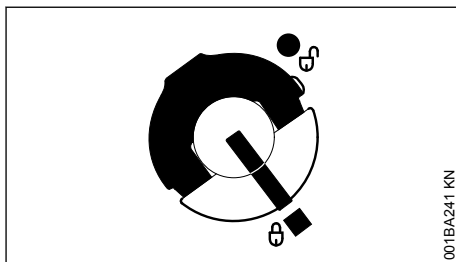


Tank cap is locked.


### 13.5 If the tank cap cannot be locked in the fuel tank opening

Bottom of cap is twisted in relation to top.

- Remove the cap from the fuel tank and check it from above.

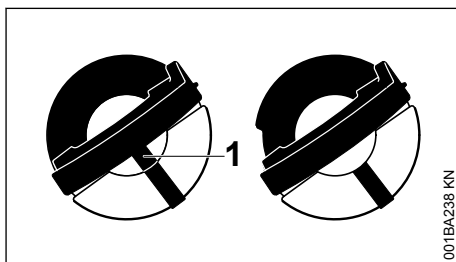

- |        |                                                                                                          |
|--------|----------------------------------------------------------------------------------------------------------|
| Left:  | Bottom of cap is twisted – inner mark (1) in line with outer mark.                                       |
| Right: | Bottom of cap in correct position – inner mark is under the grip. It is not in line with the outer mark. |

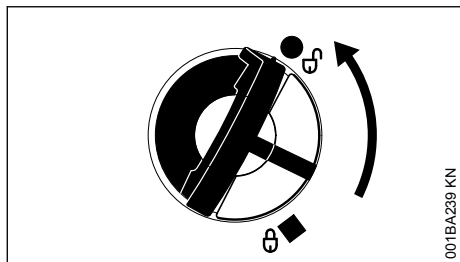

- Place the cap on the opening and rotate it counterclockwise until it engages the filler neck.
- Continue rotating the cap counterclockwise (about a quarter turn) – this causes the bottom of the cap to be turned to the correct position.
- Turn the cap clockwise and lock it in position – see section on "Closing".

## 14 Chain Lubricant

For automatic and reliable lubrication of the chain and guide bar – use only an environmentally compatible quality chain and bar lubricant. Rapidly biodegradable STIHL BioPlus is recommended.

### NOTICE

Biological chain oil must be resistant to aging (e.g. STIHL BioPlus), since it will otherwise quickly turn to resin. This results in hard deposits that are difficult to remove, especially in the area of the chain drive and chain. It may even cause the oil pump to seize.

The service life of the chain and guide bar depends on the quality of the lubricant. It is therefore essential to use only a specially formulated chain lubricant.



### WARNING

Do not use waste oil. Renewed contact with waste oil can cause skin cancer. Moreover, waste oil is environmentally harmful.


### NOTICE

Waste oil does not have the necessary lubricating properties and is unsuitable for chain lubrication.

## 15 Filling Chain Oil Tank



### 15.1 Preparations

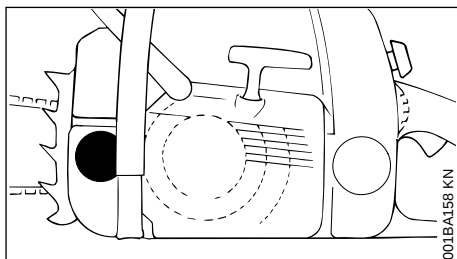

- Thoroughly clean the oil filler cap and the area around it to ensure that no dirt falls into the tank.
- Position the machine so that the filler cap is facing up.
- Open the filler cap.

### 15.2 Fill up with chain oil.

- Refill the chain oil tank every time you refuel.

Take care not to spill chain oil while refilling and do not overfill the tank.


STIHL recommends you use the STIHL filler nozzle for chain oil (special accessory).

- Close the filler cap.

There must still be a small amount of oil in the oil tank when the fuel tank is empty.

If the oil level in the tank does not go down, the reason may be a fault in the oil supply system: Check chain lubrication, clean the oilways, contact your dealer for assistance if necessary. STIHL recommends that you have servicing and repair work carried out exclusively by an authorized STIHL servicing dealer.

## 16 Checking Chain Lubrication

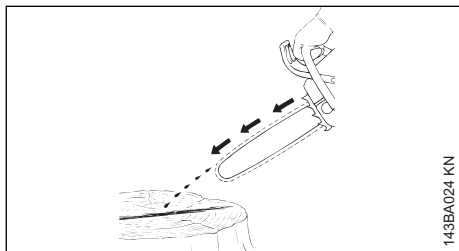

The saw chain must always spin off a small amount of oil.

### NOTICE

Never operate your machine without chain lubrication. If the saw chain runs dry, the cutting attachment may very quickly be damaged beyond repair. Before starting work, always check the chain lubrication and oil level in the tank.


Every new saw chain needs a run-in time of 2 to 3 minutes.

After the saw chain has run in, check the tension of the chain and correct if necessary – see "Checking the chain tension".

## 17 Chain Brake




### 17.1 Saw chain, lock

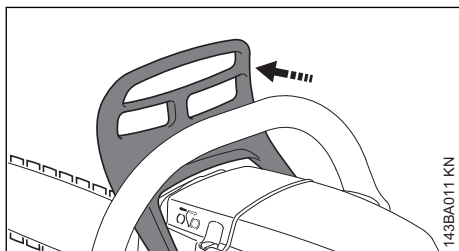

- in an emergency
- when starting
- when idling

Press the hand guard towards the nose of the guide bar with the left hand - or automatically due to kickback: Saw chain is blocked - and stops running.

### 17.2 Disengage the chain brake.

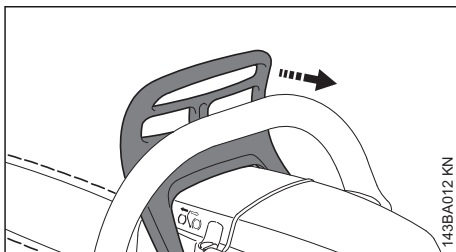

- Pull the hand guard back towards the front handle.

### NOTICE

The chain brake must be released before opening the throttle (except during functional check-out) and before sawing.

Running the engine at high revs with the chain brake engaged (chain locked) will quickly damage the engine and chain drive (clutch, chain brake).

The chain brake is also activated by the inertia of the front hand guard if the kickback force of the saw is high enough: The hand guard is accelerated toward the bar nose – even if your left hand is not behind the hand guard, e.g. during felling cut.

The chain brake will operate only if the hand guard has not been modified in any way.

### 17.3 Checking Operation of the Chain Brake

Before starting work: Run engine at idle speed, engage the chain brake (push hand guard towards bar nose) and open the throttle wide for (no more than 3 seconds) – the chain must not rotate. The hand guard must be free of dirt and easily moveable.

### 17.4 Chain Brake Maintenance

The chain brake is subject to (normal wear). It is necessary to have it serviced and maintained regularly by trained personnel. STIHL recommends that maintenance and repair work be carried out only by authorised STIHL dealers. The following intervals must be complied with:

|                 |                  |
|-----------------|------------------|
| Full-time use:  | quarterly        |
| Part-time use:  | every six months |
| occasional use: | annually         |


## 18 Winter Operation




### 18.1 Pre-heat carburetor

- Remove the shroud – see "Shroud"

#### 18.1.1 At temperatures below +10 °C

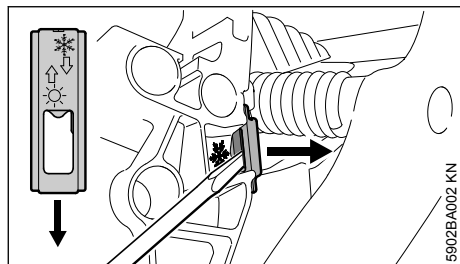

- Using the combination wrench or a screwdriver, pry the shutter out of the ☀ (summer operation) position

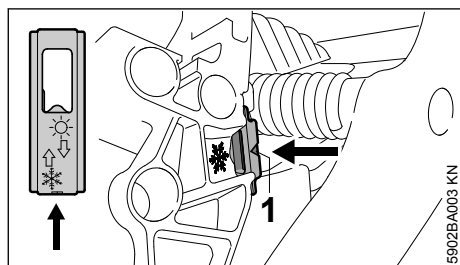

- Place the shutter with the opening in the direction of the chain saw (winter operation) – arrow points toward symbol \* – shutter must audibly snap into place

In the winter operation position, the tip of the arrow (1) is visible.

- Fit the shroud – see "Shroud"

Heated air is now drawn in from around the cylinder and circulates around the carburetor – this helps prevent carburetor icing.

#### 18.1.2 At temperatures above +20 °C

- Ensure that the shutter is set back to position ☀ (summer operation) without fail, otherwise the engine may malfunction due to overheating

### 18.2 At temperatures below -10 °C

In case of erratic idling behavior or poor acceleration

- Turn the low speed screw (L) 1/4 turn counter-clockwise

Whenever the low speed screw (L) has been adjusted, it is usually also necessary to adjust the idle speed screw (LA), see "Setting the carburetor".


- if the chain saw is extremely cold (frost formation) – after starting, bring the engine up to operating temperature at increased idle speed (disengage chain brake!)

### 18.3 Air filter system

- Retrofit new air filter if necessary – see "Air filter system"

## 19 Starting / Stopping the Engine

### 19.1 Positions of the master control lever

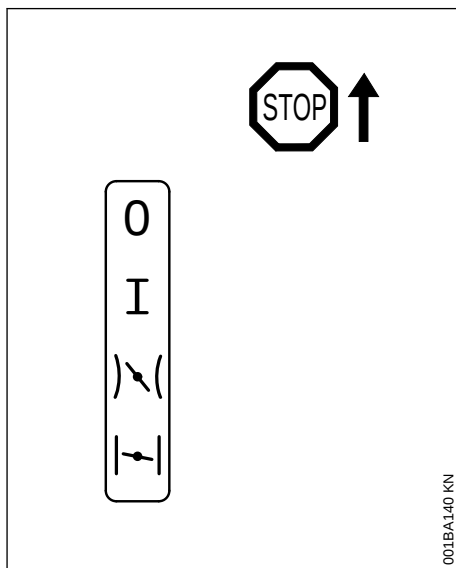

**Stop 0** – engine off – ignition is switched off

**Run I** – Engine running or can start

**Warm start** )\ – this position is for starting the warm engine – the master control lever returns to run when the throttle trigger is squeezed

**Cold start** | – this position is for starting the cold engine

## 19.2 Adjusting the master control lever

To adjust the master control lever from run **I** to cold start **I**, press and hold down the throttle trigger lockout and throttle trigger simultaneously – set master control lever.

To set the master control lever to warm start **I**, first set it to cold start **I**, then push the master control lever into the warm start **I** position.

Switching to the warm start **I** position is only possible from the cold start **I** position.

Simultaneously pressing the throttle trigger lockout and blipping the throttle trigger causes the master control lever to jump from the warm start **I** position to run **I**.

To switch off the engine, set the master control lever to Stop **0**.

### 19.2.1 Position cold start **I**

- If the engine is cold
- If the engine stalls during opening of throttle after starting
- If the fuel tank has run empty (engine stalled out)

### 19.2.2 Position warm start **I**

- If engine is warm (once the engine has been running for approx. one minute)
- When the engine has fired for the first time
- After ventilation of the combustion chamber, if the engine was flooded

## 19.3 Manual fuel pump


Press the manual fuel pump several times – even if the bulb is still full of fuel:

- When starting for the first time
- If the fuel tank has run empty (engine stalled out)

## 19.4 Holding the chain saw


There are two ways to hold the chain saw during starting.

### 19.4.1 On the ground

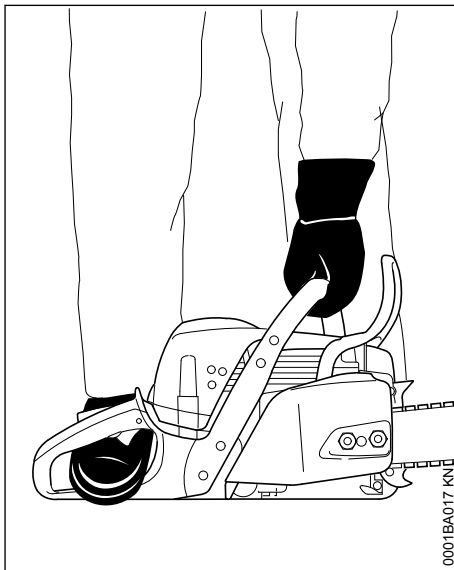

- Place the chain saw securely on the ground – assume a steady stance- the saw chain must not touch any objects and also must not touch the ground
- With the left hand on handlebar, press the chain saw firmly against the ground – thumb wrapped around the handlebar
- Place your right foot into the rear handle


### 19.4.2 Between the knees or thighs

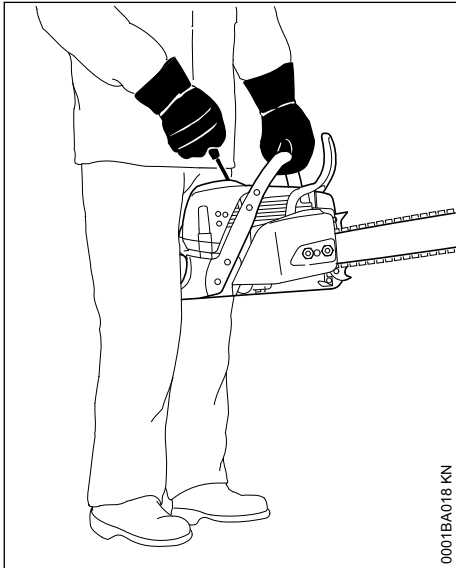

- Clamp the rear handle between the knees or thighs
- Grip the handlebar firmly with the left hand – thumb wrapped around the handlebar

## 19.5 Starting

### 19.5.1 Standard versions

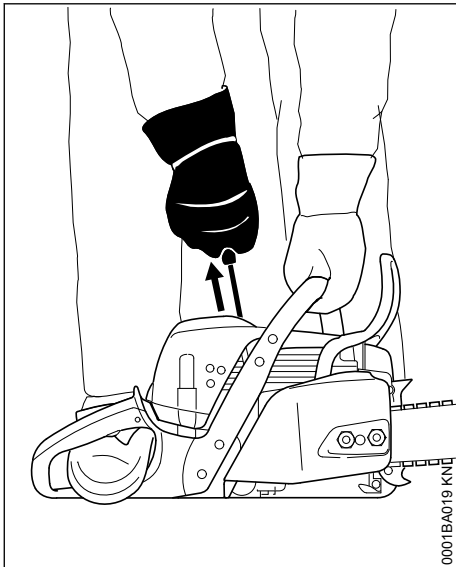

- With the right hand, pull the starter grip slowly until you feel it engage – and then give it a brisk strong pull – simultaneously press down on the handlebar – do not pull the starter rope out all the way – **risk of breakage!** Do not let the starter grip snap back – guide it vertically back into the housing so that the starter rope can rewind properly

With a new engine or after a long period of dis-use, with machines without an additional manual fuel pump, it may be necessary to pull the starter rope several times – to prime the fuel line.

### 19.5.2 Versions with ErgoStart



This machine is extremely simple and easy to start, even for children – **risk of accident!**

Make absolutely certain that children or other unauthorized persons cannot attempt to start the machine:

- never leave the machine unattended during work breaks
- secure storage after work

The ErgoStart stores the energy for starting the chain saw. For this reason, a few seconds may pass between the pulling of the starter rope and the starting of the engine.

For versions with ErgoStart, there are two ways to start the machine:

- with the right hand, pull the starter grip slowly and smoothly – **or** – with the right hand, pull the starter grip in several short pulls of the starter rope, pulling the rope out only a little bit each time
- during starting, press down on the handlebar – do not pull out the starter rope all the way – **risk of breakage!**
- Do not let the starter grip snap back – guide it vertically back into the housing so that the starter rope can rewind properly


## 19.6 Starting the chain saw



### WARNING


There must not be anyone within the swivel range of the chain saw.

### 19.6.1 Versions with manual fuel pump

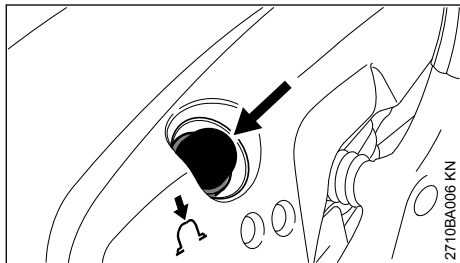

- Press the manual fuel pump bulb at least five times – even if it is still full of fuel

### 19.6.2 For all versions

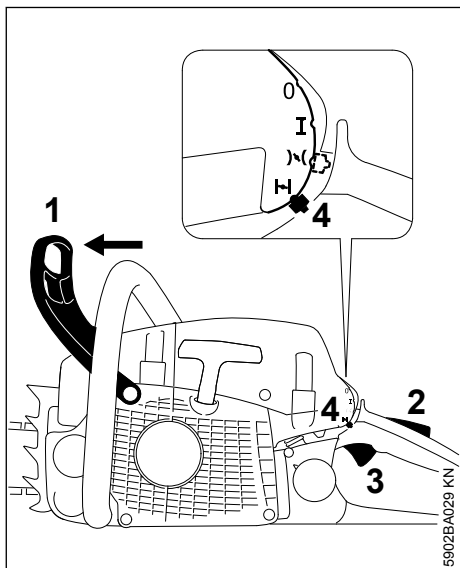

- Push the hand guard (1) forwards – the saw chain is blocked
- Simultaneously press the throttle trigger lockout (2) and throttle trigger (3) – set master control lever (4)


### Position cold start

- If engine is cold (even if the engine has stalled during opening of throttle after starting)

### Position warm start


- If engine is warm (once the engine has been running for approx. one minute)
- Hold and start the chain saw

## 19.7 When the engine has turned over for the first time

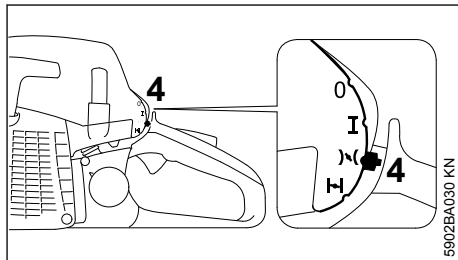


- Move the master control lever (4) to the position warm start
- Hold and start the chain saw

## 19.8 Once the engine is running

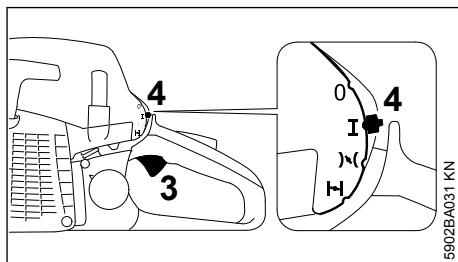

- Press the throttle trigger lockout and blip the throttle trigger (3); the master control lever (4) jumps to run I and the engine begins to idle

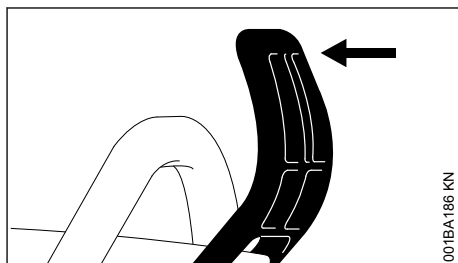

- Pull the hand guard toward the handlebar

The chain brake is released - the chain saw is ready for use.

**NOTICE**

Open the throttle only when the chain brake is off. Increased engine speeds with the chain brake on (saw chain is stationary) will quickly damage the clutch and chain brake.

**19.9 At very low temperatures**

- ▶ Let the engine warm up briefly with the throttle slightly open
- ▶ if necessary, configure for winter operation, see "Winter Operation"

**19.10 Switching off the engine**

- ▶ Move the master control lever to the stop position **0**

If the master control lever was moved from the position warm start **1** to stop **0** – afterwards simultaneously press the throttle trigger lockout and the throttle trigger.

**19.11 If the engine does not start**

The master control lever was not returned from the position cold start **1** to warm start **1** in time, the engine may be flooded.

- ▶ Move the master control lever to the stop position **0**
- ▶ Remove the spark plug - see "Spark plug"
- ▶ Dry the spark plug
- ▶ Crank the engine several times with the starter – to clear the combustion chamber
- ▶ Replace the spark plug – see "Spark plug"
- ▶ Set the master control lever to warm start **1** – even if the engine is cold
- ▶ Restart the engine

**20 Operating Instructions****20.1 During the break-in period**

A factory new machine should not be run at high revs (full throttle off load) for the first three tank fillings. This avoids unnecessarily high loads during the break-in period. As all moving parts have to bed in during the break-in period, the frictional resistances in the shortblock are greater during this period. The engine develops its maximum power after about 5 to 15 tank fillings.

**20.2 During work****NOTICE**

Do not make the mixture leaner to achieve an apparent increase in power – this could damage the engine – see "Adjusting the Carburetor".

**NOTICE**

Open the throttle only when the chain brake is off. Running the engine at high revs with the chain brake engaged (chain locked) will quickly damage the shortblock and chain drive (clutch, chain brake).

**20.2.1 Check chain tension frequently**

A new saw chain must be retensioned more frequently than one that has been in use already for an extended period.

**20.2.2 Chain cold**

Tension is correct when the chain fits snugly against the underside of the bar but can still be pulled along the bar by hand. Retension if necessary – see "Tensioning the Saw Chain".

**20.2.3 Chain at operating temperature**

The chain stretches and begins to sag. The drive links must not come out of the bar groove on the underside of the bar – the chain may otherwise jump off the bar. Retension the chain – see "Tensioning the Saw Chain".

**NOTICE**

The chain contracts as it cools down. If it is not slackened off, it can damage the crankshaft and bearings.

**20.2.4 After a long period of full-throttle operation**

After a long period of full-throttle operation, allow engine to run for a while at idle speed so that the heat in the engine can be dissipated by flow of cooling air. This protects engine-mounted components (ignition, carburetor) from thermal overload.

**20.3 After finishing work**

- ▶ Slacken off the chain if you have retensioned it at operating temperature during work.

**NOTICE**

Always slacken off the chain again after finishing work. The chain contracts as it cools down. If it is not slackened off, it can damage the crankshaft and bearings.


**20.3.1 Short-term storage**

Wait for engine to cool down. Keep the machine with a full tank of fuel in a dry place, well away from sources of ignition, until you need it again.

**20.3.2 Long-term storage**

See "Storing the machine"

## 21 Taking Care of the Guide Bar

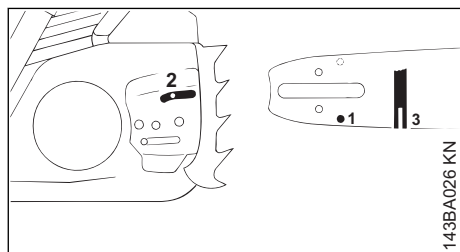

- Turn the guide bar over – every time you sharpen the chain and every time you replace the chain – this helps avoid one-sided wear, especially at the nose and underside of the bar.
- Regularly clean the oil inlet hole (1), the oil-way (2) and the bar groove (3)
- Measure the groove depth – with the scale on the filing gauge (special accessory) – in the area used most for cutting

| Chain type | Chain pitch  | Minimum groove depth |
|------------|--------------|----------------------|
| Picco      | 1/4" P       | 4.0 mm               |
| Rapid      | 1/4"         | 4.0 mm               |
| Picco      | 3/8" P       | 5.0 mm               |
| Rapid      | 3/8"; 0.325" | 6.0 mm               |
| Rapid      | 0.404"       | 7.0 mm               |

If groove depth is less than specified:


- Replace the guide bar

The drive link tangs will otherwise scrape along the bottom of the groove – the cutters and tie straps will not ride on the bar rails.

## 22 Shroud

**22.1 Remove shroud**

- Move the Master Control Lever to the stop position 0
- Push the front hand guard forwards – the saw chain is blocked

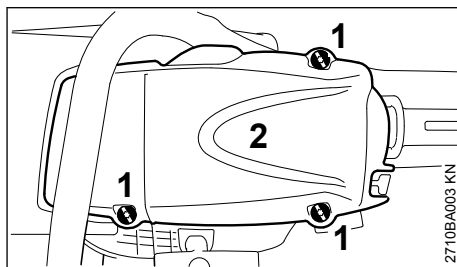


- Loosen screws (1)
- Remove the shroud (2)

**22.2 Refitting the shroud**


- Refit the shroud and tighten the screws

## 23 Air Filter System

The air filter system can be adapted to suit different operating conditions by installing different filters. Changing the filter is quick and simple.

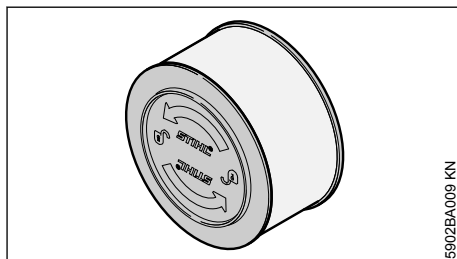**23.1 Fleece filter**

- Fleece filter for normal operating conditions and dry work areas.

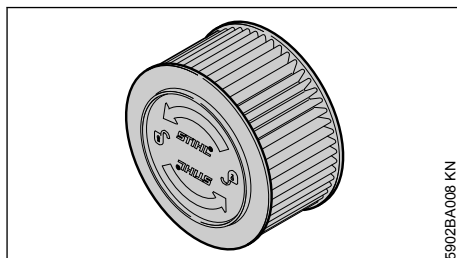**23.2 HD2 filter**

- ▶ HD2 filter (black filter frame, pleated filter material) for extreme wintry conditions (e.g. powder or drifting snow) or very dusty work areas.

## 24 Cleaning the Air Filter

### 24.1 If there is a noticeable loss of engine power.


- ▶ Remove the shroud – see "Shroud".

#### 24.1.1 Removing the air filter

- ▶ Clean away loose dirt from around the filter.

#### NOTICE

To avoid damaging the filter, do not use tools for removing and installing the air filter.

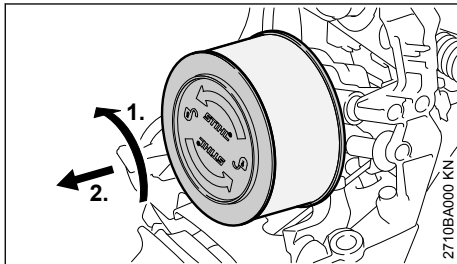

- ▶ Rotate the air filter a 1/4 turn counterclockwise and lift it away in the direction of the rear handle.
- ▶ Always replace a damaged filter.

#### 24.1.2 Cleaning the air filter (fleece filter)

- ▶ Knock out the filter or blow it clear with compressed air from the inside outwards.

If knocking it out or blowing it clear is not sufficient to remove stubborn dirt, or if the filter fabric is sticky, perform the following steps:

- ▶ Wash the filter in STIHL special cleaner (special accessory) or a clean, non-flammable solution (e.g. warm soapy water). Rinse the filter from the inside outwards under a jet of water – do not use a pressure washer.
- ▶ Dry the filter components – do not expose to high temperatures.

#### NOTICE

- Allow air filter to dry without using any external source of heat.
- Do not impregnate the filter with oil.
- ▶ Install the air filter.


### 24.1.3 Cleaning the air filter (HD2 filter)

- ▶ Knock out the filter.
- ▶ Spray outside of filter with STIHL special cleaner or soapy water.
- ▶ Rinse outside of filter under warm running water.

#### NOTICE

- Allow air filter to dry without using any external source of heat.
- Do not impregnate the filter with oil.
- ▶ Allow air filter to dry.
- ▶ Install the air filter.

### 24.1.4 Installing the air filter

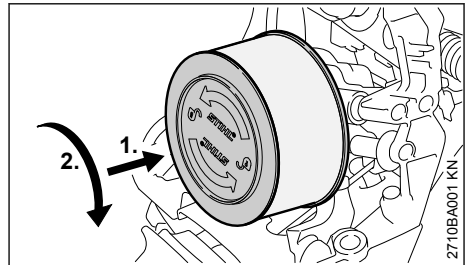

- ▶ Place the air filter in position.
- ▶ Push the air filter in the direction of the filter housing and turn it clockwise at the same time until it engages – the "STIHL" name must be horizontal.
- ▶ Install the shroud – see "Shroud".

## 25 Adjusting the Carburetor

### 25.1 Basic information


The carburetor comes from the factory with a standard setting.

The carburetor has been adjusted for optimum performance and fuel efficiency in all operating states.

### 25.2 Preparing the machine

- ▶ Switch off the engine
- ▶ Check the air filter – clean or replace it if necessary


## 25.3 Standard setting

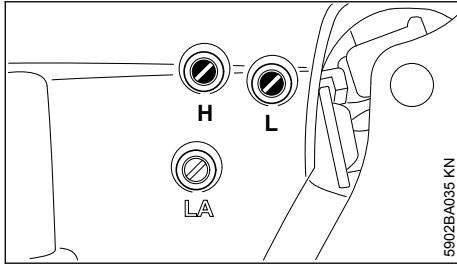

- ▶ Turn the high speed adjusting screw (H) counterclockwise as far as possible (max. 3/4 turn)
- ▶ Turn the low speed adjusting screw (L) clockwise as far as possible – then turn it 1/4 turn counterclockwise

## 25.4 Setting the idle speed

- ▶ Make standard setting
- ▶ Start engine and let it warm up

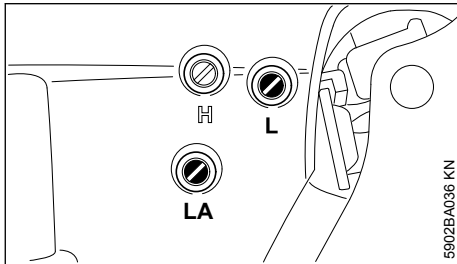

### 25.4.1 Engine stops when idling

- ▶ Turn the idle speed adjusting screw (LA) clockwise until the saw chain begins to rotate – then turn it back 1 turn

### 25.4.2 Saw chain rotates at idle speed

- ▶ Turn the idle speed screw (LA) counterclockwise until the saw chain stops turning – then turn another full turn in the same direction



### WARNING

If the saw chain continues to keep rotating in idle even after adjustment, have the chain saw checked by a servicing dealer.

### 25.4.3 Speed erratic when idling; poor acceleration (despite standard setting of low speed adjusting screw)

The idle setting is too lean.

- ▶ Carefully turn the low speed adjusting screw (L) counterclockwise until the engine

runs and accelerates smoothly – but no further than the stop

Whenever the low speed adjusting screw (L) has been adjusted, it is usually also necessary to readjust the idle speed adjusting screw (LA).

## 25.5 Correcting the carburetor setting for use at high altitudes

The setting may have to be marginally corrected if engine performance is unsatisfactory at high altitudes:

- ▶ Make standard setting
- ▶ Let the engine warm up
- ▶ Turn the high speed adjusting screw (H) slightly clockwise (leaner) – max. up to the stop

### NOTICE

After descending from a high altitude, restore the carburetor setting to the standard setting.


If you make the setting too lean it will increase the risk of engine damage through lack of lubrication and overheating.

## 26 Spark Plug


- ▶ If the engine is down on power, difficult to start or runs poorly at idle speed, first check the spark plug.
- ▶ Fit a new spark plug after about 100 operating hours – or sooner if the electrodes are badly eroded. Install only suppressed spark plugs of the type approved by STIHL – see "Specifications".

### 26.1 Removing the spark plug

- ▶ Remove the shroud – see "Shroud".
- ▶ Move the Master Control lever to the stop position (0).

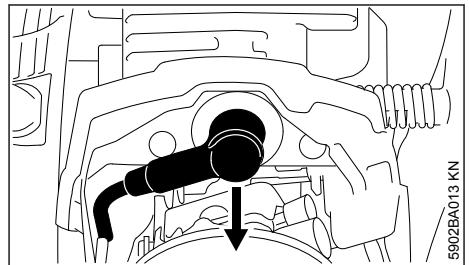


- ▶ Pull off the spark plug boot.
- ▶ Clean away loose dirt from around the spark plug.

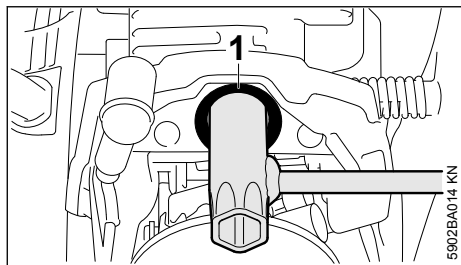

- ▶ Insert the combination wrench through the grommet (1) and turn it as necessary to engage the spark plug's hexagon.
- ▶ Push the combination fully home against the cylinder.
- ▶ Unscrew the spark plug.


## 26.2 Checking the Spark Plug

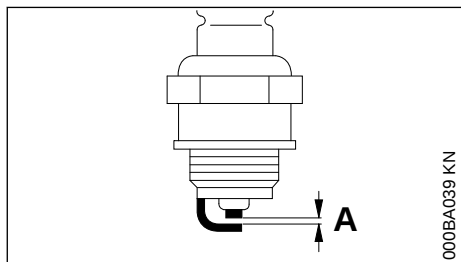

- ▶ Clean dirty spark plug.
- ▶ Check electrode gap (A) and readjust if necessary – see "Specifications".
- ▶ Rectify the problems which have caused fouling of the spark plug.

Possible causes are:

- Too much oil in fuel mix.
- Dirty air filter.
- Unfavorable running conditions.

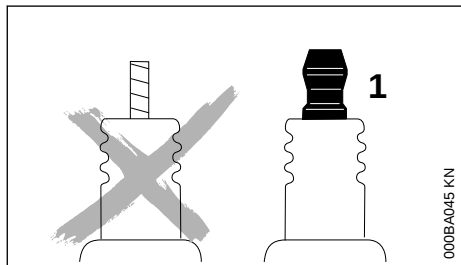


## WARNING

Arcing may occur if the adapter nut (1) is loose or missing. Working in an easily combustible or explosive atmosphere may cause a fire or an explosion. This can result in serious injuries or damage to property.

- ▶ Use resistor type spark plugs with a properly tightened adapter nut.

## 26.3 Installing the spark plug

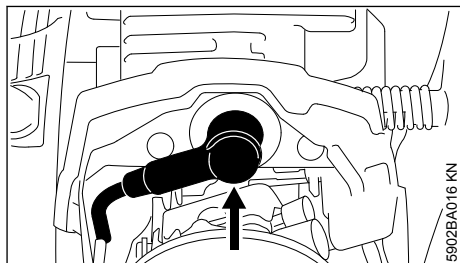

- ▶ Insert the spark plug through the grommet and screw it in by hand.
- ▶ Tighten down the spark plug, fit the boot and press it down firmly.
- ▶ Install the shroud – see "Shroud".

## 27 Storing the Machine


For periods of about 30 days or longer

- ▶ Drain and clean the fuel tank in a well-ventilated area.
- ▶ Dispose of fuel properly in accordance with local environmental requirements.
- ▶ If a manual fuel pump is fitted: Press the manual fuel pump at least 5 times.
- ▶ Start the engine and run it at idling speed until it stops.
- ▶ Remove saw chain and guide bar; clean and spray with protective oil
- ▶ Thoroughly clean the machine - pay special attention to the cylinder fins and air filter
- ▶ When using biological chain oil (e.g. STIHL BioPlus), fill the lubricant oil tank
- ▶ Store the machine in a dry and secure location. Keep out of the reach of children and other unauthorized persons

## 28 Checking and Replacing the Chain Sprocket

- ▶ Remove chain sprocket cover, saw chain and guide bar.
- ▶ Release chain brake – pull hand guard against the front handle


## 28.1 Fit new chain sprocket

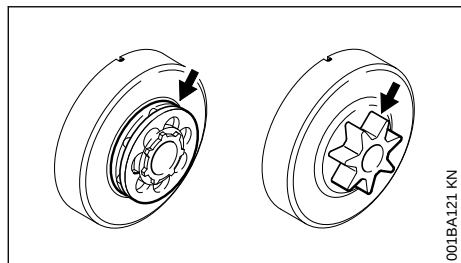

- after use of two saw chains or earlier
- if the wear marks (arrows) are deeper than 0.5 mm – otherwise the service life of the saw chain is reduced – use check gauge (special accessory) to test

Using two saw chains in alternation helps preserve the chain sprocket.

STIHL recommends use of original STIHL chain sprockets in order to ensure optimal functioning of the chain brake.

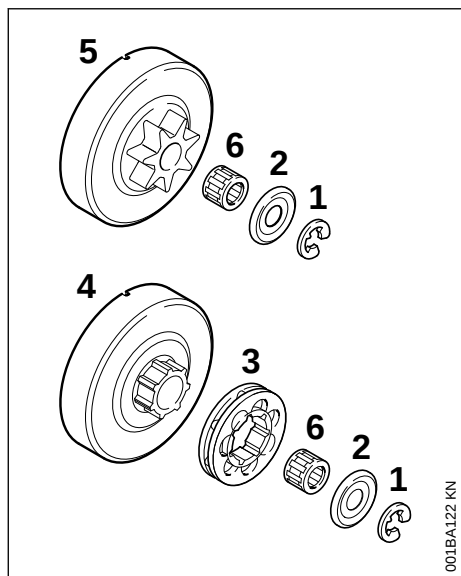

- Use a screwdriver to remove the E-clip (1)
- Remove the washer (2)
- Remove rim sprocket (3)
- Inspect transport profile on the clutch drum (4)
  - if there are also heavy signs of wear, also replace the clutch drum
- Remove clutch drum or spur chain sprocket (5) including needle cage (6) from the crankshaft – with QuickStop Super chain

brake, press throttle trigger lockout beforehand

## 28.2 Install spur chain sprocket / rim sprocket

- Clean crankshaft stub and needle cage and lubricate with STIHL lubricant (special accessory)
- Slide needle cage onto the crankshaft stub
- After refitting, turn the clutch drum and/or spur chain sprocket approx. 1 full turn so that the carrier for the oil pump drive engages – with QuickStop Super chain brake, press throttle trigger lockout beforehand
- Refit the rim sprocket – cavities toward the outside
- Refit washer and E-clip on the crankshaft

## 29 Maintaining and Sharpening the Saw Chain

### 29.1 Sawing effortlessly with a properly sharpened saw chain

A properly sharpened saw chain cuts through wood effortlessly even with very little pushing.

Never use a dull or damaged saw chain – this leads to increased physical strain, increased vibration load, unsatisfactory cutting results and increased wear.


- Clean the saw chain
- Check the saw chain for cracks and damaged rivets
- Replace damaged or worn chain components and adapt these parts to the remaining parts in terms of shape and level of wear – rework accordingly

Carbide-tipped (Duro) saw chains are especially wear-resistant. For an optimal sharpening result, STIHL recommends STIHL servicing dealers.

**WARNING**

Compliance with the angles and dimensions listed below is absolutely necessary. An improperly sharpened saw chain – especially depth gauges that are too low – can lead to increased kickback tendency of the chain saw – **risk of injury!**

29.2 Chain pitch

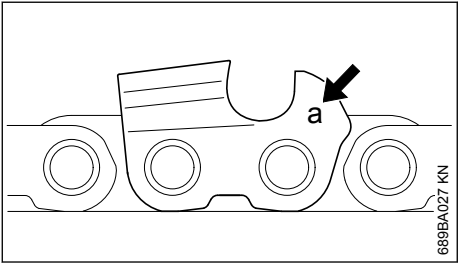


The chain pitch marking (a) is embossed in the area of the depth gauge of each cutter.

| Marking (a) | Chain pitch |       |
|-------------|-------------|-------|
|             | Inches      | mm    |
| 7           | 1/4 P       | 6.35  |
| 1 or 1/4    | 1/4         | 6.35  |
| 6, P or PM  | 3/8 P       | 9.32  |
| 2 or 325    | 0.325       | 8.25  |
| 3 or 3/8    | 3/8         | 9.32  |
| 4 or 404    | 0.404       | 10.26 |

The diameter of file to be used depends on the chain pitch – see table "Sharpening tools".

The angles of the cutter must be maintained during resharpening.

29.3 Sharpening and side plate angles

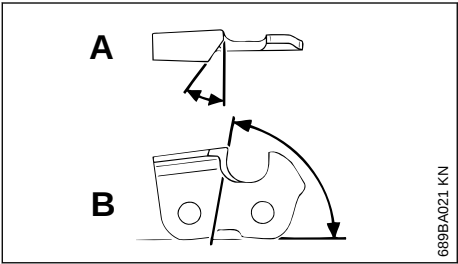

A Sharpening angle

STIHL saw chains are sharpened with a 30° sharpening angle. Ripping chains, which are sharpened with a 10° sharpening angle, are

exceptions. Ripping chains have an X in the designation.


B Side plate angle

The correct side plate angle results automatically when the specified file holder and file diameter are used.

| Tooth shapes                                            | Angle (°) |    |
|---------------------------------------------------------|-----------|----|
|                                                         | A         | B  |
| Micro = semi-chisel tooth, e. g., 63 PM3, 26 RM3, 36 RM | 30        | 75 |
| Super = full chisel tooth, e. g., 63 PS3, 26 RS, 36 RS3 | 30        | 60 |
| Ripping chain, e. g., 63 PMX, 36 RMX                    | 10        | 75 |

The angles must be identical for all cutters in the saw chain. Varying angles: Rough, uneven running of the saw chain, increased wear – even to the point of saw chain breakage.

29.4 File holder

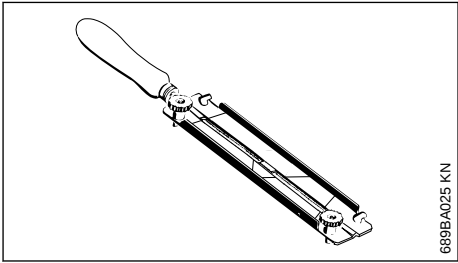


► Use a file holder

Always use a file holder (special accessory, see table "Sharpening tools") when sharpening saw chains by hand. File holders have markings for the sharpening angle.

**Use only special saw chain files!** Other files are unsuitable in terms of shape and type of cutting.

29.5 To check the angles


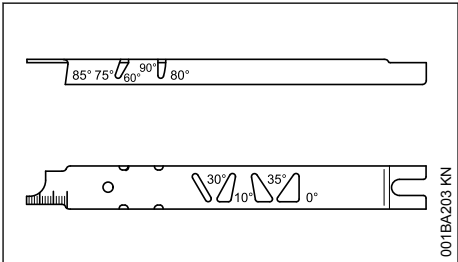


STIHL filing gauge (special accessory, see table "Sharpening tools") – a universal tool for check-

ing sharpening and side plate angles, depth gauge setting, and tooth length, as well as cleaning grooves and oil inlet holes.

## 29.6 Proper sharpening

- Select sharpening tools in accordance with chain pitch
- Clamp guide bar if necessary
- Block saw chain – push the hand guard forward
- To advance the saw chain, pull the hand guard toward the handlebar: The chain brake is disengaged. With the Quickstop Super chain brake system, additionally press the throttle trigger lockout
- Sharpen frequently, removing little material – two or three strokes of the file are usually sufficient for simple reshaping

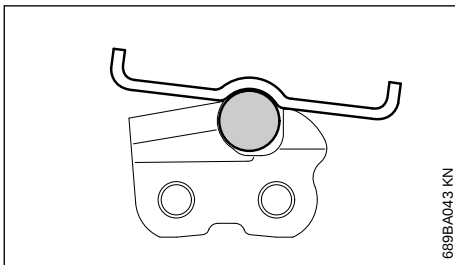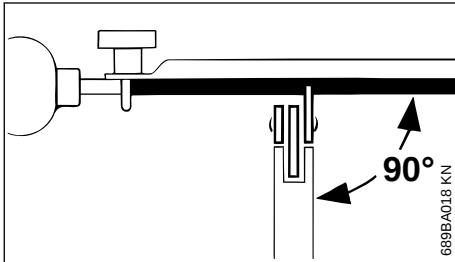


- Guide the file: **horizontally** (at a right angle to the side surface of the guide bar) in accordance with the specified angle – according to the markings on the file holder – rest the file holder on the tooth head and the depth gauge
- File only from the inside outward
- The file only sharpens on the forward stroke – lift the file on the backstroke
- Do not file tie straps and drive links
- Rotate the file a little periodically in order to avoid uneven wear
- To remove file burr, use a piece of hardwood
- Check angle with file gauge

All cutters must be equally long.

With varying cutter lengths, the cutter heights also vary and cause rough running of the saw chain and chain breakage.

- All cutters must be filed down equal to the length of the shortest cutter – ideally, one should have this done by a servicing dealer using an electric sharpener

## 29.7 Depth gauge setting

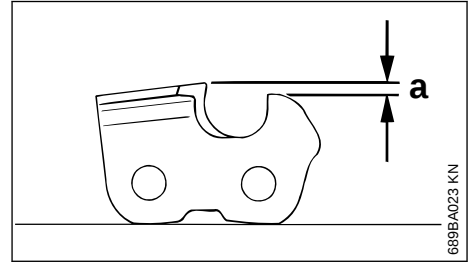

The depth gauge determines the depth to which the cutter penetrates the wood and thus the chip thickness.

### a Required distance between depth gauge and cutting edge

When cutting softwood outside of the frost season, the distance can be increased by up to 0.2 mm (0.008").


#### Chain pitch

|        |         | Depth gauge Distance (a) |          |
|--------|---------|--------------------------|----------|
| Inches | (mm)    | mm                       | (Inches) |
| 1/4 P  | (6.35)  | 0.45                     | (0.018)  |
| 1/4    | (6.35)  | 0.65                     | (0.026)  |
| 3/8 P  | (9.52)  | 0.65                     | (0.026)  |
| 0.325  | (8.25)  | 0.65                     | (0.026)  |
| 3/8    | (9.52)  | 0.65                     | (0.026)  |
| 0.404  | (10.26) | 0.80                     | (0.031)  |

## 29.8 Lowering the depth gauges

The depth gauge setting is lowered when the cutter is sharpened.

- Check the depth gauge setting after each sharpening

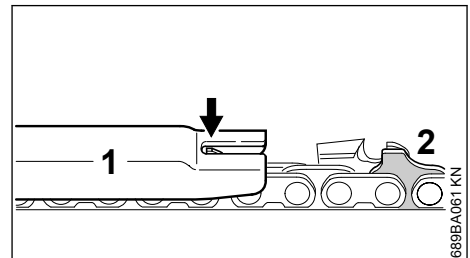


- Lay the appropriate file gauge (1) for the chain pitch on the saw chain and press it against the cutter to be checked – if the depth gauge protrudes past the file gauge, the depth gauge must be reworked


Saw chains with humped drive link (2) – upper part of the humped drive link (2) (with service mark) is lowered at the same time as the depth gauge of the cutter.

**WARNING**

The rest of the humped drive link must not be filed; otherwise, this could increase the tendency of the chain saw to kick back.

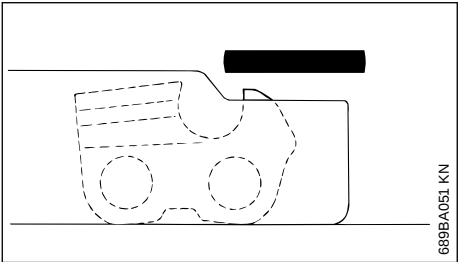


- Rework the depth gauge so that it is flush with the file gauge

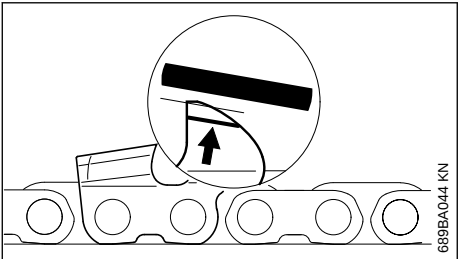

- Afterwards, dress the leading edge of the depth gauge parallel to the service mark (see arrow) – when doing this, be careful not to further lower the highest point of the depth gauge

**WARNING**

Depth gauges that are too low increase the kick-back tendency of the chain saw.

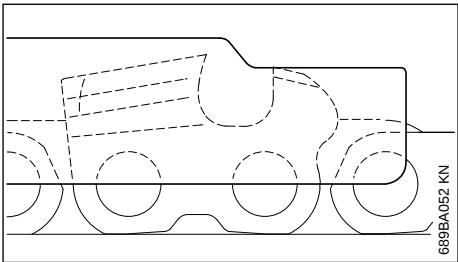

- Lay the file gauge on the saw chain – the highest point of the depth gauge must be flush with the file gauge
- After sharpening, clean the saw chain thoroughly, removing any filings or grinding dust – lubricate the saw chain thoroughly
- In the event of extended periods of disuse, store saw chains in cleaned and oiled condition

| Sharpening tools (special accessories) |        |            |          |                  |                  |                  |                  |                   |
|----------------------------------------|--------|------------|----------|------------------|------------------|------------------|------------------|-------------------|
| Chain pitch                            |        | Round file |          | Round file       | File holder      | File gauge       | Taper square     | Sharpening        |
| Inches                                 | (mm)   | mm         | (Inches) | Part number      | Part number      | Part number      | Part number      | set <sup>1)</sup> |
| 1/4P                                   | (6.35) | 3.2        | (1/8)    | 5605 771<br>3206 | 5605 750<br>4300 | 0000 893<br>4005 | 0814 252<br>3356 | 5605 007<br>1000  |
| 1/4                                    | (6.35) | 4.0        | (5/32)   | 5605 772 4006    | 5605 750 4327    | 1110 893 4000    | 0814 252 3356    | 5605 007 1027     |
| 3/8 P                                  | (9.32) | 4.0        | (5/32)   | 5605 772 4006    | 5605 750 4327    | 1110 893 4000    | 0814 252 3356    | 5605 007 1027     |
| 0.325                                  | (8.25) | 4.8        | (3/16)   | 5605 772 4806    | 5605 750 4328    | 1110 893 4000    | 0814 252 3356    | 5605 007 1028     |

| Sharpening tools (special accessories) |         |     |         |                  |                  |                  |                  |                  |
|----------------------------------------|---------|-----|---------|------------------|------------------|------------------|------------------|------------------|
| 3/8                                    | (9.32)  | 5.2 | (13/64) | 5605 772<br>5206 | 5605 750<br>4329 | 1110 893<br>4000 | 0814 252<br>3356 | 5605 007<br>1029 |
| 0.404                                  | (10.26) | 5.5 | (7/32)  | 5605 772<br>5506 | 5605 750<br>4330 | 1106 893<br>4000 | 0814 252<br>3356 | 5605 007<br>1030 |

<sup>1)</sup>consisting of file holder with round file, taper square file and file gauge

## 30 Maintenance and Care

| The following maintenance intervals apply for normal operating conditions only. When working under difficult conditions (high accumulation of dust, highly resinous lumber, lumber from tropical trees, etc.) or longer than normal each day, the specified intervals must be shortened accordingly. If you only use the tool occasionally, extend the intervals accordingly. |                                                    | Before starting work | At the end of work and/or daily | Whenever tank is refilled | Weekly | Monthly | Annually | If faulty | If damaged | As required |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------|----------------------|---------------------------------|---------------------------|--------|---------|----------|-----------|------------|-------------|
| Complete machine                                                                                                                                                                                                                                                                                                                                                              | Visual inspection (condition, leaks)               | X                    |                                 | X                         |        |         |          |           |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | Clean                                              |                      | X                               |                           |        |         |          |           |            |             |
| Throttle trigger, throttle trigger lockout, choke lever, stop switch, master control lever (dependent on equipment)                                                                                                                                                                                                                                                           | Function test                                      | X                    |                                 | X                         |        |         |          |           |            |             |
| Chain brake                                                                                                                                                                                                                                                                                                                                                                   | Function test                                      | X                    |                                 | X                         |        |         |          |           |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | Have checked by dealer <sup>1)</sup>               |                      |                                 |                           |        |         |          |           |            | X           |
| Manual fuel pump (if present)                                                                                                                                                                                                                                                                                                                                                 | check                                              | X                    |                                 |                           |        |         |          |           |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | Have repaired by a specialist dealer <sup>1)</sup> |                      |                                 |                           |        |         |          |           | X          |             |
| Fuel pick-up body / filter in fuel tank                                                                                                                                                                                                                                                                                                                                       | check                                              |                      |                                 |                           |        | X       |          |           |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | Clean, replace filter insert                       |                      |                                 |                           |        | X       |          | X         |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | replace                                            |                      |                                 |                           |        |         | X        |           | X          | X           |
| Fuel tank                                                                                                                                                                                                                                                                                                                                                                     | Clean                                              |                      |                                 |                           |        | X       |          |           |            |             |
| Lubricating oil tank                                                                                                                                                                                                                                                                                                                                                          | Clean                                              |                      |                                 |                           |        | X       |          |           |            |             |
| Chain lubrication                                                                                                                                                                                                                                                                                                                                                             | check                                              | X                    |                                 |                           |        |         |          |           |            |             |
| Saw chain                                                                                                                                                                                                                                                                                                                                                                     | Check, pay attention to sharpness                  | X                    |                                 | X                         |        |         |          |           |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | Checking the chain tension                         | X                    |                                 | X                         |        |         |          |           |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | sharpen                                            |                      |                                 |                           |        |         |          |           |            | X           |
| Guide bar                                                                                                                                                                                                                                                                                                                                                                     | Check (wear, damage)                               | X                    |                                 |                           |        |         |          |           |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | Clean and turn over                                |                      |                                 |                           |        |         |          |           |            | X           |
|                                                                                                                                                                                                                                                                                                                                                                               | Deburr                                             |                      |                                 |                           | X      |         |          |           |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | replace                                            |                      |                                 |                           |        |         |          |           | X          | X           |

<sup>1)</sup> STIHL recommends STIHL servicing dealer

<sup>2)</sup> When using professional chainsaws (with a power output of 3.4 kW or more) for the first time, tighten the cylinder block screws after 10 to 20 hours of operation

| The following maintenance intervals apply for normal operating conditions only. When working under difficult conditions (high accumulation of dust, highly resinous lumber, lumber from tropical trees, etc.) or longer than normal each day, the specified intervals must be shortened accordingly. If you only use the tool occasionally, extend the intervals accordingly. |                                                                                                 | Before starting work | At the end of work and/or daily | Whenever tank is refilled | Weekly | Monthly | Annually | If faulty | If damaged | As required |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|----------------------|---------------------------------|---------------------------|--------|---------|----------|-----------|------------|-------------|
| Chain sprocket                                                                                                                                                                                                                                                                                                                                                                | check                                                                                           |                      |                                 |                           | X      |         |          |           |            |             |
| Air filter                                                                                                                                                                                                                                                                                                                                                                    | Clean                                                                                           |                      |                                 |                           |        |         |          | X         |            | X           |
|                                                                                                                                                                                                                                                                                                                                                                               | replace                                                                                         |                      |                                 |                           |        |         |          |           | X          |             |
| Anti-vibration elements                                                                                                                                                                                                                                                                                                                                                       | check                                                                                           | X                    |                                 |                           |        |         |          | X         |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | Have replaced by servicing dealer <sup>1)</sup>                                                 |                      |                                 |                           |        |         |          |           | X          |             |
| Air intake on fan housing                                                                                                                                                                                                                                                                                                                                                     | Clean                                                                                           |                      | X                               |                           | X      |         |          |           |            | X           |
| Cylinder fins                                                                                                                                                                                                                                                                                                                                                                 | Clean                                                                                           |                      | X                               |                           |        | X       |          |           |            | X           |
| Carburetor                                                                                                                                                                                                                                                                                                                                                                    | Check idle adjustment – saw chain must not rotate                                               | X                    |                                 | X                         |        |         |          |           |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | Set the idle speed; if required have the chainsaw repaired by a specialist dealer <sup>1)</sup> |                      |                                 |                           |        |         |          |           |            | X           |
| Spark plug                                                                                                                                                                                                                                                                                                                                                                    | Adjust electrode gap                                                                            |                      |                                 |                           |        |         |          | X         |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | Replace after 100 hours of operation                                                            |                      |                                 |                           |        |         |          |           |            |             |
| Accessible screws and nuts (except adjusting screws)                                                                                                                                                                                                                                                                                                                          | Tighten <sup>2)</sup>                                                                           |                      |                                 |                           |        |         |          |           |            | X           |
| Chain catcher                                                                                                                                                                                                                                                                                                                                                                 | check                                                                                           | X                    |                                 |                           |        |         |          |           |            |             |
|                                                                                                                                                                                                                                                                                                                                                                               | replace                                                                                         |                      |                                 |                           |        |         |          |           | X          |             |
| Safety information label                                                                                                                                                                                                                                                                                                                                                      | replace                                                                                         |                      |                                 |                           |        |         |          |           | X          |             |

## 31 Minimize Wear and Avoid Damage

Observing the instructions in this manual helps reduce the risk of unnecessary wear and damage to the power tool.

The power tool must be operated, maintained and stored with the due care and attention described in this owner's manual.

The user is responsible for all damage caused by non-observance of the safety precautions, operating and maintenance instructions in this manual. This includes in particular:

- Alterations or modifications to the product not approved by STIHL.
- Using tools or accessories which are neither approved or suitable for the product or are of a poor quality.
- Using the product for purposes for which it was not designed.
- Using the product for sports or competitive events.
- Consequential damage caused by continuing to use the product with defective components.

<sup>1)</sup> STIHL recommends STIHL servicing dealer

<sup>2)</sup> When using professional chainsaws (with a power output of 3.4 kW or more) for the first time, tighten the cylinder block screws after 10 to 20 hours of operation

### 31.1 Maintenance Work

All the operations described in the "Maintenance Chart" must be performed on a regular basis. If these maintenance operations cannot be performed by the owner, they should be performed by a servicing dealer.

STIHL recommends that you have servicing and repair work carried out exclusively by an authorized STIHL servicing dealer. STIHL dealers are regularly given the opportunity to attend training courses and are supplied with the necessary technical information.

If these maintenance operations are not carried out as specified, the user assumes responsibility for any damage that may occur. Among other parts, this includes:


- Damage to the engine due to neglect or deficient maintenance (e.g. air and fuel filters), incorrect carburetor adjustment or inadequate cleaning of cooling air inlets (intake ports, cylinder fins).
- Corrosion and other consequential damage resulting from improper storage.
- Damage to the machine resulting from the use of poor quality replacement parts.

### 31.2 Parts Subject to Wear and Tear

Some parts of the power tool are subject to normal wear and tear even during regular operation in accordance with instructions and, depending on the type and duration of use, have to be replaced in good time. Among other parts, this includes:

- Saw chain, guide bar
- Drive components (clutch, clutch drum, chain sprocket)
- Filters (air, oil, fuel)
- Starter mechanism
- Spark plug
- Components of antivibration system

## 32 Main Parts

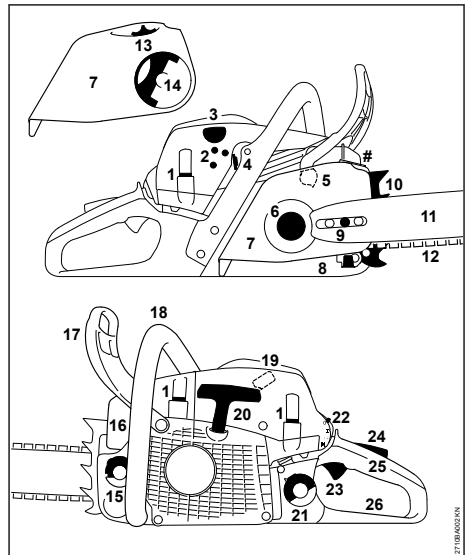

- 1 Shroud twist lock
- 2 Carburetor adjusting screws
- 3 Manual fuel pump <sup>1)</sup>
- 4 Shutter (summer operation and winter operation)
- 5 Chain brake
- 6 Chain sprocket
- 7 Chain sprocket cover
- 8 Chain catcher
- 9 Side access chain tensioner <sup>1)</sup>
- 10 Bumper spike
- 11 Guide bar
- 12 Oilomatic saw chain
- 13 Adjusting wheel <sup>1)</sup> (quick tensioner)
- 14 Wings of the wing nut <sup>1)</sup> (quick tensioner)
- 15 Oil filler cap
- 16 Muffler
- 17 Front hand guard
- 18 Front handle (handlebar)
- 19 Spark plug boot
- 20 Starter grip
- 21 Fuel filler cap

- 22 Master control lever**
- 23 Throttle trigger**
- 24 Throttle lever lock**
- 25 Rear handle**
- 26 Rear hand guard**
- # Serial number**

## 33 Specifications

### 33.1 Engine

STIHL single-cylinder two-stroke engine

#### 33.1.1 MS 271, MS 271 C

|                           |                                |
|---------------------------|--------------------------------|
| Displacement:             | 50.2cm <sup>3</sup>            |
| Cylinder bore:            | 44.7 mm                        |
| Piston stroke:            | 32 mm                          |
| Engine power:             | 2.6 kW (3.5 hp) at<br>9500 rpm |
| Idle speed: <sup>1)</sup> | 2800 rpm                       |

#### 33.1.2 MS 291, MS 291 C

|                           |                                |
|---------------------------|--------------------------------|
| Displacement:             | 55.5cm <sup>3</sup>            |
| Cylinder bore:            | 47.0 mm                        |
| Piston stroke:            | 32 mm                          |
| Engine power:             | 2.8 kW (3.8 hp) at<br>9500 rpm |
| Idle speed: <sup>1)</sup> | 2800 rpm                       |

### 33.2 Ignition system

Electronic magneto ignition

|                          |                                |
|--------------------------|--------------------------------|
| Spark plug (suppressed): | Bosch WSR 6 F,<br>NGK BPMR 7 A |
| Electrode gap:           | 0.5 mm                         |

### 33.3 Fuel system

All-position diaphragm carburetor with integral fuel pump

|                     |                             |
|---------------------|-----------------------------|
| Fuel tank capacity: | 500 cm <sup>3</sup> (0.5 l) |
|---------------------|-----------------------------|

### 33.4 Chain lubrication

Fully automatic, speed-controlled oil pump with rotary piston

|                    |                              |
|--------------------|------------------------------|
| Oil tank capacity: | 240 cm <sup>3</sup> (0.24 l) |
|--------------------|------------------------------|

### 33.5 Weight

**dry, without cutting attachment**

|         |        |
|---------|--------|
| MS 271: | 5.6 kg |
|---------|--------|

**dry, without cutting attachment**

|                                                    |        |
|----------------------------------------------------|--------|
| MS 271 C with ErgoStart and quick chain tensioner: | 6.2 kg |
| MS 291:                                            | 5.6 kg |
| MS 291 C with ErgoStart and quick chain tensioner: | 6.2 kg |

### 33.6 MS 271, MS 271 C cutting attachments

The actual cutting length may be less than the specified cutting length.

#### 33.6.1 Saw chains .325"

|                                            |                 |
|--------------------------------------------|-----------------|
| <b>Rapid Micro (23 RM) Type 3684</b>       |                 |
| <b>Rapid Micro 3 (23 RM3) Type 3687</b>    |                 |
| <b>Rapid Super (23 RS) Type 3637</b>       |                 |
| <b>Rapid Duro 3 (23 RD3) Type 3665</b>     |                 |
| <b>Rapid Micro Pro (23 RM Pro) 3693</b>    |                 |
| <b>Rapid Micro 3 Pro (23 RM3 Pro) 3695</b> |                 |
| <b>Rapid Super Pro (23 RS Pro) 3690</b>    |                 |
| <b>Rapid Duro 3 Pro (23 RD3 Pro) 3696</b>  |                 |
| Pitch:                                     | .325" (8.25 mm) |
| Drive link gauge:                          | 1.3 mm          |

|                                         |                 |
|-----------------------------------------|-----------------|
| <b>Rapid Micro (26 RM) Type 3686</b>    |                 |
| <b>Rapid Micro 3 (26 RM3) Type 3689</b> |                 |
| <b>Rapid Super (26 RS) Type 3639</b>    |                 |
| <b>Rapid Duro 3 (26 RD3) Type 3667</b>  |                 |
| Pitch:                                  | .325" (8.25 mm) |
| Drive link gauge:                       | 1.6 mm          |

#### 33.6.2 Rollomatic Light 04 Guide Bars

|                            |                   |
|----------------------------|-------------------|
| Bar lengths (pitch .325"): | 35, 40, 45, 50 cm |
| Groove width:              | 1.3 mm            |
| Sprocket nose:             | 10 tooth          |

#### 33.6.3 Rollomatic guide bars

|                            |               |
|----------------------------|---------------|
| Bar lengths (pitch .325"): | 40, 45, 50 cm |
| Groove width:              | 1.3 mm        |
| Sprocket nose:             | 11 tooth      |

#### 33.6.4 Rollomatic Light 04 Guide Bars

|                            |                   |
|----------------------------|-------------------|
| Bar lengths (pitch .325"): | 35, 40, 45, 50 cm |
| Groove width:              | 1.6 mm            |
| Sprocket nose:             | 10 tooth          |

#### 33.6.5 Rollomatic guide bars

|                            |               |
|----------------------------|---------------|
| Bar lengths (pitch .325"): | 32, 37, 40 cm |
| Groove width:              | 1.6 mm        |
| Sprocket nose:             | 11 tooth      |

#### 33.6.6 Duromatic guide bars

|                            |        |
|----------------------------|--------|
| Bar lengths (pitch .325"): | 45 cm  |
| Groove width:              | 1.6 mm |

<sup>1)</sup> According to version

<sup>1)</sup> according to ISO 11681 +/- 50 1/min

**33.6.7 Chain sprocket**

7-tooth for .325"  
 Max. chain speed according to ISO 11681: 24.4 m/s  
 Chain speed at maximum power: 19.3 m/s

**33.7 MS 291, MS 291 C cutting attachments**

The actual cutting length may be less than the specified cutting length.

**33.7.1 Saw chains .325"**

**Rapid Micro (23 RM) Type 3684**  
**Rapid Micro 3 (23 RM3) Type 3687**  
**Rapid Super (23 RS) Type 3637**  
**Rapid Duro 3 (23 RD3) Type 3665**  
**Rapid Micro Pro (23 RM Pro) 3693**  
**Rapid Micro 3 Pro (23 RM3 Pro) 3695**  
**Rapid Super Pro (23 RS Pro) 3690**  
**Rapid Duro 3 Pro (23 RD3 Pro) 3696**  
 Pitch: .325" (8.25 mm)  
 Drive link gauge: 1.3 mm

**Rapid Micro (26 RM) Type 3686**  
**Rapid Micro 3 (26 RM3) Type 3689**  
**Rapid Super (26 RS) Type 3639**  
**Rapid Duro 3 (26 RD3) Type 3667**  
 Pitch: .325" (8.25 mm)  
 Drive link gauge: 1.6 mm

**33.7.2 Rollomatic Light 04 Guide Bars**

Bar lengths (pitch .325"): 35, 40, 45, 50 cm  
 Groove width: 1.3 mm  
 Sprocket nose: 10 tooth

**33.7.3 Rollomatic guide bars**

Bar lengths (pitch .325"): 40, 45, 50 cm  
 Groove width: 1.3 mm  
 Sprocket nose: 11 tooth

**33.7.4 Rollomatic Light 04 Guide Bars**

Bar lengths (pitch .325"): 35, 40, 45, 50 cm  
 Groove width: 1.6 mm  
 Sprocket nose: 10 tooth

**33.7.5 Rollomatic guide bars**

Bar lengths (pitch .325"): 32, 37, 40 cm  
 Groove width: 1.6 mm  
 Sprocket nose: 11 tooth

**33.7.6 3/8" saw chains**

**Rapid Micro (36 RM) Type 3652**  
**Rapid Micro 3 (36 RM3) Type 3664**  
**Rapid Super (36 RS) Type 3621**  
**Rapid Super 3 (36 RS3) Type 3626**  
**Rapid Duro (36 RD) Type 3943**  
**Rapid Duro 3 (36 RD3) Type 3683**  
 Pitch: 3/8" (9.32 mm)  
 Drive link gauge: 1.6 mm

**33.7.7 Rollomatic Light 04 Guide Bars**

Cutting lengths: 37, 40, 45 cm  
 Pitch: 3/8" (9.32 mm)  
 Groove width: 1.6 mm  
 Sprocket nose: 9 tooth

**33.7.8 Rollomatic guide bars**

Cutting lengths: 37, 40, 45 cm  
 Pitch: 3/8" (9.32 mm)  
 Groove width: 1.6 mm  
 Sprocket nose: 11 tooth

**33.7.9 Duromatic guide bars**

Bar lengths (3/8" pitch): 45 cm  
 Groove width: 1.6 mm

**33.7.10 Chain sprocket**

7-tooth for 3/8"  
 Max. chain speed according to ISO 11681: 27.5 m/s  
 Chain speed at maximum power: 21.7 m/s

7-tooth for .325"  
 Max. chain speed according to ISO 11681: 24.4 m/s  
 Chain speed at maximum power: 19.3 m/s

**33.8 Noise and vibration values**

For further details on compliance with Vibration Directive 2002/44/EC, see

[www.stihl.com/vib](http://www.stihl.com/vib)

**33.8.1 Sound pressure level  $L_{peq}$  in accordance with ISO 22868**

|           |           |
|-----------|-----------|
| MS 271:   | 103 dB(A) |
| MS 271 C: | 103 dB(A) |
| MS 291:   | 103 dB(A) |
| MS 291 C: | 103 dB(A) |

**33.8.2 Sound power level  $L_{weq}$  in accordance with ISO 22868**

|                          |           |
|--------------------------|-----------|
| MS 271:                  | 113 dB(A) |
| MS 271 (for China only): | 112 dB(A) |
| MS 271 C:                | 113 dB(A) |
| MS 291:                  | 114 dB(A) |
| MS 291 C:                | 114 dB(A) |

**33.8.3 Vibration level  $a_{hv, eq}$  according to ISO 22867**

|           | Handle, left         | Handle, right        |
|-----------|----------------------|----------------------|
| MS 271:   | 4.5 m/s <sup>2</sup> | 4.5 m/s <sup>2</sup> |
| MS 271 C: | 4.5 m/s <sup>2</sup> | 4.5 m/s <sup>2</sup> |
| MS 291:   | 4.5 m/s <sup>2</sup> | 4.5 m/s <sup>2</sup> |
| MS 291 C: | 4.5 m/s <sup>2</sup> | 4.5 m/s <sup>2</sup> |

The K-factor in accordance with Directive 2006/42/EC is 2.0 dB(A) for the sound pressure level and sound power level; the K-factor in

accordance with Directive 2006/42/EC is  $2.0 \text{ m/s}^2$  for the vibration level.

### 33.9 REACH

REACH is an EC regulation and stands for the Registration, Evaluation, Authorization and Restriction of Chemical substances.

For information on compliance with the REACH regulation (EC) No. 1907/2006 see

[www.stihl.com/reach](http://www.stihl.com/reach)

### 33.10 Exhaust Emissions

The  $\text{CO}_2$  value measured in the EU type approval procedure is specified at

[www.stihl.com/co2](http://www.stihl.com/co2)

in the product-specific technical data.

The measured  $\text{CO}_2$  value was determined on a representative engine in accordance with a standardized test procedure under laboratory conditions and does not represent either an explicit or implied guarantee of the performance of a specific engine.

The applicable exhaust emission requirements are fulfilled by the intended usage and maintenance described in this User Manual. The operating license shall be void if the engine is modified in any way.

## 34 Ordering Spare Parts

Please enter your saw model, serial number as well as the part numbers of the guide bar and saw chain in the spaces provided. This will make re-ordering simpler.

The guide bar and saw chain are subject to normal wear and tear. When purchasing these parts, always quote the saw model, the part numbers and names of the parts.

Model

Serial number

Guide bar part number

Chain part number

## 35 Maintenance and Repairs

Users of this machine may only carry out the maintenance and service work described in this

user manual. All other repairs must be carried out by a servicing dealer.

STIHL recommends that you have servicing and repair work carried out exclusively by an authorized STIHL servicing dealer. STIHL dealers are regularly given the opportunity to attend training courses and are supplied with the necessary technical information.

When repairing the machine, only use replacement parts which have been approved by STIHL for this power tool or are technically identical. Only use high-quality replacement parts in order to avoid the risk of accidents and damage to the machine.


STIHL recommends the use of original STIHL replacement parts.

Original STIHL parts can be identified by the STIHL part number, the **STIHL** logo and the STIHL parts symbol  (the symbol may appear alone on small parts).

## 36 Disposal

Contact the local authorities or your STIHL servicing dealer for information on disposal.

Improper disposal can be harmful to health and pollute the environment.

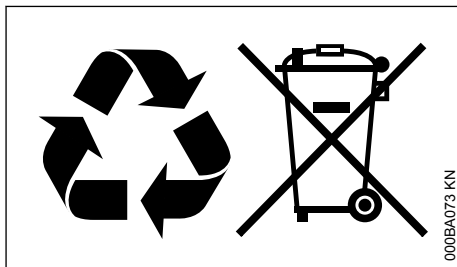

- Take STIHL products including packaging to a suitable collection point for recycling in accordance with local regulations.
- Do not dispose with domestic waste.

## 37 EC Declaration of Conformity

ANDREAS STIHL AG & Co. KG  
Badstr. 115  
D-71336 Waiblingen

Germany

declares under its sole responsibility that

Designation:

Chainsaw

Make: STIHL  
 Series: MS 271  
 MS 271 C  
 MS 271 C-BE  
 MS 291  
 MS 291 C  
 MS 291 C-BE  
 Serial identification number: 1141  
 Displacement  
 all MS 271: 50.2 cm<sup>3</sup>  
 all MS 291: 55.5 cm<sup>3</sup>

conforms to the relevant provisions of Directives 2011/65/EU, 2006/42/EC, 2014/30/EU and 2000/14/EC and has been developed and manufactured in compliance with the following standards in the versions valid on the date of production:

EN ISO 11681-1, EN 55012, EN 61000-6-1

The measured and the guaranteed sound power level have been determined in accordance with Directive 2000/14/EC, Annex V, and standard ISO 9207.

#### Measured sound power level

all MS 271: 115 dB(A)  
 all MS 291: 116 dB(A)

#### Guaranteed sound power level

all MS 271: 117 dB(A)  
 all MS 291: 118 dB(A)

The EC type examination was carried out by

DPLF

Deutsche Prüf- und Zertifizierungsstelle für Land- und Forsttechnik GbR (NB 0363)

Spremberger Straße 1  
 D-64823 Groß-Umstadt

#### Certification No.

all MS 271: K-EG -2009/5469  
 all MS 291: K-EG -2009/5471

Technical documents deposited at:

ANDREAS STIHL AG & Co. KG  
 Produktzulassung

The year of manufacture and serial number are indicated on the power tool.

Waiblingen, 2022-08-01

ANDREAS STIHL AG & Co. KG

pp



Robert Olma, Vice President, Regulatory Affairs  
 & Global Governmental Relations



## 38 UKCA Declaration of Conformity

ANDREAS STIHL AG & Co. KG

Badstr. 115

D-71336 Waiblingen

Germany

declares under our sole responsibility that

Designation: Chainsaw  
 Make: STIHL  
 Series: MS 271  
 MS 291

Serial identification number: 1141  
 Displacement  
 all MS 271: 50.2 cm<sup>3</sup>  
 all MS 291: 55.5 cm<sup>3</sup>

conforms to the relevant provisions of UK regulations The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, Supply of Machinery (Safety) Regulations 2008, Electromagnetic Compatibility Regulations 2016 and Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001 and has been manufactured in compliance with the following standards in the versions valid on the date of production:

EN ISO 11681-1, EN 55012, EN 61000-6-1

The measured and guaranteed sound power levels have been determined in accordance with UK regulation Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001, Annex 8, using the ISO 9207 standard.

#### Measured sound power level

all MS 271: 115 dB(A)  
 all MS 291: 116 dB(A)

#### Guaranteed sound power level

all MS 271: 117 dB(A)  
 all MS 291: 118 dB(A)

The type examination was carried out by

Intertek Testing & Certification Ltd, Academy Place, 1 – 9 Brook Street, Brentwood Essex, CM14 5NQ, United Kingdom

#### Certification No.

all MS 271: UK-MCR-0012

**Certification No.**

all MS 291: UK-MCR-0013

Technical documents deposited at:

ANDREAS STIHL AG & Co. KG

The year of manufacture and serial number are applied to the product.

Waiblingen, 01.08.2022

ANDREAS STIHL AG & Co. KG

pp



Robert Olma, Vice President, Regulatory Affairs  
& Global Governmental Relations

**UK  
CA**

**39 Addresses**

[www.stihl.com](http://www.stihl.com)







[www.stihl.com](http://www.stihl.com)



0458-574-0121-E



0458-574-0121-E