
MEET YOUR FIRE HD 8

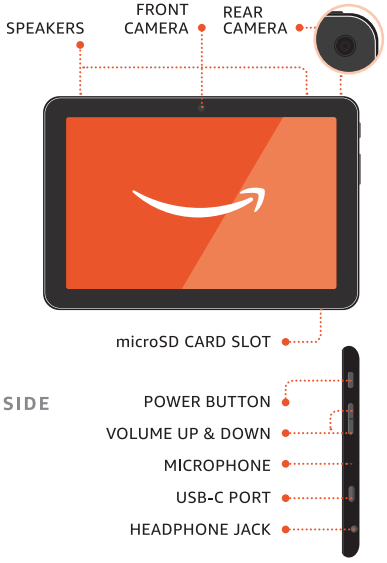

Also included: USB-C cable, power adapter

ACTIVATE YOUR FIRE HD 8

1 POWER
Power on your tablet.

2 SETUP
Follow the on-screen instructions to complete setup.





Tip:
Swipe up to unlock the device.

NAVIGATION FROM HOME SCREEN

Go back
Return home
Switch between apps

EXPLORE YOUR FIRE HD 8

TO ACCESS SETTINGS AND SHORTCUTS



Swipe down for settings and quick controls.

Swipe left for libraries.

Swipe right for books, TV shows, movies, games, and other content.

EXPAND YOUR STORAGE




Install microSD for up to 1TB of additional storage.
microSD card sold separately.

CHARGE YOUR FIRE HD 8

USB-A
Adapter side

USB-C
Tablet side



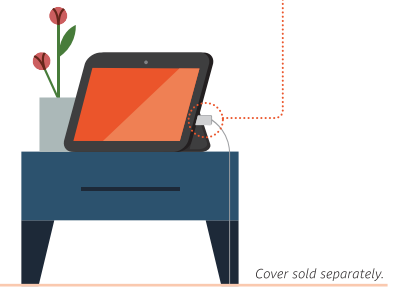

Cover sold separately.

TROUBLESHOOTING

For troubleshooting tips and Amazon Customer Service, visit www.amazon.com/devicesupport.