moto g POWER

User Guide

© 2025 Motorola Mobility LLC. All rights reserved.

MOTOROLA, the stylized M logo, MOTO, and the MOTO family of marks are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. LENOVO is a trademark of Lenovo. Google, Android, Google Play and other marks are trademarks of Google LLC. Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this help content, are based upon the latest available information and believed to be accurate at the time of release. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Some images in help content are examples only.

To use the latest version of this content, go to **Settings** > **Help** on your phone.

Contents

Set up phone **1**

About your hardware 1
Insert or remove SIM and SD cards 4
Copy data from old phone 6
Set up voicemail 8
Set up email 9
Prepare for emergencies 11
Make it yours 13

Learn the basics **14**

About your home screen 14
About your lock screen 17

New to Android? **18**

If this is your first smartphone 18
If you had an iPhone 20
About your Google account 21
Status bar icons 22
Phone terms you should know 26

Get around on your phone **28**

Learn gestures 28
Move between apps and screens 30
Use quick settings 31
Turn screen off and on 34

Capture your screen **35**

Take screenshots 35

Discover useful tools **37**

Turn flashlight on and off 37
Control phone with your voice 38
Get directions to a location 39
Use Time and Weather widget 40
Manage how you spend time on your phone 42

Work with text **45**

Use onscreen keyboard 45
Cut, copy, paste text 47
Use voice typing 48
Fill in forms automatically 49

Personalize your phone **50**

Home screen **50**

Change wallpaper 50
Customize your Favorites tray 51

Use widgets, shortcuts, or folders 52
Arrange apps and control icon's look 55
Home screen rotation lock 56
Remove Google feed 57
Remake your home screen with launchers 58

Lock screen 59

Use a screen saver 59

Use apps 60

Open, close, switch apps 60
See two apps at the same time 61
View notifications 62
About preloaded apps 64
About Moto app 68
Focus on gaming 69

Get, delete, manage apps 72

Install or update apps 72
Manage app permissions 75
Delete or disable apps 77
Find problem apps with safe mode 78
Protect against harmful apps 79

Search and browse 80

Search the web 80
Search your phone 82
Browse websites 83

Text messaging 85

About text and multimedia messages 85
Read, send messages 86
Manage, delete messages 89
Change default messaging app 91
Change text message reply to incoming calls 92
Get text messages on your computer 93

Email 94

Read, send, manage emails 94
View email attachments 96
Preview inboxes from home screen 97
Add email signature 98
Control email notifications 99

Calendar app 100

About the calendar 100
Find calendar events 101
Create and manage events 102

Control notifications for calendar events 103
Clock app 104
Set alarms 104
Use timer or stopwatch 105
Set date and time 107
Photos app 109
Share photos and videos 109
Upload photos and videos 110
Contacts, calls, voicemail 112
Contacts 112
Add contacts 112
Edit or delete contacts 113
Star your favorite contacts 115
Sort contacts 116
Share contacts 117
Phone calls 118
Answer calls 118
Make calls 120
During a call 122
Make video calls 124
Make conference calls 125
Make calls over Wi-Fi 126
Turn call waiting on and off 128
Block calls and texts 129
View and delete call history 131
Make emergency call from locked phone 133
Voicemail 134
Use voicemail 134
Music 136
Listen to radio 136
Listen to music 138
Transfer music files 140
Connect a MIDI device 141
Settings 142
Network and internet 142
Connect to Wi-Fi networks 142
Connect with Wi-Fi Direct 144
Use Airplane mode 145
Control data usage 146
Share your internet connection 148

Connect to VPNs 151
Connected devices 152
Connect with Bluetooth 152
Share files and links with nearby devices 155
Transfer files between phone and computer (USB) 157
Cast screen or media to TV 159
Print from your phone 161
About wireless sharing 162
Apps & notifications 165
Change app settings 165
Choose how apps notify you 167
Battery 170
Charge phone 170
Extend battery life 171
Use Battery saver 173
Show battery percentage in status bar 174
Storage 175
About storage options 175
Manage phone storage 176
Manage SD card 177
Find downloaded files 178
Recover recently deleted files 179
Upload music to cloud 180
Upload photos and videos 181
Scan documents and make copies 183
Sound 184
Adjust volumes 184
Set ringtones 186
Enhance sound 188
Silence calls & notifications 190
Stop phone from speaking 194
Silence “Hello Moto” during power up 195
Turn off charging sounds 196
Turn touch sounds on/off 197
Hear other notification sounds 198
Display 199
Adjust screen brightness 199
Use Dark theme 200
Change font and display size 201
Stop automatic rotation 202
Adjust colors at night 203
Choose color mode 204


See Peek Display notifications 205
Change screen timeout 207
Change lock screen features 208
Accessibility 209
Visual assistance 209
Hearing assistance 213
Dexterity assistance 216
Use accessibility shortcuts 217
Find accessible apps and devices 220
Security 221
About security 221
Protect against harmful apps 222
Make sure your phone can be found 223
Lock and unlock phone 224
Set a screen lock 224
Set advanced lock options 226
Use fingerprint security 227
Stay unlocked when connected with a trusted device 229
Unlock at trusted places 230
Keep phone unlocked while it's on you 231
Pin your screen 232
Lock SIM card 233
Privacy 234
Review or change permissions 234
Hide your pattern 235
Location 236
Use location services 236
Accounts 239
Add or remove accounts 239
Change name & info in your Google account 241
Sync apps with your Google account 242
Control what info Google collects 244
System 245
Languages & input 245
Customize the keyboard 245
Use multiple languages 247
Open apps faster with Adaptive performance 248
Gestures 249
Customize Power button gesture 249
Change System navigation 250

Shrink screen for one-handed use 251
Swipe fingerprint for notifications 252
Turn flashlight on and off 253
Twist phone to open camera 254
Shrink screen for one-handed use 255
Adjust screenshot settings 256
Back up phone 257
Users and guests 258
Share your phone 258
Add, modify, remove users 260
Add or delete guest 261
About phone 262
Record your IMEI number 262
Find legal and product information 263
Fix issues 264
Hardware issues 264
Phone is slow or unstable 264
Phone feels warm or hot 265
Phone won't turn on 266
Phone restarts or crashes 267
Screen is frozen or won't respond 268
Screen displays wrong colors 269
Screen brightness automatically too dim or bright 270
SD card issues 271
Call and SIM issues 273
Troubleshoot issues with calls 273
Can't make calls 274
Can't answer or phone doesn't ring 276
Issues during calls 278
Battery issues 281
Charging issues 281
Battery drains too fast 282
Bluetooth, Wi-Fi, USB issues 283
Bluetooth issues 283
Wi-Fi issues 286
Can't transfer files or connect USB to computer 288
Account and sign-in issues 289
Forgot unlock code 289
Can't sign in to Google 290
Account sync issues 291


App issues **293**
App or widget issues 293
Camera issues 295
Messaging issues 297
Gmail issues 299
Play Store issues 300
Maintenance procedures **301**
Update Android software 301
Reset Wi-Fi, cellular data, and Bluetooth 302
Reset phone 303
Get more help 305
Send feedback to Motorola 306

About your hardware

Hardware diagram

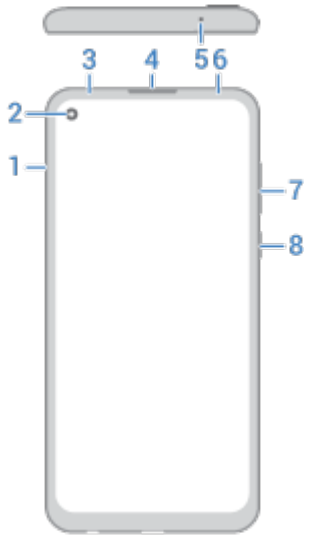

1. Tray for SIM and SD card
2. Front camera (learn more in Camera help)
3. Proximity sensor
4. Earpiece
5. Microphone
6. Ambient light sensor
7. Volume button
8. Power button

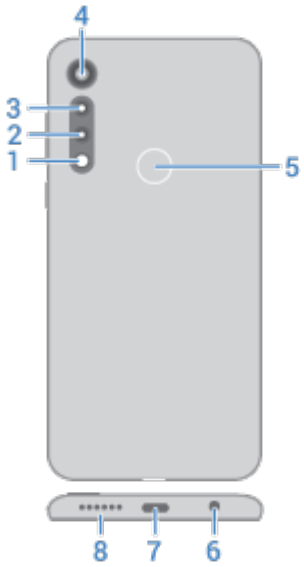

1. Flash
2. Macro camera
3. Main camera
4. Ultra-wide camera
5. Fingerprint sensor
6. Headset jack
7. USB-C port to charge phone, transfer files, and share data connection with tethered devices
8. Speaker

Care for your phone

To clean the screen:

- While this does not disinfect your phone, the best way to keep your phone clean is to wipe it thoroughly with a dry soft cloth. Avoid abrasive cloths, including paper towels and other materials with rough surfaces.
- If the screen gets drops of liquid on it, wipe it with a clean, dry cloth.

To disinfect your phone:

- It is okay to use wipes or cloths moistened with 70% isopropyl alcohol or Clorox® Disinfecting Wipes to gently wipe your screen.
- When disinfecting or cleaning your phone, turn it off and avoid getting any moisture in its openings, including the charging port, headphone jack, microphones and speakers.
- Don't submerge your phone in any cleaning agents, avoid using any cleaners with bleach or abrasives, and avoid spraying cleaners directly on the screen.

Prevent water damage

Your phone is water and splash resistant, but not completely waterproof. Avoid exposing your phone to water or any other liquids, and do not intentionally submerge it in any liquid. Water and splash resistance are not permanent, and the protection performance may continue to decline due to daily use.

Liquid damage is not covered by your warranty.

To prevent water damage to your phone:

- Do not expose your phone to pressurized water, salt water or liquids other than fresh water
- Dry your phone and ports thoroughly with a soft, clean cloth
- Don’t try to charge your phone when it’s wet
- Don't drop, puncture, or scratch your phone, as this could damage the water repellent features

Insert or remove SIM and SD cards

About the SD card

Your phone supports an optional microSD card up to 512 GB.


A Class 2, 4, or 6 card is sufficient.

Your phone uses the card as portable storage for media files: photos, videos, and music. Because it's portable, you can easily swap the card and its content between devices. After you insert the card, be sure to update settings within media apps (like camera, music, and podcast apps), so they use the card to store content you create or download.


You can't store apps on the SD card because it is portable storage.

Insert or replace cards


1. If you want to remove the SD card, eject it first.
2. Insert the SIM tool into the tray hole and gently push to pop it out.

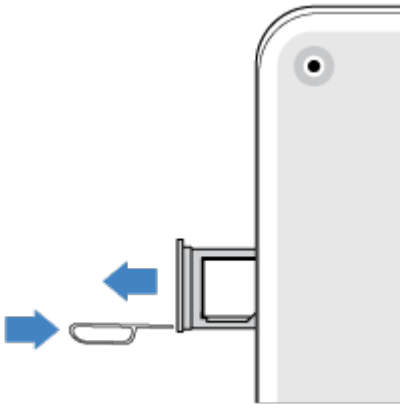

3. Insert or remove the cards as needed.

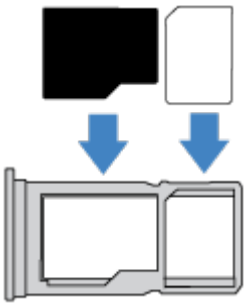

4. Push the tray back into the phone.

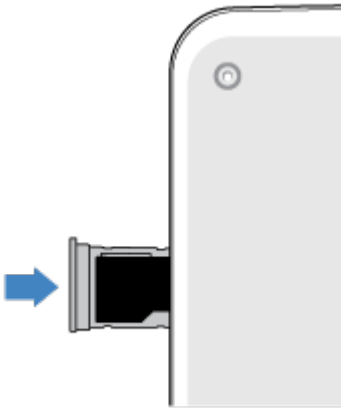

Note: If you need to activate or resize a SIM, contact your carrier.

Fix an issue

What type of issue do you have?

- SIM card or calls
- SD card

Copy data from old phone

Copy data from iPhone

You'll use Google Drive to copy files from your iPhone and iCloud account to your new phone and Google account:

- Photos will back up to Photos.
- Contacts will back up to Contacts.
- Calendar will back up to Calendar.

1. Charge both phones and connect them to a Wi-Fi network.
2. To ensure you don't miss any messages or calls, on your iPhone:
   a. Turn off iMessage. (**Settings** > **Messages** off. Or, if your SIM has been removed, deregister your phone.)
   b. Turn off FaceTime. (**Settings** > **FaceTime** > off.)
3. Download the Google Drive app on your iPhone.
4. On your iPhone, open Drive and then:
   a. Sign in with your Google account. If you don't have one, you can create it now.
   b. Tap > **Settings** > **Backup & reset** and start the backup.
5. Wait for the backup to complete.
6. When complete, on your new phone, sign in with the same Google account (**Settings** > **Accounts** > **Add account**).

Copy data from Android phone

During setup, you can copy your apps, music, contacts, messages, and more. Learn what does and doesn't get copied.

If you no longer have your old phone or can't turn it on, you can copy files using a backup from the cloud with your Google account.

To copy files:

1. Charge both phones and turn them on.
2. On your new phone:
   a. If this is the first time you've turned it on, select your language on the setup screen.
   b. If you skipped copying files during setup, swipe down from the top of the screen and tap the Android Setup notification to finish setting up your phone.
3. Tap **Start**.
4. Insert your SIM to connect to the mobile network, or tap **Skip**.
5. Connect to a Wi-Fi network and tap **Next**.

6. Follow the onscreen instructions to select the old phone or backup associated with your Google account, and to choose which apps and data to copy.

> **Tip:** Be sure to leave **Back up to Google Drive** turned on.

What gets copied from Android phone

If you copy data from another Android phone during setup, here's what gets copied:

- Apps and app data
- Music, photos, and videos
- Google accounts
- Contacts stored on your phone or SIM card
- Text messages
- Multimedia attachments in messages
- Most phone settings
- Wallpaper
- Call history

You'll see these when you sign in to your Google account on your new phone.

What won't copy:

- Downloads, like PDF files
- Apps that aren't from Play Store
- Accounts other than Google accounts
- Contacts and calendars for services other than Google (such as WhatsApp)
- Ringtones

Import contacts from SIM

If you have a SIM card with contacts saved on it, you can import them into your Google account.

1. Insert the SIM in your phone.

   Or, if your old phone is an Android phone and can connect to Wi-Fi, turn it on.
2. Open the Contacts app.
3. At the bottom, tap **Organize** > **Manage SIM**.
4. Select where to save the contacts:
   - If you have multiple Google accounts, tap and choose the account where you want to save them.
   - To save them to your phone, tap **Device**.
5. Select the contacts to import and tap **Import**.

Set up voicemail

Set voicemail password

Contact your carrier for help setting or recovering your password/PIN for voicemail.

Set mailbox greeting

Your carrier provides and manages your voicemail.

To set your greeting:

1. Touch > .
2. Touch & hold to dial into your mailbox.
3. Follow your carrier's system prompts. If your voicemail is not set up, contact your carrier for instructions.

Change voicemail options

1. Touch > > **Settings**.

   (If you don't see , swipe down on the screen.)
2. Touch **Voicemail**.
3. Change any of the options:
   - To change voicemail service from your carrier to a different service or app, touch **Advanced Settings** > **Service**.
   - To change the number dialed to access voicemail, touch **Advanced Settings** > **Setup**.
   - Your carrier might include additional options here, like notification and visual voicemail settings. Contact your carrier for help.

Set up email

Set up personal email

You can add multiple accounts of the following types:

- Gmail
- Personal email from other providers (IMAP/POP)

If you added a Google account on your phone:

- When you open the Gmail app for the first time, you'll see your email for that account. You're already set up.
- To set up additional accounts, open Gmail, touch your profile icon, then touch **Add another account**.

If you didn't add a Google account to your phone and want to set up email for an IMAP/POP provider (an address that's not Gmail):

1. Open the **Gmail** app.
2. Follow the onscreen instructions to enter your email address, password, and account options.

   If you have problems setting up the account, read Google's help for Gmail.

Set up corporate email

If you use Microsoft Office Outlook on your work computer, your phone can synchronize emails, calendar events, and contacts with the Microsoft Exchange server. Before you start, you'll need the following information from your company's IT department:

- Email address
- Email password
- Domain name
- Username
- Server name
- Security type/SSL settings
- Client certificate requirement

To set up corporate email:

1. Open the **Gmail** app.
2. Do one of the following:
   - If this is your first time opening the Gmail app, touch **Add another email address**.
   - If you have been using Gmail with another account, touch your profile icon, then touch **Add another account**.
3. Touch **Exchange and Office 365**.

4. Follow the onscreen instructions to enter your email address, password, and other information from your company's IT department.

Switch account views

In the **Gmail** app, touch your profile icon M, then select an account.

To open each inbox with one touch from your home screen, add task shortcuts:

1. Touch & hold .
2. Drag = for each account to a blank space on your home screen.

Prepare for emergencies

Set up emergency information

You can set up emergency information for first responders or others to view from your lock screen, such as your emergency contact and medical information (blood type, allergies).

Add your emergency information

1. Go to **Settings** > **About phone**.
2. Tap **Emergency information**.
3. Set up your information.

Note: Anyone who picks up your phone can see your emergency info without unlocking your phone.

View your emergency information

Anyone who needs to view your information should:

1. From the lock screen:
   - Swipe up and tap **Emergency** below the keypad.
   - Or, press & hold the Power button, then tap **Emergency**.
2. Tap **Emergency information** twice.

Add message to lock screen

To add your name or a short message to your lock screen for anyone who finds your phone:

1. Go to **Settings** > **Display** > **Advanced** > **Lock screen display**.
2. Tap **Lock screen message**.
3. Type the text to display and tap **Save**.

Tip: Don't put your mobile number as contact info on your lock screen unless you can access your voicemail from another device.

Send your location to emergency services

Not all carriers and countries support this feature.

If Android Emergency Location Service (ELS) works in your country and on your carrier's network and if you haven't turned off ELS, when you call or text an emergency number, ELS sends your location to authorized emergency responders to help them locate you.

If ELS is off, your carrier might still send the phone’s location during an emergency call. For more information, check with your carrier.

To turn ELS on or off:

1. Go to **Settings** > **Location** > **Advanced**.
2. Touch **Emergency Location Service**.
3. Turn it on or off .

To learn more about ELS, read Google's help.

Turn emergency alerts off/on

Your phone can receive free alerts to inform you of public safety messages, threats to life and property (like extreme weather), and other emergencies.

When an emergency alert is sent out, appears in the status bar. Touch the notification to read the alert.

You can turn most alerts off or on and adjust alert notification settings. Presidential alerts cannot be turned off.

Note: Because alerts are intended to save lives, please consider carefully before turning alerts off.

1. Go to **Settings**.
2. Touch **Apps & notifications** > **Advanced** > **Wireless emergency alerts**.
3. Adjust settings as needed.

Make it yours

This topic lists things that most people want to do with their new phone, with links to instructions on how to do them.

Change its look and sound

- Set the wallpaper.
- Add apps to your home screen.
- Adjust screen settings, like font size, rotation settings, and dark background.
- You can use either the ◀ ● ■ buttons or gestures to move between apps and screens. Choose which System navigation to use.
- Assign ringtones or photos to friends you call.
- Set your schedule for Do Not Disturb, to automatically silence your phone when you don't want to be interrupted.

Protect your phone

- Set up a screen lock.
- Set up fingerprint security to unlock your screen safely and quickly with a touch.
- In case you lose your phone, set up Find My Device and record your IMEI number.

Other common set up tasks

- Connect with your Bluetooth devices and Wi-Fi networks.
- If you use multiple languages, set them up so they appear on your keyboard.

About your home screen

You see the home screen when you turn on and unlock your phone or touch .

Swipe right or left to move between home screens.

What's on the screen



1. Status bar: Displays the time and icons that tell you about your phone's battery and network connections. Swipe down to see your notifications and quick settings.
2. Widget: You can add widgets to your home screen for quick access to information or frequent tasks.
3. Shortcut: You can add shortcuts to open apps or web pages you use frequently.
4. App tray: Swipe ^ up from the bottom of the screen to see the list of all your apps.
5. Favorites tray: Provides one touch access to your most-used apps from any home screen page. You can customize which apps appear here.
6. Navigation bar: Use gestures to move between apps and screens. You can replace the bar with the navigation icons instead.
7. Folder: Add folders to organize app shortcuts.



1. Status bar: Displays the time and icons that tell you about your phone's battery and network connections. Swipe down to see your notifications and quick settings.
2. Widget: You can add widgets to your home screen for quick access to information or frequent tasks.
3. Shortcut: You can add shortcuts to open apps or web pages you use frequently.
4. App tray: Swipe ^ up from the bottom of the screen to see the list of all your apps.
5. Favorites tray: Provides one touch access to your most-used apps from any home screen page. You can customize which apps appear here.
6. Navigation bar: Use gestures to move between apps and screens. You can replace the bar with the navigation icons instead.
7. Folder: Add folders to organize app shortcuts.

Add/remove screens

You can add more home screens to the right. To add a page, drag an app shortcut or widget to the edge of an existing page and place it on the new screen.

To remove a home screen, drag all apps, shortcuts, widgets, and folders off the screen. After you remove the last item, the home screen will be removed.

Customize your home screen

Organize it:

- Touch & hold an item you want to move, then drag it to the new location.
- Group icons into folders.

Change how you get around: You can replace the navigation bar with the navigation icons.


Change how it looks:

- To see options for customizing wallpaper, styles, widgets, and other home settings, touch & hold a blank space on the home screen.

- For an entirely new look and feel for your home screen, you can install a different launcher.

About your lock screen

The lock screen appears when you're using a screen lock and you power on your phone or turn on the screen.

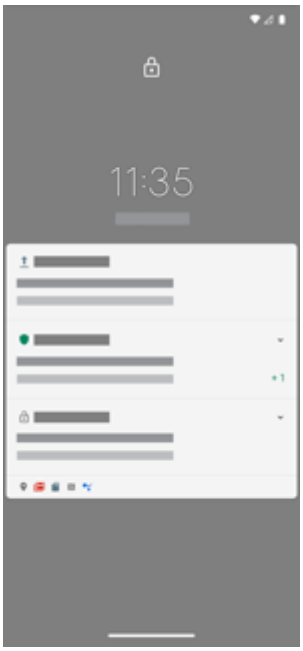

Tip: If you're using Peek Display, you'll see that screen before you get to your lock screen.

What you can do from the lock screen

- Make an emergency call. Swipe up from the bottom of the screen.
- View and respond to notifications. Double touch one to open it.
- Open quick settings. Swipe down from top of screen.
- Start a voice command. Swipe up diagonally from either bottom corner.
- Go into Lockdown. Temporarily turn off notifications and fingerprint unlocking.

You can customize your lock screen to add a message and control which notifications appear.

If this is your first smartphone

Learn the basics

To get around your phone, here are the key concepts.

- You can choose how you move between apps and screens: gestures or ◀ ● ■ icons.
- In addition to tapping the screen to select items, you can use other gestures, such as pinch to zoom.
- The icons at the top of your home screen tell you important stuff at a glance, like your phone's battery level and network connection, and whether you've missed a call.
- Your phone and apps send you notifications for things like new messages, calendar events, and upcoming alarms. You'll find notifications in several places, and can do a lot with them.

To learn about these common tasks, tap one below:

- Answer a call
- Make a call
- Set an alarm
- Turn the flashlight on/off
- Listen to music

Get apps

Your phone comes with many fun and useful apps, but you can really unlock its power by installing apps that suit your lifestyle. Go to Play Store to explore free and paid apps that help you be more productive, organized, informed, in touch, and entertained.

Protect your phone

You carry your phone around with you, and accidents happen; phones get lost sometimes. So set up some security and prevent heartache if you and your phone become separated.

Set up a screen lock. This is your first line of defense in keeping your sensitive information safe. Prefer numbers, shapes, words? Set up a PIN, pattern, or password required to unlock your phone. Learn how.

A screen lock doesn't prevent you from immediately answering a call or accessing your camera.

Display your owner info. On your lock screen, you can discreetly display a "please return" message with some of your contact info so that, if your phone is lost, someone can return it to you. Learn how.

Enable lost phone features. For peace of mind, check out Find My Device, in case you ever need to remotely locate and lock or erase your phone.

Personalize your phone

While changing your wallpaper is probably your first customization, don't stop there. Be sure to explore your Settings to set ringtones, font sizes, data usage preferences, keyboard preferences, and much more. It's a great way to learn many of your phone's capabilities while customizing it to suit your needs.

In most apps you can tap ☰, ⋮, or your profile icon Ⓜ for app-specific settings. Be sure to see what options are available to you there, too.

Manage cellular data

Understand your data usage. Keep an eye on your data usage and learn how to make the most of it. See which apps use large amounts of data and adjust their settings. If your phone is using too much data, you can also stop accounts from auto-syncing.

Use Wi-Fi to conserve cellular data. When you connect to a Wi-Fi network, your data will use that network connection instead of your carrier's network, saving your cellular data for when you need it. Learn how to connect to Wi-Fi networks.

Useful to know

Find phone info. To find your phone number, device name, and other information, go to **Settings** > **About phone**.

Tell your phone what to do. Use your phone hands-free with voice commands. Tell it to navigate you, and listen to it speak the directions to you as you drive--it'll even reroute you if you've gone off course. Tell it to set alarms, find information on the web, make calls.

Never miss a photo opportunity. Automatically open the camera right from your lock screen. Just twist your phone twice. You can automatically back up your photos and videos with your Google account or with other photo sharing apps available from Play Store.

Store your stuff. You have several storage options. Store apps and content on your phone. For more storage space, use an SD card for photos, videos, and music. You can open stored items in associated apps, like Photos to see your photos and videos. For even more storage space, plus the ability to access your media and files from any internet-connected device (phone, computer, tablet), use cloud storage. Your Google account includes free cloud storage on Drive, which has its own app and is also available from the ⋖ menu throughout other apps.

Wi-Fi hotspot. You can use your phone as a Wi-Fi hotspot to share your internet connection with your other devices that need internet access (for example, a laptop or tablet).

Reboot phone. In the unlikely event that your phone becomes unresponsive, frozen, shows a blank or black screen, or doesn't respond to the Power button, you can reboot it. Press & hold the Power button for 7 - 10 seconds. The phone will restart normally.

Certain features, services, and applications are network or carrier dependent and may not be available in all areas.

If you had an iPhone

Welcome to Android! Here are some differences between your old iPhone and your new phone.

Your assistant: You've retired Siri. Now, find info and get things done with Google Assistant. Just set up “Hey, Google”. Then ask for info or help with everyday tasks.

Apps:

- Goodbye Apple App Store, hello Google Play Store. Play Store is now your default app store. Apps aren't compatible between iPhone and Android. However, many developers make iPhone and Android versions of their apps; if the app stores your data online, then you can switch with little effort. Just download the Android version from Play Store and log in.
- Continue listening to podcasts. There are lots of podcast apps on Play Store - search for “podcast” in Play Store and download one of your choice.
- Install apps remotely. On a computer, visit play.google.com. Browse apps on the bigger screen and then install them on your phone from your computer.

Your home screen: Your old phone defaulted to show all apps on your home screen. With your new phone, you can put shortcuts to your most important apps on your customizable home screen for easy access. This frees up room on your home screen for widgets, making your new home much more lively.

In the cloud: Your Google account is your key to cloud storage with Google. If you migrated your contacts to your phone, then you can see them from any device or computer by logging into Gmail. Your Google account includes apps like Calendar and Drive that let you work well with others. And it has apps that let you play too - access your photos, videos, music from any device when you log in with your Google account. Use YT Music to upload your iTunes library. For help signing in to your account, read Google's support information.

File sharing: If you used AirDrop on your iPhone, now you'll use Quick Share to easily share files or links with friends.

About your Google account

Benefits of your account

When you set up your phone, you added a Google account. If you haven't had a Google account before, this is more than just a password you set up for your phone.

A Google account lets you organize and access your personal information and files from any computer or mobile device:

- **Synchronize everything.** Never lose your contacts. Associate them with your Google account if you create contacts on your phone, and view them from Gmail on any computer or by signing into your Google account on any phone. Create emails or calendar events on your phone and view them on any computer. Access your browser bookmarks from any device.
- **Store in the cloud.** Upload your photos, videos, and music to the cloud; get to all of it without taking up space on your phone.
- **Keep your stuff secure.** Your account password secures it all and lets you access it from anywhere.

Maintaining your account

Other than remembering your password, you don’t need to do much maintenance on your Google account - just enjoy the benefits of your secure, synchronized information. However, you can:

- Control how frequently your phone syncs your information.
- Review and manage the information Google collects from you, such as search and browsing history.

Learn about Google apps

Many Google apps, like Gmail, Chrome, Photos, and Maps are preloaded on your phone. To learn about and download additional Google apps, read Google’s help.

Can't sign in to Google account

If you’re having problems signing in to your account, read Google's support information.


Status bar icons

About status icons

The status bar at the top of the home screen contains icons that help you monitor your phone.

- **On the left,** icons tell you about apps, such as new messages or downloads. If you don't know what one of these icons means, swipe the status bar down for details.
- **On the right,** icons tell you about your phone's battery level and network connections.

A dot means there are more icons to view. Drag down from the top of the screen to see all icons.

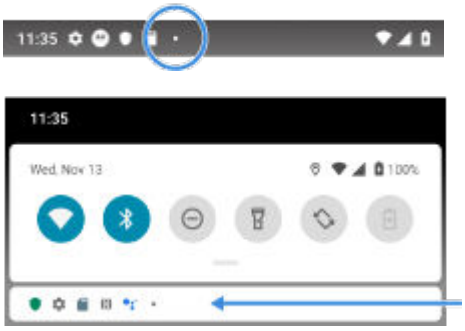

What status icons mean

These are the icons from apps that came on your phone and the phone status icons.

Icon	Meaning
	CALLS
	Active call.
	Missed call.
	Speakerphone on.
	Microphone muted.
	NETWORK

	Connected to cellular/mobile network (full signal). Speed of your network connection is also shown. Possible speeds, from slowest to fastest, are 3G, H, H+, 4G, 5G. Available speeds depend on your carrier and your location.
	Poor connection to cellular/mobile network.
	Connected to different cellular/mobile network (roaming).
	Data Saver is on, preventing apps from using background data.
	Wi-Fi network within range.
	Connected to Wi-Fi network.
	Poor connection to Wi-Fi network.
	No SIM card.
	Location services are in use.
	Airplane mode on.
	CONNECTIVITY
	Bluetooth connected.
	Trusted device connected.
	Your phone is a Wi-Fi hotspot. Devices can connect to share your data connection.
	Wireless display or adaptor connected.



Connected by USB cable.



USB tethering enabled.

SYNC AND UPDATES



App updates are available for download from Play Store.



Email and calendar sync in progress.



Upload complete.



Download complete.



Google backup in progress.



Google backup complete.

SOUND



Vibrate.

DO NOT DISTURB



Do Not Disturb is on.

BATTERY



Battery fully charged.



Battery charging.

	Battery low.
	Phone is in Battery saver mode.
	ALARM AND CALENDAR
	Alarm set.
	Upcoming calendar event.
	EMAIL AND MESSAGING
	New Gmail message.
	New text message.
	New voicemail.
	Important alert.
	OTHER ICONS
	Screenshot is available.
	Focus mode is on.

Apps that you download might show other icons to alert you about their status.

Certain features, services, and applications are network or carrier dependent and may not be available in all areas.

Phone terms you should know

Airplane mode
This mode allows you to use your phone's non-wireless functions (music, games, etc.), while disabling its wireless radio functions that are banned on airplanes during flight.

app
Software that you can download for added functionality, such as games, email apps, bar code scanners and more. Some apps are already on your phone, and more can be downloaded from your phone's app store.

Bluetooth™
A short-range wireless technology you can use to connect a device to other nearby Bluetooth-capable devices and accessories, such as headsets, speakers, printers, etc. Use Bluetooth to make handsfree calls on a headset or in your car, listen to music on wireless speakers, use a wireless mouse or keyboard, or print a document in another room. Set up Bluetooth.

cellular network or mobile network
A network of radio-transmitting towers. You make calls on your phone using radio waves sent between the phone and the network towers. You also send data and access the Internet on this network. Carriers use different technologies to handle these radio transmissions (GSM, CDMA, Edge, 3G, 4G, LTE, HSPA, iDEN).

data
Information sent or received from your phone other than calls and text messages. You may use data when you access the internet, check your email, play games, use apps and more. Background tasks, such as syncing or location services, may also use data.

data usage
The amount of data your phone uploads or downloads over a network in a given period. Your phone uses your carrier's cellular network or over a Wi-Fi network. Depending on your plan with your carrier, you may be charged additional fees when your data usage exceeds your plan's monthly limits.

GPS
Global Positioning System. A global satellite-based system for determining precise locations on Earth.With GPS, your phone becomes your navigator when you're driving and your concierge when you're looking for a nearby meal, movie, or cup of coffee.

mobile hotspot
A device or app that lets you share your mobile data connection with multiple devices via Wi-Fi. You can connect different devices to your hotspot, including notebooks, netbooks, MP3 players, cameras, Smartphones, and portable gaming systems. The number of devices that can connect at one time depends on your carrier and connection speed.

NFC
Near-field communication. A wireless technology that transfers information between two compatible devices. Your phone doesn't support NFC.

notification
An alert from your phone or an app on your phone. Your phone displays icons in the status bar to notify you of new messages, calendar events and alarms. Icons can also indicate ongoing status, such as connection to a Wi-Fi network.

Play Store
Google's store where you can download apps, books, movies, and music. Choose from an assortment of free books or apps; purchase from an even larger selection.

SD card
Secure Digital (SD) card. A small, high-capacity removable memory card used in small, portable devices such as mobile phones, tablets, and digital cameras.

shortcut
An icon you can add to your home screen that lets you quickly open an app. Create shortcuts for apps you use frequently.

SIM card
Subscriber Identity Module (SIM) card. A card that securely stores information your carrier uses to authenticate your phone on the cellular network.

software update
An update to your phone's operating system that typically includes new features and fixes reported problems. The update is wirelessly downloaded to your phone at no additional cost to you.

status bar
Thin bar at the top of your home screen that displays the time and icons that tell you about your phone's battery and network connections. Apps display icons in the status bar to alert you of events, such as new messages.

sync
The process of sharing the same information across multiple devices and websites. Contacts, calendars and email are often synced through cloud services, so you can enter information on one device and access it through another.

widget
An element you can add to your home screen that gives you quick access to information or frequent tasks. For example, widgets can provide weather updates, upcoming calendar events. Many are preinstalled on your phone. Apps you download may also include widgets.

Wi-Fi
A short-range wireless technology that provides a high-speed internet connection to wireless data devices. Many locations offer Wi-Fi connections, including airports, hotels, restaurants and more. Using a Wi-Fi connection instead of your cellular network can help reduce your cellular data usage. Some public Wi-Fi connections may not be secure. You should only connect to those you trust and use some form of internet security on your devices. Set up Wi-Fi.

Certain features, services, and applications are network or carrier dependent and may not be available in all areas.

Learn gestures

You can use gestures on your screen to move between apps and choose or manipulate items.

There are also gestures, which you can turn on/off, to perform everyday tasks like screenshots or turning on the flashlight.

Tap, drag, swipe, zoom

Gesture	Description
Tap	Press briefly with one finger and lift. Result: Open something (app or email) or choose something (checkbox, icon).
Touch & hold	Press and wait before lifting one finger. Result: Select something (app icon, text on a page) and see possible actions. Try it: Touch & hold text on this page to see the copy feature.
Drag	Touch & hold an item and then, without lifting, slide your finger until you reach the target position. Result: Move elements on the screen; for example, change a toggle from on  to off . Try it: Drag an app shortcut from one spot on your home screen to another.
Swipe	Quickly move one finger across the screen, without pausing when you first touch (so you don’t drag instead). Result: Switch between home screens or between tabs in an app. Or, move quickly through a list. You can swipe different directions (up, down, left/right) for different results. Learn more. Try it: Open the Phone app and swipe left/right to switch between tabs. Or, swipe up from the bottom of this screen to go home.
Pinch out to zoom	Put two fingers on the screen and then drag them apart. Result: Zoom in to see larger version of photos and maps. Or, open expandable notifications. Try it: Open a photo and pinch out to zoom in on an area.

Tip: If you have visual impairments, you can enable additional magnification gestures.

Pinch in to zoom	Put two fingers on the screen, far apart, and then drag them together. Result: Zoom out to see smaller version of photos or maps. Or, close expandable notifications.

Press Power button twice

Press the Power button twice to open Google Assistant.

You can customize settings to open the camera instead.

Move between apps and screens

Choose how to get around

You can change how you move between apps and screens: **Settings** > **System** > **Gestures** > **System navigation**.

Use gesture navigation

Use these gestures to move between screens and apps if you chose Gesture navigation and see ——— at the bottom of your home screen.

Action	Gesture to use
Switch between apps	At the very bottom of the screen, swipe left or right.
See all recent apps	Drag up from the bottom, hold, then let go.
See all apps	Swipe up from the bottom of the **home** screen.
Go back	Swipe towards the middle from the left or right edge of any screen.
Go home	Swipe up from the bottom of any screen.
Open Google Assistant	Swipe diagonally from either lower corner of the screen.

Use 3-button navigation ◀ ● ■

Use these icons to move between screens and apps if you chose 3-button navigation.

◀ takes you back one screen.

● returns you to the home screen from any app.

■ lets you switch between recent apps.


Tip: For visual assistance, you can add to open the Accessibility Menu.

Use quick settings

Open quick settings

Settings you adjust frequently, like Bluetooth, are “quick settings”, easy to get to from any screen.

To see your first few quick settings, swipe down once from the top of your screen.

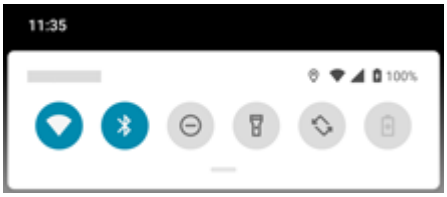

To see all quick settings, swipe down again.

Adjust quick settings

To adjust screen brightness, slide .

To adjust other settings:

- **Tap** an icon to toggle the setting on or off .
- **Touch & hold** an icon to adjust related settings.

Icon	Setting
	Wi-Fi
	Bluetooth
	Do Not Disturb
	Auto-rotate



Moto Audio



Flashlight



Airplane mode



Wi-Fi hotspot (Appears after you turn on hotspot the first time.)



Battery saver



Mobile data



Screen Cast



Data Saver (Appears after you turn on Data Saver the first time.)



Night Light (Appears after you turn on Night Light the first time.)



Bedtime mode (Appears after you turn on Bedtime mode the first time.)



Color inversion (Appears after you turn on Color inversion the first time.)

Open all settings

To open the full list of all settings:

- Open quick settings and tap .
- Or, open the **Settings** app.

Tip: Search the Settings app to find what you need quickly. Just tap at the top of the app and type your search term.

Customize quick settings

Add, remove, rearrange quick settings

You can rearrange quick settings, putting your most used at the top. You can also add or remove them.

1. Open quick settings.
2. Tap .
3. Drag to add, remove, or rearrange.

To return quick settings to its original state, tap > **Reset**.

Tip: You can also change the background color to be light or dark.

Turn screen off and on

Why your screen turns off automatically

- **To save battery power,** your screen turns off if you haven't used it for some time. You can lengthen or shorten the time before your screen automatically turns off.

  You can also use Attentive Display to keep your screen from turning off when you're looking at it.
- **When you bring the phone to your face to speak into it during calls**, the screen turns off to prevent accidental touches. When you pull the phone away from your face, the screen turns on so you can use it. (If the screen stays dark, follow these steps.)

Turn screen off and on manually

To turn the screen off:

- Press the Power button. When you set down your phone, it's good habit to do this. You prevent accidental touches, save a bit of battery, and keep it secure with the screen lock.
- To keep your screen off and phone quiet when you don't want interruptions, like at night, use Do Not Disturb settings.

When your screen is off, battery-friendly Peek Display notifications fade in and out, showing only notifications delivered since the screen was last on.

To turn the screen on:

- Press the Power button. If you've set up a screen lock, you need to unlock it.
- If you've added your fingerprint to the phone, touch the sensor to wake and unlock your phone.
- Your screen automatically turns on when you have an incoming call.

Take screenshots

Take a screenshot

You can take a screenshot a few ways. Use the one most convenient for you.

1. When you're on the screen you want to capture, choose one:
   - Touch & hold three fingers on the screen. (If this doesn't work, turn **Use Three finger screenshot** on.)



   - Press & hold the Power button, then touch **Screenshot**.
   - Press & hold Power + Volume Down simultaneously until the screen is captured.
2. To scroll and capture more content, tap .

   To stop scrolling before the end of the page, tap **STOP** or .
3. Do any of the following:
   - To edit the screenshot, tap .
   - To share it, tap .
   - To analyze it with Google Lens, tap .
   - To delete it, tap .
   - For more time to review it before taking an action, tap the thumbnail to open the screenshot.
   - To open the screenshot after the thumbnail disappears, swipe the status bar down and touch the notification.

Edit screenshots

If you tapped after taking the screenshot, you have these options:

- To crop the screenshot, tap . To switch between standard, circular, or freeform, tap again.
- To change tools, tap to draw, to write, or to erase. Tap the icon again to adjust related options, like stroke thickness, color, and pattern.

- Tap to undo and to redo a change.
- Tap **Done** > **Discard** to close without saving, or tap **Done** > **Save**.

Find screenshots later

Open the Photos app and tap **Collections** > **Screenshots**.

Turn flashlight on and off

To turn your flashlight on or off:

- Open quick settings and tap .
- Or, make a chopping motion.

If the camera opens instead of turning on the flashlight, be sure to use a chop gesture, not a twist gesture.

To control the chop gesture:

1. Go to **Settings** > **System** > **Gestures**.

   Or, open the **Moto** app and tap > **Moto Actions**.

2. Tap **Fast flashlight** and turn it on or off.

Control phone with your voice

Speak a command

Not all languages support voice commands.

Tell your phone to call people, get directions, send messages, set alarms. The possibilities are enormous.

1. From the home screen or when you've started a search, say “OK, Google.”
2. When the phone responds, say the command (for example, “Call Elise” or “Set alarm for 7 AM tomorrow”).

   Tip: To see a list of commands, say “Help.”

3. Some commands cause your phone to speak a response to you. To stop the phone from speaking, tap .

You can use voice commands from the Peek Display screen, if you turn Google Assistant on in settings. Learn more.

Train launch phrase

1. Open the Google app, then tap your profile icon > **Settings** > **Google Assistant** > **Hey Google & Voice Match**.
2. Turn on **Hey Google** and follow the onscreen instructions to record your voice.

Fix an issue

If your phone isn't recognizing “Hey, Google” commands:

1. Is Battery saver on?

   If it's on, you need to get your assistant's attention by touch instead of voice, or turn off Battery saver.

   If it's off, then follow the remaining steps.
2. Open the Google app.
3. Tap your profile icon > **Settings** > **Google Assistant**.
4. Tap **Hey Google & Voice Match**.
5. Tap the option to retrain your voice model.

Get directions to a location

Navigation and battery life

Navigation is one of the most power-intensive apps, so when possible keep your phone plugged into a high-quality charger, especially if you're streaming music and/or using Bluetooth (also power-intensive features).

Get turn-by-turn directions with voice readout

Follow directions on a map in real-time, with or without voice readout. Get traffic updates and rerouted around issues on the way to your destination.

1. Be sure you set up voice commands.
2. Say “OK, Google” or “Hey, Google.”
3. Say “Navigate to [destination].”

   You can say the name of a place or give an address.

To learn about setting a time of arrival, seeing street view, and other features, read Google's help.

Add Directions shortcut to home screen

Use the Directions widget to create a home screen shortcut to your destination before you leave. When you're ready to travel, tap the shortcut, and your phone will navigate to the destination.

1. Touch & hold a blank space on your home screen and tap **Widgets**.
2. Scroll to **Maps** and tap .
3. Touch and hold the **Directions** shortcut, then drag it to your home screen.
4. Enter the destination and shortcut name, then select any other options and tap **Save**.

Tip: Organize your Directions shortcuts into a folder on your home screen.

Get directions to home or work

Get directions from anywhere to your home or work addresses with one touch by setting up a task shortcut for the Maps app:

1. Touch & hold .
2. Drag to a blank space on your home screen.
3. If you haven't set your home or work address yet in Maps, touch the shortcut and follow the onscreen instructions to add it.

When you're ready to roll, just touch the shortcut, and your phone will talk you through the directions.

Use Time and Weather widget

Add Time and Weather widget to home screen

Put a clock on your home screen and get quick access to alarms, your calendar, and the weather.



1. Touch & hold the home screen.
2. Tap **Widgets**.
3. Touch & hold the **Time and Weather** widget, then drag it to the home screen.

Customize and use the widget

Resize it

Touch and hold the widget to show its frame, then drag a side. Some widgets show more information when you expand their size.

Move it

Touch & hold the widget, then drag it around your screen or to a new panel. Release to place it.

Quickly access alarms, calendar, and weather

For alarms, tap the **time** to open the Alarm tab in the Clock app. Tap other tabs to use the timer or stopwatch. Learn more about alarms.

To open the Calendar, tap the **current date**. You can view or add events.

For weather information, tap **Add cities** or your current weather conditions in order to:

- Turn on location to track the weather wherever you are.
- Add cities, locations, and regions to track their weather.
- View weather forecasts and other information.
- Adjust other weather settings, including notifications. In your weather app, look for onscreen instructions, or tap ☰ or ⚙ for settings and help.

Add other clock and weather widgets

Other apps offer their own widgets you can add to your home screen, in addition to the Time and Weather.

1. Touch & hold the home screen.

2. Tap **Widgets**, then:
    - Tap **Clock** for a stopwatch or other types of time widgets.
    - Tap your weather app for other types of weather widgets.
3. Touch & hold the widget you want to add, then drag it to your home screen and release.
4. Follow screen instructions to customize the widget

For other widgets, search for “clock widget” or “weather widget” in and install one.

Manage how you spend time on your phone

Set up Digital Wellbeing

You can get info about how you spend time on your phone, like how often you unlock it and how long you use each app. Then use that info to improve your digital habits.

The first time you use this feature:

1. Go to **Settings** > **Digital Wellbeing & parental controls**.
2. If you want to find this feature as an app, rather than opening Settings, turn on **Show icon in the app list**.

Understand your habits

1. Go to **Settings** > **Digital Wellbeing & parental controls**.
2. Review the chart to see:
   - Time you spent using phone today
   - Which apps you've had on screen and for how long
   - How often you unlocked the phone today
   - How many notifications you've gotten
3. For more information, touch a label on the chart. For example, to see your screen time for the week, touch today's usage time.

Limit daily screen time

For individual apps, you can set a timer that limits the amount you use the app daily.

Tip: To manage your child's screen time, use parental controls.

To set an app timer:

1. Go to **Settings** > **Digital Wellbeing & parental controls**.

   Or, **Settings** > **Apps & notifications** > **Screen time**.
2. Next to the app you want to limit, touch  and tap the chart.
3. Set the total time that you can use the app per day.

When you reach your time limit in an app:

- The app closes.
- Its icon dims and no longer opens the app.

The app timer resets at midnight. To use the app before midnight, go back to the timer in **Settings** and extend its time or delete the timer.

Pause distracting apps to focus

Use Focus mode to pause selected apps for fewer distractions.

1. Go to **Settings** > **Digital Wellbeing & parental controls** > **Focus mode**.
2. Mark apps you want to pause.
3. Do one of the following:
   - To turn it on, touch **Turn on now**.
   - To have it turn on automatically, touch **Set a schedule**, then select days of the week and start/end times.

When Focus mode is on:

- You'll see in the status bar.
- You won't be able to use the selected apps and won't get notifications from them.

Tip: To add Focus mode to quick settings, open quick settings, touch , then drag the tile where you want it.

To turn Focus mode off:

- Open quick settings and touch .
- Or, on the notification, touch **Turn off now**. (To turn it off for a short period, touch **Take a break**.)

To remove the schedule:

1. Do one of the following:
   - Open quick settings, then touch & hold .
   - Go to **Settings** > **Digital Wellbeing & parental controls** > **Focus mode**.
2. Next to Schedule, touch .

Tip: To mute sounds, stop vibration, and block notifications for all calls and notifications, use Do Not Disturb.

Make it easier to put your phone away at bedtime

You can schedule changes to get ready for sleep.

1. Go to **Settings** > **Digital Wellbeing & parental controls** > **Bedtime mode**.
2. Select when to turn on **Bedtime mode**.
3. Adjust start and end times if needed.
4. Touch **Customize** to set what your phone should do during this scheduled time:
   - Silence your phone (turn on **Do Not Disturb**).
   - Use grayscale or dimmed color and light (touch **Screen options at bedtime**).

Use parental controls

You can:

- Control your child’s access to devices and apps
- Control location settings and view the location of your child’s supervised device
- Set daily usage limits, monitor app usage, and remotely lock supervised devices
- Set filters and controls on what your child can browse, purchase, or download using Chrome, Google Search, Play Store, and YouTube

You’ll need to set up parental controls on your and your child's devices.

To set up parental controls on this phone:

1. Go to **Settings** > **Digital Wellbeing & parental controls**.
2. Touch **Set up parental controls**.
3. Follow onscreen instructions to set up the phone for child or adult usage.
4. To set up parental controls on the other device, refer to the help for that device.

To learn more, read Google's help.

Use onscreen keyboard

Open, close, rotate keyboard

To open the keyboard, just touch an area where you can enter text or numbers.

To close the keyboard so you can see other parts of the screen, tap .

For a larger keyboard, turn your phone horizontally. (If your screen doesn't rotate, check your auto-rotate setting.) You can also resize the keyboard to give yourself extra space for more accurate typing.

Tip: If you installed multiple keyboards, you'll see next to the navigation buttons when you're typing. To switch to a different keyboard, touch .

Type special characters

Touch & hold a key to see related special characters. For example:

- Touch & hold **.** to see other punctuation marks.
- Touch & hold **e** to see **ê**, **é**, **è**, and **ë**.

Tip: To insert a period followed by a space, tap the spacebar twice quickly.

Capitalize letters

To type in ALL CAPS, touch twice, quickly, so you see . Touch it once more to turn ALL CAPS off.

To change capitalization of a word you've already typed:

1. Select the word.
2. Touch until you see the capitalization you want: first letter only, ALL CAPS, or lowercase.

Use glide typing

You have two options for entering text: type one letter at a time (multi-touch typing) or slide your finger through all the letters in a word using one continuous motion (glide typing). Start typing either way and switch whenever you like.

When you're using glide typing, you can:

- **Type a word.** Drag your finger over the letters in the word.
- **Enter apostrophes in common words.** Drag through the letters and the apostrophe is automatically inserted.
- **Add a space.** There's no need to use the space bar. Just lift your finger and start the next word.

You can disable glide typing.

Get suggestions

Use suggestions to type faster.

When you're typing, you'll see a list of suggested next words above the keys:

- Touch a word in the list to insert it in your text.
- If you don’t like a suggested word, touch & hold it, then drag it to .

You can limit or turn suggestions off.

Spell check and auto correct

Misspelled words are automatically corrected as you type.

To prevent that word from being auto-corrected again, add it to your dictionary by touching the word in the list of suggestions above the keys.

If auto-correction is turned off, you can still check spelling:

1. After you're done typing, review your text; misspelled words (and words not in your dictionary) are underlined.
2. Touch an underlined word:
    - If the word is spelled correctly, touch it in the suggestion bar.
    - If the word is misspelled, select the correct word in the suggestion bar or type the correction.

Type in multiple languages

If you have added multiple languages as a system language in your phone settings, keyboards and text suggestion are available for those languages:

- When using a keyboard language other than your primary system language, available keyboard languages are shown on the spacebar.
- To toggle between languages, touch .
- To see a list of available keyboards, touch & hold or the spacebar.

You can add keyboards for other languages.

Cut, copy, paste text

You can select and copy text from web pages and messages.

1. To select text, touch & hold a word.
2. Touch **Copy**, **Cut**, **Share**, **Select all** or:
   - Select more text. Drag the sliders .
   - Get information about selected text. Touch **Web Search**.
   - Translate selected text. Touch **Translate**. (If you don't see this option, install the Google Translate app.)
3. To paste text, touch to insert at the cursor or select a block of text to replace. Then touch **Paste**.

Tips:

- In some apps, you need to double-tap a word to select it (instead of touching & holding it).
- When you use **Copy**, the text is copied to the clipboard in your phone's memory, overwriting previous text in the clipboard. If you want to save and manage everything you copy into the clipboard, search for “clipboard manager” in Play Store to select and download an app.

Use voice typing

1. Touch a text field to show the onscreen keyboard.
2. Touch on the onscreen keyboard.
3. Say what you want to type:
   - Speak naturally but clearly. There's no need to shout or hold the phone close to your mouth.
   - To include punctuation, say “comma,” “period,” “question mark,” or “exclamation point.”
   - To pause or restart, touch .
   - To delete a word, touch .

Fill in forms automatically

Don’t retype your personal information again and again. Save it securely, then with just one touch, fill in passwords, addresses, credit cards, and other information saved to your Google account.

To set it up:

1. Go to **Settings** > **Privacy** > **Advanced** > **Autofill service from Google**.

   Or, **Settings** > **System** > **Languages & input** > **Advanced** > **Autofill service** > ⚙.

2. Tap categories to review and edit personal information, addresses, credit cards, and passwords.

Change wallpaper

You can change the background image on your home screen or lock screen.

Set the wallpaper

1. Open the **Wallpapers** app.
2. Do one of the following:
   - To set a single wallpaper, select a photo or wallpaper.
   - To use an animated background, select a dynamic wallpaper. Many dynamic wallpapers include settings. Look for or to set options.
   - To see a new wallpaper each day, open a category and touch **Daily wallpaper** > **Continue**.
3. Tap or **Set**.
4. Select whether you want to use the wallpaper on your home screen, lock screen, or both.

If your photo is too large
Open the photo and take a screenshot of it. Then edit the screenshot as needed and set it as the wallpaper.

If you selected a dynamic wallpaper

If your battery is low, temporarily change wallpaper to a static image to save power.

If you selected Daily wallpaper

To skip a daily wallpaper, open the Wallpapers app and touch on your current daily wallpaper image.

Customize your Favorites tray

The Favorites tray at the bottom of your home screen gives you quick access to your most-used apps. You can customize the shortcuts in this tray.



Change the app shortcuts

1. Touch & hold one of the app shortcuts, then drag it up and drop it on **Remove**.
2. Swipe up from the bottom of the home screen to open your app list.
3. Touch & hold the app you want. When the new shortcut appears, drag it to the empty spot in your tray.

Tip: You can also use folders in your Favorites tray.

Fix an issue

If your icons are being replaced by icons you haven't selected and you don't want them to change, turn off app suggestions.

Use widgets, shortcuts, or folders

Add widgets

Widgets stream information, giving some of an app's functionality without opening the app. For example, the Calendar widget shows your daily agenda and gives you one-touch access to your full calendar.

Add widget

1. Touch & hold the home screen.
2. Tap **Widgets**.

   Widgets are listed under their related apps.
3. Touch & hold a widget to add it.

Adjust widget's size

You can make some widgets larger to view more content:

1. Touch & hold the widget until it's highlighted.
2. Release it to see an outline.
3. Drag a corner or side to resize.

Add shortcuts

On your home screen, you can add shortcuts to apps, so you don't have to open the tray and sort through all of your apps, shortcuts to common tasks, and shortcuts to open specific web pages.

Add app shortcuts

1. Swipe up from the bottom of the home screen to open your app tray.
2. Touch & hold the app you want.
3. Drag the app to an empty spot on your home screen. Or, drag it to the edge of the screen and drop it onto a new home screen.

Add task shortcuts

Many apps include shortcuts to common tasks, so you don't have to open and navigate the app.

1. Touch & hold an app icon to see available task shortcuts.
2. Do one of the following:
   - To perform the task, tap it.
   - To create a shortcut for that task, drag ═ to an empty space on your homescreen.

Here are examples of task shortcuts for various apps. Not all apps include task shortcuts.

App	Task shortcuts

Gmail	• Compose new email • Open to specific account
Maps	• Navigate to Work • Navigate to Home
YouTube	• Search • Subscriptions • Explore
Chrome	• New incognito tab • New tab
Calendar	• New reminder • New event • New task
Messages	• Open most recent conversation • New conversation
Clock	• Start screen saver • Start stopwatch • Create new timer • Create new alarm
Settings	• Battery • Data usage • Wi-Fi

Add web page shortcuts

1. Open the **Chrome** app.
2. Navigate to the web page.
3. Tap > **Add to Home screen**.
4. Edit the name if desired.

5. Tap **Add**.
6. Do one of the following:
   - Touch & hold the icon to drag it where you want on the home screen.
   - Tap **Add automatically**.

Add folders

Folders organize your shortcuts.

Home screen folders

To create a folder on your home screen:

1. Touch & hold an app shortcut on your home screen.
2. Drag it onto another to group them together, then release when you see a frame around them.



3. To name the folder, touch to open it, then touch its name and type a new name.

To add apps to the folder:

1. Touch & hold the app's icon.
2. Drag it onto the folder.

To remove apps from the folder:

1. Open the home screen folder.
2. Drag the app's icon onto the home screen, or drag it up and drop it on **Remove**.

Remove widgets, shortcuts, or folders

To remove items from your home screen:

1. Touch & hold it until it vibrates.
2. Drag it to **Remove**.

App icons on the home screen are **shortcuts** to installed apps found in the app tray. Removing an app shortcut from the home screen doesn't uninstall the app. Learn how to uninstall apps.

To select a totally new user interface for your home screen, download a different launcher.

Arrange apps and control icon's look

Add/remove app suggestions

If you want your phone use AI to predict which app you'll want to use next, based on your usage patterns, you can show suggested apps:

1. Touch & hold a blank space on your home screen.
2. Touch **Home settings**.
3. Touch **Suggestions**.
4. Turn suggestions on or off for your app tray and for the bottom of the home screen.

Adjust icon size and names

You can make the app icons on your home screen and in the app tray larger or smaller. You can also remove or expand the names below the icon.

1. Touch & hold a blank space on your home screen.
2. Tap **Home settings**.
3. Adjust settings:
   - To make the icons smaller or larger, tap **Icon size** and move the slider to choose a size.
   - To remove the names below the icons, tap **App label** > **Don't show**.
   - To restore the names below the icons, tap **App label** > **2 rows** (full names) or **1 row** (short names).

Show or hide notification dots

You can control whether app icons show dots to alert you about unread notifications.



1. Touch & hold a blank space on your home screen.
2. Tap **Home settings**.
3. Tap **Notification dots**.
4. Turn **Allow notification dots** on or off.

Home screen rotation lock

When when you enable Auto-rotate, app screens will rotate with your phone's orientation. You can keep your home screen from rotating while other apps auto-rotate.

1. Touch & hold a blank space on your home screen.
2. Tap **Home settings**.
3. Turn **Allow Home screen rotation** on or off .

Remove Google feed

When you swipe to the farthest-left home screen, you'll see the Google news feed. To remove it:

1. Touch & hold a blank space on your home screen.
2. Tap **Home settings**.
3. Tap **Swipe Access** > **Nothing**.

   To add the feed back again, change **Swipe Access** to **Google feed**.

Remake your home screen with launchers

About launchers

A launcher app is what makes your home screen look the way it does and controls how you organize and interact with your apps. The launcher that came with your phone puts the Google search widget and a clock widget on the home screen. See what that home screen looks like and how you can customize it.

To totally change the look and feel of your home screen, you'll need to download a new launcher and update your settings to use it. Launchers often come with new wallpapers, gestures to interact with your phone, and customizable elements for your home screen.

You can always go back to the original launcher and home screen.

Get different launcher

1. Search for "launcher" in Play Store.
2. Read through the choices and download the one (or more) that you want.
3. To start using it, open the app or follow the onscreen instructions after downloading it.

Switch between launchers

1. Go to **Settings** > **Apps & notifications**.
2. Tap **Default apps** > **Home app**.

   Or, tap **Advanced** > **Default apps** > **Home app**.
3. Select the launcher you want to use.
4. If the launcher has adjustable settings, tap to change them.

Delete launchers

You can only delete launchers that you installed.

Touch & hold the launcher's app icon, then tap > **Uninstall**.

Use a screen saver

Set up screen saver

While your phone is idle on a dock or charger, turn it into a desk clock, a photo frame to show off your pics, or more.

1. Go to **Settings** > **Display** > **Advanced**.
2. Tap **Screen saver**.
3. Do any of the following:
   - To change screen savers, tap **Current screen saver**, then select one. To set options for that screen saver, tap ⚙.
   - To preview your selection, tap **Start now**. Tap the screen anywhere (unlock if necessary) to return to settings.
   - To adjust when the screen saver starts (while docked, charging, or either), tap **When to start**.

Start screen saver

The screen saver automatically starts when you connect your phone to a dock or charger and the screen turns off.

To exit the screen saver and return to your home or lock screen:

- Press the Power button.
- Or, if you're using fingerprint security, touch the sensor.

To manually start your screen saver any time, go to **Settings** > **Display** > **Advanced** > **Screen saver** and touch **Start now**.

Turn off screen saver

To prevent the screen saver from starting automatically:

1. Go to **Settings** > **Display** > **Advanced**.
2. Tap **Screen saver** > **When to start** > **Never**.

Add screen savers

Search for “Screen saver” in Play Store for apps that give you more.

After you install an app, you can select the new ones in **Settings** > **Display** > **Advanced** > **Screen saver**.

Open, close, switch apps

Open and close apps

To open an app, swipe up from the bottom of your home screen, then touch the app.

You don't need to close apps. Android manages the memory and battery that apps use, so you don't need to worry about leaving apps open.

To close one app, drag up from the bottom of the screen, hold, then let go. In your recent apps, swipe up on the app.

To close all apps, drag up from the bottom of the screen, hold, then let go. In your recent apps, swipe right until you see the start of the list, then touch **Clear all**.

Switch between open apps

1. Drag up from the bottom of the home screen, hold, then let go.
2. In your list of recent apps:
   - Swipe left or right to see more apps.
   - Touch any app screen to return to it.

Tips:

- To switch between apps, swipe left or right at the very bottom of the screen.
- Use two apps at once with split screen.

See two apps at the same time

Depending on the app, you can sometimes use more than one app at once. You can also watch a video in a small window while you do other things.

Use two apps at once (split screen)

Split the screen

1. Open the first app.
2. Drag up from the bottom of the home screen, hold, then release.
3. In the list of recent apps, tap the app's icon at the top of the preview to see and .

   Be sure to tap the app's **icon** instead of the screen preview, which opens the app.
4. Tap **Split screen**.
5. Select the second app to use.

Exit split screen view

Drag the divider line all the way up or down.

See one app while using another (Picture-in-picture)

With some apps, you can watch video in a small, movable frame while you do other things. Use it when navigating with Google Maps, too.

1. When you're playing a video or navigating with Maps, go to the home screen or app you want to use.

   The video (or navigation) shrinks.
2. You can drag the video (or navigation) anywhere on the screen.
   - To return it to full size, tap it twice.
   - To close it, drag it to the bottom of the screen. Or, tap it, then tap .

Turn off Picture-in-picture for an app

1. Go to **Settings** > **Apps & notifications**.
2. Tap **Advanced** > **Special app access** > **Picture-in-picture**.
3. Tap the app.
4. Turn **Allow picture-in-picture** off .


View notifications

Find your notifications

Apps send you notifications to let you know about new messages, calendar events, and alarms.

You can check your notifications from a few places:

- They appear on your lock screen.
- You see them when you swipe the status bar down on any screen.

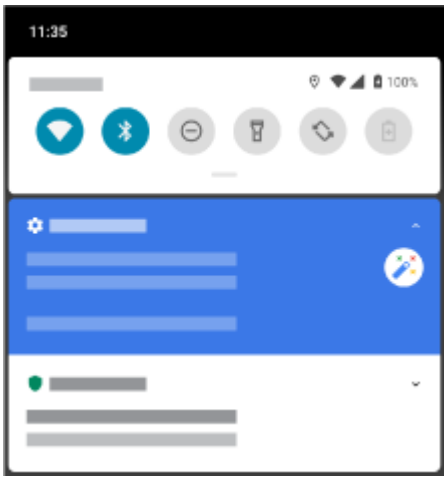

If you get multiple notifications from an app, they'll be grouped together. You can swipe down to view more details.

Some important notifications will pop up over your current app so you can take action. For example, if you get a call while you're watching a video, a notification will appear so you can answer or ignore the call.

If an app icon has a notification dot, you can touch & hold it to see the most recent notification:



Swipe fingerprint for notifications

You can set the fingerprint sensor to open your notifications and quick settings when you swipe it.

Set it up

1. Go to **Settings** > **System** > **Gestures**.
2. Touch **Swipe fingerprint for notifications** and turn it on .

Use it

Swipe down on the fingerprint sensor:

- Swipe once to view notifications.
- Swipe again to view quick settings.

What you can do with lock screen and status bar notifications

Respond from a notification

Many notifications include actions at the bottom that let you complete common tasks without opening the full app. If you have several notifications, these actions are hidden. When you see ⌄, tap it to reveal actions like **Reply**, **Archive**, and more.

Open the app that sent the notification

Swipe down from the top of the screen and tap the notification to open its app.

From the lock screen, tap the notification twice and enter your PIN, pattern, or password to unlock your screen and open the app.

Snooze a notification

Tap ⌄. Then tap ⏰ and select a duration to snooze notifications. To snooze notifications, first turn on snoozing.

Dismiss a notification

Swipe it sideways. Some notifications, like voicemails, require an action and cannot be dismissed.

Dismiss all notifications

Swipe to the end of your notifications and tap **Clear all**.

Control how and when apps send notifications

Use Do Not Disturb to silence all notifications when you don’t want interruptions.

Touch & hold a notification to customize that app's notifications. Then you can:

- Stop all notifications from that app.
- Change the app's notifications to be **Silent** instead of **Alerting**.

About preloaded apps

Apps that came with your phone

The following apps may be pre-installed on your phone.

Don’t want some? Delete or disable them. Need other apps? You can download free and paid apps.

Icon	App	Description
	Assistant	Use your voice to control your phone.
	Calculator	Make some quick calculations.
	Calendar	Keep track of your upcoming events, get automatic reminders on your phone, and coordinate with others by sharing calendars.
	Camera	Capture photos or videos. To learn more, read the Camera app's help.
	Chrome	Browse the web. Access your browser bookmarks from any device, and sync tabs with your computer or Android devices.
	Clock	Set alarms. Use a timer or stopwatch.
	Contacts	Organize and connect with your contacts. Assign ringtones to people.

	Docs	Create, edit, and collaborate with others on documents.
	Drive	Store and synchronize your files on Google's cloud, then access them anywhere you have an internet connection. Create and share spreadsheets, documents, and presentations. Scan documents and share or print them.
	Facebook	Connect with friends, family, and communities. Share updates and media. Find information on events, entertainment, and businesses.
	Files	Browse and manage files and folders stored on your device or SD card.
	FM Radio	Listen to FM radio stations. Not available in France or Italy. (Get the app in Play Store if not preloaded.) To learn more, open the app and tap ☰ > **Help**.
	Gmail	Compose, send, view, or search your email from your phone or computer.
	Google	Search the web, see your updates, and adjust Google settings, including privacy.
	Google One	Get expanded storage, Google support, and other member benefits with a paid subscription.
	Google Pay	Pay with your phone in-store or online, and send cash using this secure digital wallet.
	Google TV	Get movies and TV shows for instant viewing from Play Store. (Not available in all countries.)

	Home	Set up and control your Google Home and Chromecast devices, and other home products like lights, cameras, and thermostats.
	Keep Notes	Create and share notes, lists, and reminders.
	Maps	Find your destination, explore locations.
	Meet	Make video calls with your friends across Android and iOS.
	Messages	Send and receive text messages.
	Moto	Select available gestures for phone shortcuts and control notifications.
	Moto Audio	Get premium, adjustable audio for movies, music, games, and voice.
	News	See headlines, weather, and information on your favorite topics and locations.
	Phone	Make calls.

	Photos	Manage photos and upload them automatically to your private album.
	Play Store	Get apps for your phone, as well as books, magazines, music, and movies and access them from your computer or any Android device.
	Settings	Customize your phone settings.
	Sheets	Create, edit, and collaborate with others on spreadsheets.
	Slides	Create, edit, collaborate with others, and play presentations.
	Wallpapers	Change your wallpaper, get new ones, or automatically show a new one every day.
	YouTube	Find, view, and upload videos to the web.
	YT Music	Stream your favorite albums, singles, and live performances, and get recommendations for new music.

Get help using an app

1. Open the app.
2. Tap ☰ or ⋮.
3. Look for **Help** or **Settings** > **Help**.

About Moto app

The Moto app groups together features and settings that help you customize the way your phone looks, sounds, and behaves. Several of these features are available only on Motorola phones.

Turn gestures on/off

Perform everyday tasks with quick motions.

You turn each gesture on/off independently.

Tap “Learn more” links to learn how to use and turn gestures on/off.

- Use three fingers to take a screenshot. Learn more.
- Make a chopping motion to turn the flashlight on or off. Learn more.
- Twist your wrist twice quickly to open the camera from any screen. Learn more.
- Use the Volume buttons to switch tracks when listening to music. Learn more.
- Swipe to shrink screen for one-handed use. Learn more.
- Swipe the fingerprint sensor to view notifications. Learn more.
- Set your phone face down on a surface to start Do Not Disturb mode. Learn more.
- Pick up your ringing phone to silence it and switch to vibrate. Learn more.

Optimize your gaming

Moto Gametime provides tools and settings to help you focus on gaming. You can:

- Turn on enhanced display and audio settings. Learn how.
- Block notifications and reject incoming calls, except for those you choose. Learn how.
- Pause gestures that conflict with game controls. Learn how.
- Access shortcuts to social apps, screen capture tools, and settings. Learn how.

Other settings

- See what’s going on while your screen is off with Peek Display. Learn more.
- Keep your screen on while you’re looking at it with Attentive Display. Learn how.
- Enhance sound with Moto Audio. Learn how.
- Silence the “Hello Moto” greeting during startup. Learn how.

To find information about different settings, touch above.

Focus on gaming

Open toolkit

Use the toolkit to quickly adjust settings during a game.

To open it, you can either:

- Tap .
- Swipe right.
- Swipe right but don't show . This gives maximum space for and interferes least with gaming.

Reposition

Drag to the top, middle, bottom, or opposite side of the screen.

Reposition

1. Swipe right.
2. Tap **Settings** > **Toolkit access**.
3. Tap next to **Swipe right from the edge**.
4. Select top, middle, or bottom third of screen.

Customize tap or swipe to open

1. Open the **Moto** app and tap > **Moto Gametime** > **Settings**.
2. Tap > **Toolkit access**
3. Do one of the following:
   - To tap , select **Tap the icon**.
   - To swipe right, select **Swipe right from the edge**.
   - To swipe without showing , select **Swipe right from the edge**, then tap and turn **Show visual hint** off .

Remove the toolkit

If you don’t want to use the toolkit, you can remove it. Open the toolkit and tap **Settings** > **Toolkit access** > **Hide the toolkit**.

Turn off calls and notifications

From the toolkit

1. During a game, open the toolkit.

2. Tap to block calls and to block notifications.
3. When Block calls is on, calls from starred contacts are allowed as exceptions. To block starred contacts as well, or to permit calls from certain contacts, tap > **Caller exceptions**.

From Moto app

1. Open the **Moto** app.
2. Tap > **Moto Gametime** > **Settings**.
3. Under Immersive mode, turn **Block notifications** and **Block calls** on or off.
4. When Block calls is on, calls from starred contacts are allowed as exceptions. To block starred contacts as well, or to permit calls from certain contacts, tap **Caller exceptions**.

Turn off gestures that conflict with game controls

Some gestures may conflict with game controls. You can turn them off while you're playing games.

1. During a game, open the toolkit and tap .

   Or, open the **Moto** app and tap > **Moto Gametime** > **Settings**.
2. Tap **Block Moto Actions** and turn on the gestures you want to block.

Adjust display settings

1. During a game, open the toolkit and tap .

   Or, open the **Moto** app and tap > **Moto Gametime** > **Settings**.
2. To keep brightness at a fixed level while gaming, turn **Lock brightness** on.

Manage game list

1. During a game, open the toolkit and touch .

   Or, open the **Moto** app and touch > **Moto Gametime** > **Settings**.
2. Touch **Game management**.
3. Add or remove games:
   - Touch to add a game.
   - Touch to remove a game. You'll no longer be able to use the toolkit or settings during games you remove.

Use social apps while you play

You can add up to two shortcuts in the toolkit for quick access. When you open the app from the toolkit during a game, it appears in a small freeform window that you can reposition.

To add apps:

1. Be sure you've installed and set up the social app.
2. During a game, open the toolkit and tap .

   Or, open the **Moto** app and tap > **Moto Gametime** > **Settings**.
3. Tap **App shortcuts**.

   You'll see a list of supported apps installed on your phone.
4. Select the apps to add.

To use the apps:

1. During a game, open the toolkit and tap the app's icon.
2. Drag the app window where you want it.
3. Use available app features as you normally do. Some app features might not be available in freeform mode.

Take screenshot during a game

1. During a game, open the toolkit and tap > .
2. To view the screenshot, open the **Photos** app and tap **Collections** > **Screenshots**.
3. To share it, tap .

Install or update apps

Get apps

Need a voice recorder, notepad, or compass? You can download more apps, in addition to the apps preloaded on your phone.

Get apps from Google Play Store

To download apps:

1. Open the **Play Store** app.
2. Browse by category or search.
3. Tap an item to see a description, read reviews, and download it.

Tip: To prevent accidental or unwanted purchases, tap your profile icon > **Settings**. To learn more, read Google's help.

Restore Play Store apps

If you uninstalled an app you got from Play Store, you can reinstall it anytime. Have apps you use infrequently, such as a flight tracker? Delete them and easily reinstall when needed.

1. Open the **Play Store** app.
2. Tap your profile icon > **Manage apps & device** > **Manage**.
3. Tap **This device** and change to **Not installed**.
4. Check the box for each app to re-install, then tap .
5. If you have multiple Google accounts, tap your profile icon and next to your account tap . Select the other account and repeat the process to restore apps downloaded in that account.

Get apps from other sources

Before downloading, do some research: check the app's rating and read lots of comments.

To download apps:

1. Open the **Chrome** app and go to the appropriate site to download the app.

   If you see a warning, tap **OK** to continue.

   You'll see in the status bar when the download completes.
2. Tap the download notification to install the app. Or, open the **Files** app to install it later.
3. When installing the app, be sure to review what information the app will access. If you don’t want the app to access this information, cancel the installation. For example, if you're installing an app that makes a shopping list, the app should not require access to your contacts.

Stop adding icons automatically

If you don’t want the app’s icon added to your home screen when you install an app:

1. Touch & hold a blank space on your home screen.
2. Tap **Home settings** .
3. Turn **Add icon to Home screen** off .

Update apps

Updating your apps gives you the latest features and improves security and stability. For best performance, apps are set to update automatically.

If an app changes the information it wants to access on your phone, you'll get a notification to update the app manually and will be required to review and accept the new permissions.

Update Play Store apps manually

1. Open the **Play Store** app.
2. Tap your profile icon > **Manage apps & device**.
3. Under **Updates available**:
   - Tap **Update all**.
   - Or, to update a specific app, tap **See details**, then tap **Update** by its name.

     To read the summary of what changed, tap the app name before you update it.

Update Play Store apps automatically

To control when your apps are automatically updated:

1. Open the **Play Store** app.
2. Tap your profile icon > **Settings**.
3. Tap **Network preferences** > **Auto-update apps**.
4. Choose whether apps should:
   - Auto-update over any network
   - Auto-update only over Wi-Fi - save data charges on your cellular plan

If you can't update apps

If you see apps waiting to update that are stuck in “Pending” status, update the Chrome app first.

1. On the “Pending downloads” screen, cancel all downloads.
2. Swipe to **Chrome** and tap **Update**.
3. After Chrome has updated, touch **Update all**.

   Apps will now update normally.

Turn off Play Store auto-updates

For best security and performance, keep apps set to update automatically.

Stop a specific app from updating automatically

1. Open the **Play Store** app.
2. Tap your profile icon > **Manage apps & device**.
3. Tap **Manage**, then tap the app's name.
4. Tap and turn off **Enable auto update**.

Stop all apps from updating automatically

1. Open the **Play Store** app.
2. Tap your profile icon > **Settings**.
3. Tap **Network preferences** > **Auto-update apps** > **Don't auto-update apps**.

Manage app permissions

What are permissions?

If an app wants to use specific features and personal information on your phone, it must ask for your permission. You can manage permissions at any time to allow, deny, or modify them.

Features you'll be asked about

If an app wants to access (use, view, change) these features, it must ask you for permission:

- Hardware and system settings, such as access to your camera, microphone, location, contacts, calendar, storage, and sensors
- Network settings, such as permission to access the internet, Wi-Fi, and Bluetooth
- Personal information and accounts, including access to your personal data, accounts, authentication services (for example, email addresses, phone numbers, social media accounts, and more)
- The ability to modify phone settings and perform actions (such as sending notifications or controlling hardware components)

Should you allow or deny access?

Before you give an app permission, it’s important to review what the app’s asking for. Make sure you're okay with what the app wants to do before you say yes.

Android apps can still work even if you don't give them all the permissions they ask for. For instance, an app might not need to know your location or see your contacts to do its thing. But, if you do allow it access, the app might work even better. It's a trade-off. On the one hand, you can limit what info the app knows. On the other hand, you might miss out on cool features.

Respond to app permission requests

You'll see permissions screens:

- The first time you open an app
- The first time you use a specific feature, if that feature requires access
- When an app updates and needs different permissions
- When you restart an app you previously denied permissions

If the screen pops up over another app, tap to allow full access, partial access, or to deny the app access.

If the screen takes you into Settings and flashes a setting:

1. Tap the flashing item.
2. Turn the permission on to accept (or off to deny it).
3. Tap ← or swipe to go back to the previous screen.

Review or change permissions

Review by feature

The first time you use an app, and sometimes when you install or update it, you are asked to grant the app permission to access certain data and phone features. You can adjust these permissions any time.

To adjust permissions by feature:

1. Go to **Settings** > **Privacy**.
2. Tap **Permission manager** tab.
3. Tap a feature to see which apps have permission to use it.
4. Turn that permission on or off for each app as needed.

Review by app

To adjust permissions by app:

1. Touch & hold the app icon, then tap **App info** ⓘ.
2. Tap **Permissions**.
3. Turn each permission on or off as needed.

> **Tip:** To see how the app uses each permission, tap ⋮ > **All permissions**.

Delete or disable apps

Disable apps provided with phone

You can't remove preloaded apps from your phone, but you can disable and hide apps that you don't need.

To disable an app:

1. Go to **Settings** > **Apps & notifications**.
2. Tap **See all # apps** > app you want to disable.
3. Tap **Disable**.

To re-enable a disabled app:

1. Go to **Settings** > **Apps & notifications** > **See all # apps**.
2. Tap the app.
3. Tap **Enable**.

You can remove any app from your homescreen.

Delete apps you installed

You can delete (uninstall) apps that you downloaded. For many preloaded apps, you can disable but not delete them.

1. Touch & hold the app's icon.
2. Do one of the following:
   - Drag the icon up and drop it on . This deletes the app and frees storage space.
   - If you don't see a delete option, touch & hold the app icon, then tap > **Disable**.

Delete apps installed by others

If you are the owner of the phone and shared it with users or guests, you can uninstall apps they installed. Although their apps don’t appear in your app tray or on your home screen, they do reduce available storage space.

1. Go to **Settings** > **Apps & notifications** > **See all # apps**.

   Apps installed by others show the message **Not installed for this user**.
2. Tap the app name.
3. Tap > **Uninstall for all users**.

Find problem apps with safe mode

Issues such as apps crashing, unexpected reboots, or fast battery drain could be caused by an app you installed. Use safe mode to start your phone with only the original software and apps. If the issues go away in safe mode, the problem is probably from an app you downloaded.

Step 1: Restart in safe mode

1. Press & hold the Power button.
2. Touch & hold **Power off**. Then tap **OK** to restart in safe mode.

   When it restarts, you'll see **Safe mode** across the bottom of the home screen, and all widgets and third-party apps will be disabled.

Step 2: Check if the problem goes away

Use your phone and see if the problem has gone away. Remember, you won't be able to use any downloaded apps.

If the problem goes away, an app is probably causing your problem, so you should exit safe mode and check your apps.

If the problem doesn't go away, an app's not the cause. Try these performance troubleshooting steps next.

Step 3: Exit safe mode

Press & hold the Power button, then touch **Restart** .

Or, hold the Power button for about 30 seconds, or until your phone restarts.

Step 4: Check your apps

1. One by one, delete recently downloaded apps.

   Keep a list of the apps as you go.
2. After you delete each app, restart your phone.

   See whether removing that app solved the problem.
3. Once you've found and deleted the problematic app, you can restore the other apps you removed during testing.

Protect against harmful apps

Scan phone for harmful apps

Play Protect helps keep your phone secure by automatically scanning your apps, including sideloaded apps, to check for potentially harmful apps (malware).

If Play Protect finds a potentially harmful app, it stops the app from running and warns you so that you can uninstall it.

To see the results or to rescan:

1. Open the **Play Store** app.
2. Tap your profile icon M > **Play Protect**.
3. Review the results of the latest scan, or tap **Scan**.

Play Protect is on by default.

To learn more, read Google's help.

If your phone seems slow

If you've scanned your phone to confirm there aren't any potentially harmful apps but your phone seems slow, troubleshoot the issue.

Search the web

Search from anywhere

You don't have to leave your current app to search for the info you need. Use Google Assistant from any screen to get search results and options for your next action.

To search:

1. Say “OK, Google” or “Hey, Google”. (Be sure you've set up the launch phrase.)

   Or swipe diagonally from either lower corner of the screen.

2. Tell the assistant what you're looking for. For example, search for a local restaurant by saying “Find [restaurant name].”
3. Below the search result, tap options for related actions: make a call, get directions, read reviews, and more.

For more help with Google Assistant, read Google's support information.

Search with the widget

Type search terms

1. Tap the blank space on the Search widget.



2. Start typing a search term.

   As you type, suggested terms appear.

3. Tap a suggestion to search for it.

Use voice search

Tap to call Assistant. Learn more.

Use camera to search for info

Tap , then follow onscreen instructions.

Use camera to search for info

You can use Google Lens with your camera to:

- **Search for information about objects and surroundings:** Learn about products, landmarks and buildings, plants and animals, books and visual art
- **Scan barcodes and QR codes:** Search for related information, open a website to purchase a product
- **Digitize real-world text:** Copy text to paste in another app, translate text, save business card information to Contacts, create calendar events from dates on posters or billboards

To use Google Lens:

1. On the home screen, tap on the search widget.

   Or, open the Camera app and tap on the viewfinder.

2. Frame the item you want to learn about and tap .

3. Tap the item you want to learn about.

   For text, tap it to select it, and use to select more.

4. In the list of results:

   - Review results, then tap a selection to view it or take the suggested action.
   - To crop the area of your search for more accurate results, adjust the frame corners.

You can also use Google Lens on captured photos and screenshots. In the Photos app, open the photo or screenshot, then tap .

To learn more, read Google's help.

Delete Google search history

To learn how, read Google's help.

Use search engine other than Google

To use a search engine other than Google:

1. Search for “search engine” in Play Store and install one of the apps.
2. Open that app to search.
3. Optionally:

   - Delete the Google search widget from your home screen. If you can’t delete it, use a different launcher for your home screen that doesn’t include the widget.
   - Install a browser to replace Chrome and make it your default browser.
   - Turn off Google’s collection of your information.

Search your phone

Find an app

1. Swipe up from the bottom of the home screen.
2. Tap **Search apps**.
3. Type the app's name.
4. If the app is on your phone, tap its icon to open it.

   If the app isn't on your phone, tap **SEARCH FOR MORE APPS** to go to Play Store and install with one tap.

Find a setting

1. Go to **Settings**.
2. At the top of Settings, tap .
3. Type your search term and tap on the keyboard.
4. In the list of search results, tap a setting to open it.

Find your phone number

1. Go to **Settings**.
2. Tap **About phone** > **Phone number**.

Find photos, videos, files

To find photos or videos on your phone, use the Photos app.

To find downloaded files, use the Files app.

Browse websites

Your phone connects to your carrier's cellular network or to a Wi-Fi network to access the internet. To save data charges on your cellular plan, use a Wi-Fi connection.

Browse with Chrome

Visit and bookmark websites

1. Open the **Chrome** app.
2. Go to a site by tapping the bar at the top and typing the address.
3. On a web page:
   - To bookmark it, tap > ☆.

     Or, tap > **Add to Home screen** to put a shortcut on your home screen.
   - To search for text on that page, tap > **Find in page**.
   - To open a link, tap it.
   - To see options for opening a link in a new tab and copying or sharing a link, touch & hold the link.
   - To print the page, tap > **Share** > **Print**. If you don't see your printer listed, set up your print service.
4. To return to the previous page tap ◀.

To learn more about browsing or managing bookmarks, read Google's help.

Open and switch tabs

In the **Chrome** app:

- To switch tabs, tap the switcher icon 3.
- To open a new tab, tap the switcher icon 3, then tap +.

Clear browsing history

1. Open the **Chrome** app.
2. Tap > **History**.
3. Tap **Clear browsing data**.

   To learn more, read Google's help.

You can also review and delete your search history.

Change default browser

You can download other browsers from Play Store. After you've installed one, you can make it your default browser.

1. Go to **Settings** > **Apps & notifications**.
2. Tap **Default apps** > **Browser app**.

   Or, touch **Advanced** > **Default apps** > **Browser app**.
3. Tap the app to use.

About text and multimedia messages

Text messages - SMS

SMS (Short Message Service) messages are text only. You can send a message up to 160 characters long. If you type more than that, your message will be sent in a series of SMS messages.

You can send one SMS to multiple people, and the replies will come in separate threads (unless you and your recipients have group messaging enabled).

SMS messages are included in most carriers' text messaging plans and don't use cellular data.

Multimedia messages - MMS

MMS (Multimedia Messaging Service) messages can include unlimited text and a photo, picture slideshow, video, or sound file.

You can send one MMS message to multiple people at once using group messaging, and replies will be delivered in group conversation threads to each person in the group.

MMS messages use cellular data, so you need a cellular data plan or pay-per-use payment to send them.

Group messaging

With group messaging, you can have a conversation with multiple people at once. All replies from recipients are delivered to all recipients, in a group conversation thread.

Even though you send one message to multiple people, you'll be charged for each message received. Group messaging:

- Converts multiple-recipient SMS messages to MMS for everyone who can receive them
- Is available for MMS messages only

Note: Recipients who can't get MMS messages will receive an SMS instead. If there's media attached, they'll get a link to download it over Wi-Fi (if offered by their carrier). Replies are to the sender only, in an individual conversation.

If you don't want to receive replies in group chats, you can turn off group messaging in the Messages app.

Read, send messages

Work with messages

With the Messages app, you can send and receive text messages.

Read and reply to a message

When you receive a text message with the Messages app, you'll see in the status bar.

1. Swipe the status bar down and tap .
2. To respond, type in the text box and tap .
3. Optionally:
   - To open an attached photo or file, tap it.
   - To save an attachment, touch & hold it, then tap > **Save**.
   - If the message is important, star it so you can find it later.
   - If the message is from an unassigned number, create a contact to associate a name with that number.

Tips for incoming messages:

- You can control message notifications, changing the sound or turning them on/off.
- If you don't want multi-recipient SMS messages converted to MMS and want replies sent in separate conversations (threads) to you only, turn off group messaging.
- To protect your privacy, you can hide sensitive content for lock screen notifications.

Send a message

1. Open the **Messages** app.
2. Tap .
3. Enter recipients, then type the message.
4. Optionally:
   - To add an attachment, tap or .
   - To add a smiley or other icons, tap on the onscreen keyboard.
5. Tap .

Tips for sending messages:

- To text your best friend with one tap from your home screen, add a task shortcut. Touch & hold and drag to your home screen.
- To change the text message reply to incoming calls, open the Phone app and tap > **Settings** > **Quick responses**.

Manage drafts

When you begin composing a text message reply or a new message with recipients, it's saved in your message list as a draft until you send or delete it.

1. Open the message list and tap the conversation marked **Draft**.
2. Do one:
   - Finish composing the message and tap .
   - Delete the characters in the text field to delete the draft.

Forward a message

1. Open the conversation in **Messages**.
2. Touch & hold the message.
3. Tap > **Forward**.

Copy text from a message

1. Open the conversation in **Messages**.
2. Touch & hold the message.
3. Tap .

You can now paste it elsewhere, like in a different text or in an email you're composing.

Work with attachments

Your text messages can include photos, voice messages, and video as attachments.

Add attachment

1. In the **Messages** app, compose a reply or a new message.
2. Do one of the following:
   - Touch & hold to start recording a voice message. When done, lift your finger.
   - Tap to attach a photo or video or capture a new one. Tap to expand the viewfinder to fullscreen, where you can switch to a selfie camera or capture a video.
   - Tap for other types of attachments (emoji, GIF, your location, contacts).
3. Tap .

If you're having trouble attaching files, check that:

- Cellular data is turned on.
- Your data plan supports MMS (multimedia messages).

Save attachment you received

In the message, touch & hold the attachment, then tap > **Save**. Or, tap the attachment to open it and look for save options.

If you don't save an attached photo or video, it is kept within the message only. So, if you delete the message, you also delete the attachment. (You can try to recover recently deleted messages.)

View saved attachments

For photos or videos, open the Photos app and tap **Collections**.

For other attachments, open the Files app.

Manage, delete messages

Keep track of important messages

To access your important messages and conversations in the Messages app:

Pin up to 3 conversations to keep these groups of messages at the top when you open the app.

Star messages you want to find later.

Pin/unpin conversations

To pin a conversation:

1. Open the Messages app.
2. In your conversation list, touch & hold the conversation.
3. Tap .

To unpin a conversation, touch & hold it, then tap .

Star messages

1. Open the conversation that has the message you want to star.
2. Touch & hold the message.
3. Tap .

To remove a star, on the message, tap .

Find starred messages

To find starred messages across all conversations, go to the top of your conversation list and tap > **Starred**.

To find starred messages within a specific conversation, open the conversation and tap > **Starred**.

Delete or archive texts

When you delete a message, you also delete any attached photos or videos. If you want the attachments, be sure to save them before deleting the message.

- To delete a single message, open the conversation (thread) and touch & hold the message, then touch .
- To delete or archive all messages in a conversation, touch & hold the conversation, then touch to delete or to archive.
- To delete or archive multiple conversations, touch & hold the first conversation, then touch the other conversations to select them, and touch or .
- To see archived messages, tap your profile icon > **Archived**.

Control notifications for text messages

Follow the instructions below to change all notifications from your messaging app. But, if you want to stop text message notifications only during certain hours or from specific people, use Do Not Disturb instead.

If you use the Messages app

1. Open the **Messages** app.
2. Touch your profile icon > **Messages settings**.
3. Touch **Notifications** and:
   - Turn notifications on or off
   - Change the sound
   - Add or remove vibration

If you use a different messaging app

1. Touch & hold the app's icon.
2. Touch **App info** > **Notifications**.
3. Make changes.

Request text delivery reports

See whether recipients receive your messages by requesting delivery reports.

1. Open the **Messages** app.
2. Touch your profile icon > **Messages settings**
3. Touch **Advanced**.
4. Turn on **SMS delivery reports**.

Turn group messaging on or off

Group messaging allows conversation participants to reply to all recipients in a single thread. If you do not want multi-recipient SMS messages converted to MMS and want replies sent in separate threads only to you, turn off group messaging.

This feature is not available in all countries.

To adjust the group messaging setting:

1. In the Messages app, touch > **Settings** > **Advanced**.
2. Touch **Advanced**.
3. Touch **Group messaging** and select an option.

Change default messaging app

You can download additional messaging apps from Play Store. After you've installed one, you can make it your default messaging app.

To select a different app to send and receive text (SMS) and multimedia (MMS) messages:

1. Go to **Settings** > **Apps & notifications**.
2. Touch **Default apps** > **SMS app**.

   Or, touch **Advanced** > **Default apps** > **SMS app**.
3. Touch the app to use.

Change text message reply to incoming calls

When your phone rings, you can drag towards to see a list of quick responses you can send by text message instead of answering the call.

To edit these quick responses:

1. Touch .
2. Touch > **Settings**.
3. Touch **Quick responses**.
4. Touch one of the responses to edit it.

Get text messages on your computer

Set up Device Pairing

If you use the Messages app on your phone, you can see and send text messages on your computer.

Pair your computer and the Messages app on your phone by scanning a QR code:

- The QR code is unique to that computer.
- You can set up multiple computers, getting individual QR codes, but only one is active at a time.

To set up a computer:

1. Be sure your phone and computer are connected to the internet.
2. On your phone, open the **Messages** app, then tap your profile icon > **Device Pairing**.
3. On your computer, go to https://messages.google.com/web.
4. Follow onscreen instructions to scan the QR code on the web page with your phone.

   Once paired, you'll see your latest conversations in your computer's browser.

See and send messages

When you have unread messages, you'll see a red notification and number of unread messages in the browser tab on your computer.

To send messages from your computer, your phone must be on and connected to the internet.

Usual carrier fees for sending text messages from your phone also apply to messages sent from your computer.

Sign out of Device Pairing

If you don’t use Messages on a paired computer for 14 days, you’re automatically signed out from that computer for security reasons.

If you're using a shared or public computer, sign out when you're done.

To sign out from your phone:

1. Open the **Messages** app.
2. Tap your profile icon > **Device Pairing**.
3. Do one of the following:
   - Tap ✕ next to an individual computer to sign out of it.
   - Tap **Unpair all devices**.

To sign out from the computer, at the top of the message list, click > **Unpair**.

Read, send, manage emails

Read email

If you've set up email, you'll start receiving emails after your account syncs with your phone. When you receive an email notification, you'll see in the status bar.

1. To open email from a notification, swipe the status bar down and touch the notification:
   - A single email notification opens the message directly.
   - A multiple email notification opens the email list; touch an email to open it.

   If you dismiss the notification and want to view the email later, open the **Gmail** app.
2. Do any of the following:
   - To view other folders, touch from your email list.
   - Attachments appear at the end of the email. You can view or save them.
   - You can print emails from your phone.

Reply to or forward an email

1. Touch to reply to the sender. Or, swipe to the end of the email and touch to reply to all recipients or to forward.
2. Enter your message.
3. To copy someone on the email, in the To field, touch .
4. Touch .

Send new email

1. Open the **Gmail** app and touch **Compose**.

   Or, touch & hold , then touch **Compose**. (If you send lots of emails, add a task shortcut. Drag **Compose** to your home screen.)
2. Enter the recipient and your message.
3. To copy someone on the email, in the To field, touch .
4. Touch .

Add attachment to email

1. In the email you're composing, tap > **Attach file** to add a file stored on your phone, or attach one saved on Drive.
2. Browse to the file, and tap it to add it to the email. The attachment appears at the bottom of the email.

Find emails

When you open the Gmail app, you see your Inbox.

To view sent email, drafts, recently deleted email, and other categories, touch ☰.

To search for emails, at the top of your email list enter terms, like the topic or the sender's name.

Delete emails

To delete an open email, tap 🗑.

To delete an open draft of an email, tap ⋮ > **Discard**.

To delete multiple emails, go to your email list, touch & hold the first message, then touch the other messages to select them, and tap 🗑.

To delete large quantities of email, sign into your email account on your computer, and see your email provider's help for more information.

Tips:

- To delete attachments that you saved from emails, use the Files app.
- You can also remove email accounts from your phone.

Learn more

For more help with Gmail, read Google's support information.

For help managing email from other providers, sign into your email account on your computer and look for the provider's instructions.

View email attachments

View attachments

Attachments appear at the end of an email.

To view or play the attachment, tap it.

If you see a message that you can't open the attachment type, most file types have a free viewer that you can use. In Play Store, search for the file type, then select and download an app.

Save attachments from email

In the email, tap on the attachment to download and save it on your phone, or tap to save it in Drive.

To view attachments later, open the **Files** app (go to Download) or the **Drive** app.

Delete attachments saved from email

1. Open the **Files** app.
2. Tap **Downloads**.
3. Do one of the following:
   - To select one item, touch & hold it.
   - To select multiple items, touch & hold the first one, then tap the others.
4. Tap .

Prevent previews of attachments

Attached photos or videos appear as thumbnails, showing a preview.

To see a generic thumbnail instead of a preview thumbnail until you open the file:

1. Open the **Gmail** app.
2. Tap > **Settings**, then tap the account name.
3. Tap **Images** > **Ask before displaying external images**.

Preview inboxes from home screen

To preview your inboxes, open emails, or quickly start a new email, add the Gmail widget to your home screen.

With the widget, you can:

- **Open a message.** Touch the message.
- **Compose a message.** Touch .
- **View more messages.** Scroll down the list.
- **Open the app.** Touch the folder name at the top of the widget.

Add email signature

To add a signature automatically to the end of emails you send:

1. Open the **Gmail** app.
2. Touch ☰ > **Settings**.
3. Select the account.
4. Touch **Mobile Signature** and edit the text you want to appear at the end of every email.

Control email notifications

You can control whether you see notifications when you receive an email.

1. Touch & hold .
2. Touch > **Notifications**.
3. Adjust notification settings.

Tip: To automatically silence notifications during hours you specify, use Do Not Disturb.

About the calendar

Keep track of upcoming events and get automatic reminders on your phone with your calendar. Google calendars let you save all your events in one place, which is secure, synced, and accessible from any web-enabled device or computer when you've signed in to your account.

You can:

- Review existing events.
- Create new events.
- Control notifications for events.

Your calendar can automatically create new events based on your incoming Gmail messages. For example, if you make restaurant reservations or book a flight, these events will show up automatically on your calendar; you don't have to add them.

If you created multiple calendars within your Google account, or if you have multiple Google accounts on your phone, you can control which events are synced with your phone.

Find calendar events

Open calendar events

You'll see 31 in the status bar to alert you of upcoming events. Just swipe the status bar down and touch the notification to see the event details in your calendar.

To see your list of upcoming events, open the Calendar app.

Tip: For an overview of your upcoming events from your home screen, add a Calendar widget.

Get around the calendar

To glance at the month view:

1. Touch the month's name.
2. Touch a date to jump to it and see its events.

To change the view:

1. In your calendar, touch ≡.
2. Touch **Schedule**, **Day**, **3 days**, **Week** or **Month**. This view remains the default until you change it.

From these views, you can:

- **Read or edit event details.** Touch the event to open it and touch ✎ to edit it.
- **Add new events.** Touch +.
- **Search your calendar.** Touch 🔍.

Create and manage events

Create calendar events

As you're creating an event, you'll see suggestions for the event titles, locations, people, and more. In some cases, these suggestions are personalized based on information associated with your Google account and your previously created events.

1. Open the **Calendar** app and touch + > **Event**.
2. If you have multiple accounts, touch the account for the calendar you want.
3. Enter the start time and other details.
4. If you want a reminder sent to your status bar, touch **Add notification** and select how long before the event you want a reminder.
5. Touch **Save**.

Edit or delete calendar events

1. Touch an event to open it.
2. Do any of the following:
   - To edit it, touch ✎.
   - To delete it, touch ⋮ > **Delete**.

Control which events are shown

To temporarily hide calendar events for a Google account you don't need to see all the time:

1. Open the **Calendar** app and touch ☰.
2. Beneath the account name, touch **Events**. If you have multiple calendars for that account, touch the name of each calendar to hide its events.

> **Tip:** When you hide events, the calendar still syncs with your Google account. To prevent that account's calendar from automatically syncing, from the home screen go to **Settings** > **Accounts**.

To exclude automatically-generated events created from Gmail (for events such as flight bookings and restaurant reservations):

1. Open the **Calendar** app.
2. Touch ☰ > **Settings** > **Events from Gmail**.
3. Under the name of the account, turn **Show events from Gmail** off.

To learn more, open Calendar and touch ☰ > **Help & Feedback**.

Control notifications for calendar events

1. Touch & hold the app icon.
2. Tap > **Notifications**.
3. Adjust notification settings.

If you have assigned a ringtone for the notification but you silence your phone, your phone won't play the ringtone.

Tip: To automatically silence notifications during hours you specify, use Do Not Disturb.

Set alarms

Set alarm by touch

1. Open the **Clock** app.
2. Touch .
3. Adjust alarms:
   - To create a new alarm, touch .
   - To use an existing alarm, switch it on.
   - To change an alarm's sound, schedule or label, touch .
4. To control general alarm settings, like alarm volume and snooze duration, touch > **Settings**.

Tip: Your phone must be powered on for the alarm to activate.

Set alarm by voice

1. If you've set up Voice Match, say “Hey Google”. Or, touch on the Google Search widget.



2. When prompted to speak, say your command. For example: “Set alarm for 7:45 p.m., label, switch the laundry” or “Wake me up at 7 a.m. tomorrow.”

   Your phone sets the alarm and provides a confirmation.

When an alarm is set

You'll see in the status bar and on your lock screen.

To adjust it, open quick settings and touch the alarm time.

Delete an alarm

1. Open the **Clock** app.
2. Touch
3. Touch > .

Use timer or stopwatch

Use timers

You can set multiple countdown timers with labels to keep track:

1. In the Clock app, touch for the Timer tab.
2. Enter the time to count down.
3. Touch .
4. Do any of the following:
   - To pause the countdown, touch .
   - To add a label to the timer, touch the current name and change it (helpful when using multiple timers).
   - To add a minute to the countdown, touch **+ 1:00**.
   - To reset the counter to the original time, touch .
   - To add a timer, touch .
   - To delete a timer, touch .
   - To change the timer's sound, touch > **Settings** > **Timer sound**.
   - If you leave this app, quickly return to it by swiping the status bar down with one finger to see the timer notification and remaining time. To open the timer, touch the notification.

Tip: If you use timers frequently, add a task shortcut. Touch & hold , then drag **Create new timer** to your home screen.

Use a stopwatch

Record your time.

1. In the Clock app, touch for the Stopwatch tab.
2. Touch .
3. Do any of the following:
   - To pause the stopwatch, touch .
   - To record laps (or multiple durations) while the stopwatch is running, touch .
   - To reset the counter to zero, touch .
   - If you leave this app, quickly return to it by swiping the status bar down with one finger and touching a control. To open the stopwatch, touch the notification.

Tip: If you use stopwatches frequently, add a task shortcut. Touch & hold , then drag **Start stopwatch** to your home screen.

Set date and time

Change time format

1. Go to **Settings** > **System** > **Date & time**.
2. To change how times are displayed:
   - To use military time such as 13:00, turn **Use locale default** off and turn **Use 24-hour format** on .
   - To use the time format of your current location, turn **Use locale default** on .
   - To use 12-hour format, turn both **Use locale default** and **Use 24-hour format** off .

Set date and time automatically

1. Go to **Settings** > **System** > **Date & time**.
2. Turn **Use network-provided time** and **Use network-provided time zone** on .

Your phone automatically syncs with the local time (using the mobile network). The local time is used for alarms and is displayed on the lock screen and other displays.

Set date and time manually

1. Go to **Settings** > **System** > **Date & time**.
2. Turn **Use network-provided time** off .
3. To make corrections, tap **Date** and **Time**.

Switch time zones

1. Go to **Settings** > **System** > **Date & time**.
2. Turn **Use network-provided time zone** off .
3. Tap **Time zone**.
4. Choose a regional time zone (which is applied to the current time).

Show multiple time zones

You can view multiple time zones in the Clock app, so you can coordinate plans with friends and co-workers in other cities, or stay in touch with family back home when you're traveling.

1. Open the **Clock** app and tap .
2. To add time zones, tap , then select cities in the time zone you want to view.

Show home time zone

When traveling, you can view your home time zone in the Clock app.

1. Open the **Clock** app and tap .
2. Tap > **Settings**.
3. Turn **Automatic home clock** on .

Share photos and videos

You can wirelessly share one, multiple, or all items from any Photos view, sending them as email or message attachments, uploading to the cloud, or using device-to-device connections like Bluetooth.

In addition to sharing wirelessly, you can transfer photos to your computer with a USB connection. You can also move photos from internal memory to SD card.

To share wirelessly:

1. Open the **Photos** app.
2. Navigate to the thumbnail of the item you want to share.
3. Select the item to share:
   - To select one item, touch & hold its thumbnail.
   - To select multiple items, touch & hold the first thumbnail, then touch the others to select them.

   Tip: To clear all selections, touch ✕ at the top of the screen next to the number selected.
4. Touch and select the way you want to share.

Upload photos and videos

Back up automatically

1. Open the **Photos** app.
2. Touch your profile icon > **Turn on backup**.

   You can change back up settings any time.

Adjust back up settings

To adjust settings for your automatic backups:

1. Open the **Photos** app.
2. Touch your profile icon > **Photos settings** > **Backup**.
3. Adjust settings as needed:
   - To choose high quality or original size for uploads, touch **Backup quality**.
   - To back up items in your Download, Screenshots, and third-party app folders, touch **Back up device folders**.
   - To back up items over your cellular network, touch **Mobile data usage**, then adjust options for photos, videos, and roaming.

Back up manually

1. Open the **Photos** app.
2. Open the photo or video.
3. On the photo or video, touch . (Swipe up if you don't see .)

View your backed up photos and videos

From your phone, open the Photos app.

From your computer, sign in to photos.google.com.

Manage your storage

1. Open the **Photos** app.
2. Touch your profile icon > **Photos settings** > **Backup**.
3. Touch **Manage storage**.
4. View how many GB of storage you have used and approximately how much time your remaining storage will last. If you're running low, follow onscreen instructions to get more storage.

5. To review and delete recommended photos:
    a. Under **Review and delete**, touch a category (such as large photos and videos, blurry photos, screenshots).
    b. Touch & hold an item to delete, then touch others to include.
    c. Touch .

More help

To learn more, read Google's help.

Add contacts

Add contacts automatically

When you add an account to your phone, the contacts for that account are available on your phone automatically.

Add contact with Contacts app

1. Open the **Contacts** app.
2. Tap .
3. If you're using more than one account, the account that will be synced with your new contact appears at the top. To change accounts, tap .
4. Tap a text box to type the name and details. Fill in as much or as little information as you'd like.

   Tips:

   - Tap to add a photo. Choose a photo you've saved, or take a photo and crop it.
   - You can assign a custom ringtone for calls from that contact.
   - If you have multiple accounts on your phone and want to change the default account for new contacts, in the Contacts app tap > **Settings**.
5. Tap **Save**.

Add contact from text message

You can easily create a new contact or add a new number for an existing contact when you receive a text message from an unassigned number.

1. Open the **Messages** app.
2. In the message list, touch & hold the number, then tap > **Add contact**.
3. Tap .
4. Do one of the following:
   - To add to an existing contact, start typing the contact's name in the search field, then select it.
   - To set up a new contact, tap **Create a new contact** and add contact details.
5. Tap or **Save**.

Other ways to add contacts

- Save a recent call as a contact.
- Have someone send you a name card.

Edit or delete contacts

Edit contacts

After creating a contact, you can change the name, photo, and other contact information.

1. Open the **Contacts** app.
2. Touch the person's name.
3. Adjust settings as needed:
   - To assign a custom ringtone, touch > **Set ringtone**.
   - To edit contact info, touch , then touch a field to make changes, touch to change the photo, or touch > **Discard** to undo changes.

Merge contacts

If you have two contacts for the same person, you can merge the information (including all emails and phone numbers) into a single listing.

Automatically merge contacts

1. Open the **Contacts** app.
2. Tap **Organize** > **Merge & fix**.
3. Tap **Merge duplicates**.

   If you don’t see this option, contacts can't be automatically merged.
4. Select options to merge one or all duplicates.

Delete contacts

You can delete contacts created and stored on your phone. If the contact is synced from a social network account, you need to delete the contact in that account. For example, a Facebook contact must be deleted from within your Facebook account. Or, hide Facebook contacts on your phone by filtering your contact list.

Delete one contact

1. Open the **Contacts** app.
2. Touch the person's name.
3. Touch > **Delete** and confirm the deletion.

Delete multiple contacts

1. Open the **Contacts** app.
2. In your contact list, touch & hold the first contact.
3. Touch the other contacts to delete.

4. Touch .

Star your favorite contacts

Contacts you mark as favorites appear at the top of the list in the Contacts app and on the ☆ tab in the Phone app.

To add someone to your favorites:

1. Touch the contact icon (photo or other icon).
2. Touch ☆.

Sort contacts

Sort contacts in Contacts app

1. Open the **Contacts** app.
2. Touch your profile icon > .
3. Set options:
   - To sort by first or last name, touch **Sort by**.
   - To list names with first name first or last name first, touch **Name format**.

Sort contacts in Phone app

1. Open the **Phone** app.
2. Touch > **Settings** > **Display options**.
3. Set options:
   - To sort by first or last name, touch **Sort by**.
   - To list names with first name first or last name first, touch **Name format**.

Narrow which contacts are shown

In the Contacts app, you can choose which contacts to show. These changes won't affect the contacts that show up in the Phone app.

In the **Contacts** app:

- To show contacts from only one account or all accounts, touch your profile icon , then select the account(s).
- To narrow which contacts are shown from your account, touch > **Customize view**.

In the **Phone** app, use the tab to see only contacts you call frequently or have starred as favorites.

To remove contacts from this tab, touch on the contact, then touch .

Share contacts

Ways to share contacts

You can share one or all contacts by sending a name card file (.vcf).

You can also share a contact's information as a text message attachment.

Share one or a few contacts

1. Open the **Contacts** app.
2. Touch & hold a name to select it, then touch others to select more.
3. Touch .
4. Select the way to share.

Receive a name card file

1. When someone sends you a name card file, you'll see a file transfer notification. Tap the notification and accept the file transfer.
2. Tap the name card file (.vcf) to open it and add the person to your contacts.

Answer calls

Answer incoming call

When you receive a phone call, the Incoming call screen shows the caller ID. If you miss a call, you'll see in the status bar.

To answer an incoming call:

- On the Incoming call screen, touch **Answer**.
- On the lock screen, swipe up to answer a voice call, or swipe the caller's icon/picture up to answer a video call.

During a call, you can use the keypad to enter numbers or codes, use speakerphone or a paired Bluetooth device, and add other people to the call. Learn more.

Tip: You can save a recent call as a contact.

Auto answer on headset

Not all carriers support this feature.

You can set your phone to automatically answer calls after 2, 5, or 10 seconds when you're using a headset (wired or Bluetooth).

1. Touch .
2. Touch > **Settings**.
3. Touch **Calls**.
4. Touch **Auto answer on headset** and select a duration.

Screen calls before answering

This feature is available only in the US and in Canada.

Google Assistant can greet an unknown caller, ask their name and reason for calling, and show you a real-time transcript of the conversation so you can accept or reject the call.

1. When a call comes in, touch **Screen call**.

   Google Assistant answers and screens the call. You'll see the caller's replies on screen in real time.

   To hear the caller's replies instead of reading the transcript, press the Volume up key and put the phone to your ear.
2. Choose how to handle the call:
   - Touch an automatic reply to get more information or let the caller know you're busy.
   - Touch to connect the call.
   - Touch to hang up.
   - Touch **Report as spam** to reject the call and have Google mark it as spam.

For more information, in the Phone app, touch > **Settings** > **Call Screen** > **Learn more**.

Dismiss incoming call

If you don’t want to talk to the caller, you can:

- **Divert the call to voicemail.** On the Incoming call screen, touch **Dismiss**. Or, on the lock screen, press the Power button. You can also automatically divert all calls from a specified number to voicemail.
- **Respond with a text message.** On the lock screen, touch . You can customize these default messages.
- **Block all calls from that number.**

Control ringtones and notifications

You can:

- **Quickly silence the ringer.** Press Volume Down on the side of the phone.
- **Silence ringtones during hours you specify.** Use Do Not Disturb.
- **Choose a unique ringtone for specific people.** You'll know instantly who's calling.
- **Get notified of incoming calls when you're on a call.** Set up call waiting.
- **Set the number of rings before sending a call to voicemail.** Dial into voicemail, then follow your carrier’s prompts to change this setting.

Fix an issue

If your phone isn't ringing for incoming calls, look for in your status bar. Open quick settings and turn Do Not Disturb off. Your phone will ring for incoming calls. Check your settings to make sure your phone is screening calls at the appropriate times.

If you’re having other issues, try these troubleshooting steps.

Make calls

Make a call

1. Touch .
2. Touch and enter a number.
3. If you enter a wrong number, touch .
4. Touch to call the number.
5. To hang up, touch .

Other ways to make calls

You can place calls from:

- The Phone app
- The Contacts app
- The Assistant app
- Other apps that show contact information. Wherever you see a phone number, you can usually touch it to dial.

Return a recent call

In the Phone app, touch , then touch next to the number.

Tip: You can save a recent call as a contact.

Dial a favorite contact

In the Phone app, touch to see your favorites, then touch the contact.

In the Contacts app, at the top of the list under , touch the contact.

Dial by contact lookup

1. Open the Phone app and touch .

   Or, open the Contacts app.
2. In the search field, start typing the name to select from matches.
3. Touch the contact name, then touch next to the number to call.

Tip: To call frequent numbers with one touch from your home screen, add a Direct dial widget.

Dial by voice

Use a voice command.

Change default calling app

You can download additional calling apps from Play Store. After you've installed one, you can make it your default calling app.

1. Go to **Settings** > **Apps & notifications**.
2. Touch **Default apps** > **Phone app**.

   Or, touch **Advanced** > **Default apps** > **Phone app**.
3. Touch the app to use.

Fix an issue

If you can't make calls, try these troubleshooting steps.

During a call

Adjust sound during call

While listening, you can:

- **Adjust the volume.** Use the Volume button on the side of the phone.
- **Switch between earpiece, loudspeaker, or connected Bluetooth device.** Touch .
- **Use a paired Bluetooth device.** Touch to use or stop using the device.
- **Mute your microphone.** Touch . You can hear the caller but they can't hear you.

Enter a number

Touch on the call screen to use the numeric keypad.

Use other apps

When you put your phone up to your ear, the screen turns off to prevent you from accidentally touching it. To turn it back on, move it away from your ear or press the Power button.

To hide the call and use other apps, swipe up from the bottom of the screen.

To return to the call, swipe the status bar down and touch **Ongoing call**.

Answer call waiting

If call waiting is active and a new call comes in, you can answer it. Touch **Hold and Answer Voice**. The first call is put on hold.

To switch between calls, touch .

To merge the calls, touch .

Record calls

Not all carriers and countries support this feature.

To record an incoming or outgoing call:

- On the call screen, touch to start and to stop.
- You can't start recording when you're on mute, on hold, or on conference calls.
- When you start recording a call, for legal purposes, a voice announces the call is being recorded. You can't turn off the announcement.

To play or share the recording:

1. In the Phone app, touch .
2. In the list of recent calls, means the call was recorded. Touch the call.

3. Then:
   - Touch  to play the recording.
   - Touch  to share it.
   - To delete it, swipe the recording left.

Recording a conversation without the consent of the other party is illegal in most countries. Know your country's laws before recording a call.

End the call

Touch .

Or, swipe down from the top of any other screen to view the call notification and touch **Hang up**.

Make video calls

Make video call with Meet app

Meet lets you video call anyone in your contact list who also uses Meet. Android users can get it from Play Store, and iPhone users can download it from the App Store. The video calls are secure and can't be seen by others.

To get started, open the Meet app and follow the onscreen instructions to set it up. For more information, tap ⋮ > **Help & Feedback**.

Get an app to make video calls

There are many video calling apps to choose from on Play Store (like WhatsApp, Skype, and more).

1. Open the **Play Store** app.
2. Search for "video calls".
3. Download the app you want to use.

Make conference calls

To make a conference call:

1. Call the first person.
2. To call the next person:
   a. Touch .

      This puts the first call on hold.

   b. Enter the number.
   c. Touch .
3. To join the calls after the second person answers, touch .

Make calls over Wi-Fi

About Wi-Fi calling

Some carriers support Wi-Fi calling to make and receive calls and text messages from locations where your cellular signal is poor or not available. Contact your carrier to confirm that they support Wi-Fi calling for your phone.

Calls and texts that are made over a Wi-Fi network use your existing cellular rate plan, even when roaming:

- Calls and texts to numbers in your home country are charged the same as your regular cellular calls.
- Calls and texts to international numbers are charged at international rates.

When connected to a Wi-Fi network, your phone automatically switches between cellular and Wi-Fi networks for calls and texts based on the signal strengths.

Turn Wi-Fi calling on or off

If your carrier supports Wi-Fi calling, you need to turn it on.

1. Go to **Settings** > **Network & internet** > **Mobile network**.
2. Touch **Advanced** > **Wi-Fi calling**.

   Depending on your carrier, the **Wi-Fi calling** setting may be in your Phone app at > **Settings** > **Calls** (or **Advanced Calling**) > **Wi-Fi calling**.

   If you don’t see this option, your carrier doesn’t support this feature.
3. Turn it on or off.

Make Wi-Fi call

1. Make sure that:
   - Wi-Fi calling is on.
   - You're connected to a Wi-Fi network.
2. Make the call as usual.

Depending on your carrier, you’ll see a Wi-Fi calling icon in the status bar, start and end call buttons, or the active call status indicator when your call is over a Wi-Fi network.

If you're not connected to Wi-Fi, calls use your carrier’s mobile network.

If Wi-Fi calling isn’t working

If you're outside your carrier's network and want to use Wi-Fi calling instead of roaming on another carrier’s network:

1. Go to **Settings** > **Network & internet** > **Mobile network**.
2. Tap **Advanced** > **Wi-Fi calling**.
3. Tap **When Roaming** and choose **Prefer Wi-Fi**.

Other reasons why Wi-Fi calling may not work:

- If you're in airplane mode, a Wi-Fi call will drop when you lose your Wi-Fi connection.
- When traveling internationally, some carriers require turning on Wi-Fi calling before leaving your home country.
- Some countries don't allow Wi-Fi calling, and some carriers restrict Wi-Fi calling to and from certain countries. See your carrier for details.
- Some carriers require you to set up an emergency 911 address to enable Wi-Fi calling.

Calling 911 with Wi-Fi calling

Calls to 911 are made over Wi-Fi only if the cellular network is unavailable.

Your phone is associated with an emergency address used by emergency responders when you make a call to 911 over Wi-Fi in the US. It's important to change this address when you change locations.

911 calls made over Wi-Fi may be delayed or unsuccessful if:

- The 911 system doesn't recognize the address
- You're experiencing a power outage
- Your Wi-Fi connection isn't working

Learn how to update your emergency address.

Important: When you call 911, always tell the operator your location.

Turn call waiting on and off

When you’re on a call and a new call comes in, the new call is sent to voicemail. If you want to be notified of new calls instead, turn on call waiting.

Note: Some carriers automatically control call waiting. If you do not see this option on your phone, contact your carrier for more information.

To turn call waiting on:

1. Open the **Phone** app.
2. Touch > **Settings**.
3. Touch **Calls**.
4. Touch **Additional settings**, then turn **Call waiting** on.

When call waiting is on, if you're on a call and a new call comes in, you can answer it. The first call is put on hold. Touch to merge the two calls.

To turn call waiting off, go to **Additional settings**, then turn **Call waiting** off

Block calls and texts

If you don't want to receive calls or texts from a certain number, you can block it. When the number tries to contact you, your phone will automatically decline the call or text.

Block a number

Use either app to block both calls and texts from a number.

From the Phone app

1. Tap .
2. Touch & hold a call from the number to block.
3. Tap **Block/report spam**.
4. If you don’t want to report the number as spam to Google, remove the checkmark.
5. Tap **Block**.

From the Messages app

1. Touch & hold the conversation thread from the number to block.
2. Tap > **Block**.

   Or, touch (for numbers saved in your contacts).
3. If you don’t want to report the call as spam to Google, remove the checkmark.
4. Tap **OK**.

Unblock a number

Use either app to unblock a number, so you can receive calls and texts from that number.

From the Phone app

1. Tap > **Settings** > **Blocked numbers**.
2. Tap by the number to unblock.

From the Messages app

1. Tap your profile icon > **Spam & blocked**.
2. Tap the blocked conversation.
3. Tap **Unblock**.

Block all numbers for a contact

If a contact has multiple numbers, you can block them all with the Contacts app.

Block a contact's numbers

1. Open the **Contacts** app.
2. Tap the contact's name.
3. Swipe to move down and tap **Block numbers**.
4. If you don’t want to report the call as spam to Google, remove the checkmark.
5. Tap **Block**.

On the contact screen, you'll see by the blocked numbers.

Unblock the numbers

1. Open the **Contacts** app.
2. Tap the contact's name.
3. Tap **Unblock numbers** > **Unblock**.

Block calls from unidentified callers

1. Open the **Phone** app.
2. Touch > **Settings** > **Blocked numbers**.
3. Turn **Unknown** on .

Your phone will block calls from private or unidentified numbers. You'll still receive calls from phone numbers that are stored in your contacts.

Tip: You can also automatically identify potential spam callers and easily block them with Google Caller ID & spam. Learn how to set it up.

View and delete call history

See your call history

To see all recent calls:

1. Touch .
2. Touch .
3. You'll see one or more of these icons next to each call:

Icon	Meaning
	Missed call (incoming)
	Call you answered (incoming)
	Call you made (outgoing)

4. To learn more about a call, touch it, then touch .

To see only your missed calls:

1. Touch .
2. Touch > **Call history**.
3. Touch **Missed**.

Save recent call as contact

You can save a number to make it easy to find and call back later.

To save a number:

1. Touch .
2. Touch .
3. Touch the number.
4. Touch **Add contact**.
5. Select whether to save it to an account or the phone.

6. Do one of the following:
   - To add to an existing contact, touch **Add to existing**.
   - To set up a new contact, add contact details.
7. Touch ✓ or **Save**.

Delete calls from history

Caution: There's no way to restore the history after you delete it.

To delete one call:

1. Touch 📞.
2. Touch 🕓.
3. Touch & hold the number.
4. Touch 🗑.

To delete all calls:

1. Touch 📞.
2. Touch ⋮ > **Call history**.
3. Touch ⋮ > **Clear call history**.

Make emergency call from locked phone

In an emergency, you don’t need to unlock your phone to dial an emergency number (for example, 911 in the US or 112 in Europe).

To dial an emergency number from a locked screen:

1. Swipe up on the lock screen.
2. Touch **Emergency** to see the dialer.
3. Enter the emergency number for your region and touch .

When you make an emergency call, Emergency Location Service automatically sends your location to emergency responders.

Use voicemail

Listen to voicemail

If you've set up voicemail, you'll see in the status bar when a new voicemail message arrives.

1. Do one of the following:
   - Swipe the status bar down and touch .
   - Or, touch , then touch & hold 1.
2. When connected, follow your carrier's system prompts.

If you listen to a new message and disconnect from voicemail without saving or deleting it, you will still see in the status bar.

Manage your mailbox

Your carrier provides your voicemail system.

1. Do one of the following:
   - Swipe the status bar down and touch .
   - Or, touch , then touch & hold .
2. When connected, follow the prompts to manage your messages and mailbox.

Contact your carrier for help with:

- Recovering or resetting your password/PIN for voicemail
- Replaying messages
- Saving, forwarding, or deleting messages
- Replying with or sending voice messages
- Changing number of rings before connecting call to voicemail
- Changing greeting or recorded name
- Changing notification options
- Changing mailbox language

Fix an issue

If remains in your status bar after you listen to your voicemails, try the following.

First, force stop the app:

1. Touch & hold .
2. Touch .

3. Touch **Force stop**.

   This restarts the app and should remove the notification.

If that doesn't help:

1. Call yourself from another phone and leave a short message.
2. Go into your voicemail and delete this message, but wait to hang up until the notification icon has disappeared from your status bar.

Listen to radio

Listen to FM stations

Your phone automatically tunes to radio stations with the best signal. Listening to the radio doesn't use your mobile data.

1. Plug headphones (any brand) into your phone. They serve as a radio antenna and allow you to scan for stations. Even when you listen through your phone's speaker, Bluetooth wireless speakers, or wireless headphones, you still need the wired headphones as your antenna.
2. Open the **FM Radio** app.
3. Do any of the following:
   - To view all stations and listen to any, use the tab.
   - To listen to your favorite stations, use the tab.
   - To seek stations throughout the radio dial, touch the tab, then touch or . Tune to specific frequencies by dragging the tuner to the appropriate number.
   - To change between headphones or loudspeaker, touch or .
   - If you're listening to the radio while using another app, use the mini player in notifications to seek stations or turn the radio off.
   - To turn the radio off, touch .

Tip: If you're having reception issues, try moving your phone as far from the headphones as possible to increase the size of the antenna. Or, try moving a short distance, towards a window if you are inside or away from buildings if you are outside.

Manage your favorites

Add a station to your favorites
On the or tabs, tap by the station.

Listen to your favorite stations
Use the tab.

Remove a favorite
On any tab, tap by the station.

Save and reload your favorites

If you change regions or manually rescan stations, your favorites will be cleared, too, so save them first. Then after you rescan, reload your favorites.

To save your favorites, on the tab, tap > **Save favorites**.

To reload your saved favorites, on the tab, touch > **Load favorites**.

Record current station

1. On the tab, tap to start recording.
2. To stop recording, tap .
3. If desired, edit the recording's name.
4. Touch **DONE**.

To listen to a recording, tap > **Recordings** > .

To delete or rename a recording, beside it, tap .

To delete all recordings, at the top of the screen, tap > **Delete all**.

To change storage location for recordings, tap > **Settings** > **Storage location**.

Set sleep timer for radio

1. Tap > **Sleep Timer**.
2. Select a duration of time to listen.
3. Tap .

   After the specified time, the radio automatically turns off.

Listen to music

Get music

Stream songs or download them to your phone so you can listen when you're on an airplane or don't have an internet connection.

Your phone can play MP3, FLAC, M4A, AAC, AAC+, MIDI, and WAV files.

To get music, do any of the following:

- Purchase it in a music app. Then stream it or download it using that app.
- Transfer it over USB or Bluetooth from your computer to your phone's Music folder.
- Upload it from your computer to the cloud and listen on any internet-connected device.

Stream songs with YT Music

Easily find your favorite albums, singles, and live performances, and get recommendations for new music.

The streaming service is free and contains ads.

The paid, premium service offers:

- Ad-free, uninterrupted music
- Continuous play when the screen is locked
- Downloads for listening offline

To get started:

1. Open the **YT Music** app.
2. Touch to search for music, or use the tabs to browse:
   - **Home**: Get customized stations and recommendations based on your mood, activity, or listening history.
   - **Explore**: Browse newest releases, or choose a playlist for your mood.
   - **Library**: Add songs, albums, and playlists to your library.
3. To learn more about features or subscription pricing, tap your profile icon > **Help & Feedback**.

You can listen through your phone's speaker or by pairing with a Bluetooth speaker.

Use Volume buttons to switch tracks

When the screen is off, you can use the Volume buttons to switch tracks.

To set it up:

1. Go to **Settings** > **Sound** > **Advanced**.

   Or, open the **Moto** app and touch > **Moto Actions**.
2. Tap **Media controls** and turn it on.

To switch tracks when the screen is off:

- For the next track, press & hold the Volume up button.
- For the previous track, press & hold the Volume down button. If this restarts the current track, press Volume down again.

Transfer music files

About transferring music

You can move music files you've bought and saved on your devices to other devices you own.

Music apps that share music files from cloud storage usually just share links to the files instead of transferring them between devices. To transfer music files, the music needs to be stored on the device.

Send files over Bluetooth

To send music files stored on your phone:

1. Pair your phone with the device receiving the music.
2. On your phone, open the **Files** app and tap **Audio**.
3. Touch & hold the file.
4. Touch and select **Bluetooth**.
5. Touch the name of the paired device.

   During file transfer, you'll see in the status bar. To check the status, see the notification.

Receive files over Bluetooth

1. Pair your phone with the device sending the music.
2. On the device sending the music, start the file transfer, following device's instructions.
3. When you receive the Bluetooth notification on your phone, swipe down and tap it, then tap **Accept**.

   During file transfer, you'll see in the status bar. To check the status, open the notification.

The files are saved in Music/Bluetooth, where music apps will find them. You're ready to listen!

Tip: To see Bluetooth files you received, go to **Settings** > **Connected devices** > **Connection preferences** > **Files received via Bluetooth**.

Transfer music from your computer

To move your music from your computer to your phone, connect them with a USB cable and copy the files to your phone's Music folder.

Connect a MIDI device

To connect a MIDI device:

1. Make sure you have:
   - A USB cable that's capable of data transfer and isn't for charging only.
   - A USB OTG adapter cable, if needed.
2. Turn the phone and MIDI device on.
3. Connect them with the USB cable (and adapter if needed).
4. Unlock the phone.
5. Change the USB connection type to allow MIDI connection:
   a. Swipe down from the top of your home screen and tap the **Charging this device via USB** notification.
   b. Tap **MIDI**.

Connect to Wi-Fi networks

Turn on and connect

Open quick settings and tap to turn Wi-Fi on.

Your phone will automatically connect to Wi-Fi networks you've used before. If there aren't any, you can search for nearby networks and connect with one.

When you're connected, you'll see in the status bar. If the connection is poor, you'll see instead.

Change, share, remove networks

After connecting to a Wi-Fi network, your phone saves its details to automatically connect to previously used networks. You can manually connect to a different nearby network, share a network, or remove a saved network you no longer want to connect automatically.

Search for new networks

To scan for nearby available networks that you haven't connected to before:

1. Open quick settings, then touch & hold .
2. Turn **Use Wi-Fi** on .

   You'll see a list of available networks. If a network needs a password, you'll see .
3. Do one of the following:
   - If the network is open (no), tap its name to connect.
   - To type a password from the network owner, tap the network to connect to, then enter the password. For your home network, get the password from the label on the Wi-Fi router. For a public network, get the password from the business or organization.
   - To connect using a QR code, next to **Add network**, tap and scan the code.
   - If the network is hidden, you'll need to set it up before it'll show up in the list of available networks.

Change networks

To switch to a network you've used before:

1. Open quick settings, then touch & hold .
2. In the list of nearby networks:
   - To connect to a different network, tap its name.
   - To change settings for the currently connected network, tap > .
   - To change settings for a saved, disconnected network, touch & hold its name, then tap **Modify**.

Share a network

You can share connection information with a friend so they can connect to the same network.

1. Open quick settings, then touch & hold .
2. Tap the network you're connected to, then tap .
3. Show the person the code to scan or the Wi-Fi password to type.

Remove a network

If you don't want to automatically connect to a saved Wi-Fi network, you can forget that network.

1. Open quick settings, then touch & hold .
2. If the network appears in your list of nearby networks, touch & hold its name, then tap **Forget**.
3. To review all of your saved networks, tap **Saved networks**. For each network you want to remove, tap its name, then tap **Forget**.

Turn Wi-Fi off

To save battery life, turn off Wi-Fi when you're not near a Wi-Fi network.

Open quick settings and tap to turn it off.

Advanced Wi-Fi settings

Disable Wi-Fi scanning

1. Go to **Settings** > **Location**.
2. Touch **Wi-Fi and Bluetooth scanning**.
3. Turn **Wi-Fi scanning** off .

If you turn this off, apps that use your location won't work as well.

Connect to hidden networks

1. Go to **Settings** > **Network & internet** > **Wi-Fi** > **Add network**.
2. Enter the SSID (network name), security type, check **Show password** and enter the password.
3. Tap **Advanced options**, and change **Hidden network** to **Yes**.
4. Tap **Save**.

   The hidden network is now visible in the list of available networks, and if you weren't connected to Wi-Fi previously, you're now connected.
5. If you were connected to Wi-Fi when you added the hidden network, in the list of available networks, tap the name of the saved network, then tap **Connect**.

Connect with Wi-Fi Direct

If you have a device, like a printer or TV, that supports Wi-Fi Direct, you can connect your phone without a wireless router or cable.

When you turn on your phone’s Wi-Fi, Wi-Fi Direct is automatically enabled.

To connect to a Wi-Fi Direct device:

1. On the device you want to connect, set up Wi-Fi Direct. For instructions, see that product's user guide.
2. On your phone, go to **Settings** > **Network & internet** > **Wi-Fi** > **Wi-Fi preferences**.
3. Touch **Advanced** > **Wi-Fi Direct**.

   You'll see a list of Wi-Fi Direct devices that are within range and compatible.
4. Tap the device’s name to connect.

Use Airplane mode

Airplane mode turns off all wireless connections on your phone to prevent it from transmitting signals that could interfere with airplane communications.

Turn it on

Open quick settings and tap to turn airplane mode on. This disables all wireless connections (Wi-Fi, voice and data for calls and text messages, Bluetooth). If your airline permits it, you can then turn Wi-Fi and/or Bluetooth back on during the flight. Other wireless connections will remain off.

Turn it off

Open quick settings and tap .

Control data usage

Turn mobile data off/on

To toggle it on/off, swipe the status bar down and touch .

When you turn off cellular data, you can still use data over Wi-Fi.

Cellular data must be ON if you want to:

- Receive or send multi-media messages
- Share your phone's internet connection with other devices

Set data warning and limit

Data plans often have limits, and it's easy to exceed them. Setting up a usage warning can prevent surprises by alerting you when approaching your limit. You can even set a usage limit to turn off cellular data when it's reached, eliminating unexpected charges.

1. Go to **Settings** > **Network & internet** > **Mobile network**.

   Or, in quick settings, touch & hold .

2. Tap **Data warning & limit**.
3. To set a warning, turn **Set data warning** on , then tap **Data warning** and enter the amount of data.
4. To set a usage limit, turn **Set data limit** on , then tap **Data limit** and enter the amount of data.

Restrict background data

Even when you're not actively using them, most apps use data in the background to sync information and deliver notifications.

To conserve data when you're running low, use Data Saver to turn off background data for all apps. You can also prevent specific apps from ever using background data, whether Data Saver is on or not.

Notifications stop: When you turn off background data for an app, you won't receive ANY notifications from the app until you open the app so it can sync.

Restrict for all apps when you're low on data

1. Go to **Settings** > **Network & internet** > **Data Saver**.

   Or go to **Settings** > **Network & internet** > **Advanced** > **Data Saver**.

2. Turn **Use Data Saver** on .

   You'll see in your status bar and all apps are prevented from using background data.

> **Tip:** The first time you turn Data Saver on, is added to quick settings. After that, just swipe the status bar down and tap to turn Data Saver off/on.

3. To allow certain apps to continue using background data, tap **Unrestricted data**, then next to the app name, slide the switch on .

Restrict for specific apps indefinitely

1. Go to **Settings** > **Network & internet** > **Mobile network**.

   Or, in quick settings, touch & hold .

2. Tap **App data usage**.
3. Tap an app, then turn **Background data** off .

Share your internet connection

When you need an internet connection for another device, share your phone's:

- For wireless sharing with another Wi-Fi capable device, turn on your Wi-Fi hotspot, which is great for range and speed. This uses more power, so it's best when you can plug in.
- For wireless sharing with a device in close proximity (like a phone next to a computer), you can use Bluetooth tethering, offering you less interference in crowded Wi-Fi environments, more privacy, and less power consumption than your Wi-Fi hotspot.
- To share over a physical connection, connect your phone to a device with a USB cable, providing a more stable, speedy, and safe connection in some situations than sharing over wireless connections.

Your cellular plan must support data sharing. If you don’t know, contact your carrier.

Use your hotspot

Step 1: Set it up

1. Check that:
   - Cellular data is on. (If cellular data is off, your phone doesn't have an internet connection to share.)
   - Data Saver is off.
2. Go to **Settings** > **Network & internet** > **Hotspot & tethering**.
3. Tap **Wi-Fi hotspot** and do any:
   - Make it easier to find and connect to your hotspot. Tap the name for your hotspot and change it.
   - Prevent others from seeing your phone's network name. Check **Hide my device**.
   - See your current password or change it. Tap **Advanced** > **Hotspot password**.
   - Improve hotspot signal. For less interference, tap **Advanced** and change the broadcast channel/band to 5GHz. For a stronger signal, change it to 2GHz. (This feature is not available in all countries.)

Step 2: Connect devices

1. Check that cellular data is on. If cellular data is off, your phone doesn't have an internet connection to share.
2. Go to **Settings** > **Network & internet** > **Hotspot & tethering**.
3. Touch **Wi-Fi hotspot** and turn it on, then plug in your phone to charge. Using the hotspot really drains the battery!

   When your hotspot is active, you'll see in the status bar.

4. Set up the connection.

To connect	Do this
A phone	a. On your phone, next to the hotspot's name, tap and unlock if prompted. b. Use the other phone's camera to scan the QR code that provides the password.
Other device	a. Open the device's Wi-Fi settings. b. Select your phone's hotspot. c. Enter the hotspot password. Learn how to find the hotspot's password.

Tip:

The first time you turn the hotspot on, is added to quick settings. After that, just swipe the status bar down and touch to turn the hotspot off/on.

View or change password

1. Go to **Settings** > **Network & internet** > **Hotspot & tethering**.
2. Tap **Wi-Fi hotspot**.
3. Touch **Advanced** > **Hotspot password** to see the current password.
4. To change the password, type over the current password.

Note: Although you can turn off passwords for your hotspot, keeping a password prevents unauthorized usage of your cellular data.

Manage hotspot connections

View number of connections

To see the number of devices connected to your hotspot:

- In quick settings, look below .
- Or, go to **Settings** > **Network & internet** > **Hotspot & tethering** and look under **Wi-Fi hotspot**.

By assigning a password for your hotspot, you ensure that people can't connect to your hotspot without your knowledge or permission.

Disconnect everyone

To disconnect all devices and prevent them from reconnecting:

1. Turn the hotspot off.
2. Change the password.

3. Turn the hotspot back on to continue using it.

Tip: When no devices are connected, the hotspot turns off automatically. To adjust this setting, go to **Settings** > **Network & internet** > **Hotspot & tethering** > **Wi-Fi hotspot** > **Advanced** > **Turn off hotspot automatically**.

Control who can connect

USB tethering

To connect a device to the internet using your phone's cellular data and a USB cable:

1. Check that cellular data is on. If cellular data is off, your phone doesn't have an internet connection to share.
2. Connect your phone to your computer with a USB cable.
3. On your phone, go to **Settings**.
4. Tap **Network & internet** > **Hotspot & tethering**.
5. Turn on **USB tethering** to start the connection.

   You'll see in your notifications.

To stop the connection, tap the notification and turn off **USB tethering**, then disconnect your phone and computer.

Bluetooth tethering

To connect a device to the internet using your phone's cellular data and a Bluetooth connection:

1. Check that cellular data is on. If cellular data is off, your phone doesn't have an internet connection to share.
2. Turn on Bluetooth on your phone and pair with the other device.
3. Set up the other device to get its network connection via Bluetooth.
4. On your phone, go to **Settings**.
5. Tap **Network & internet** > **Hotspot & tethering**.
6. Turn on **Bluetooth tethering** to start the connection.

   You'll see in your notifications.

To stop the connection, tap the notification and turn off **Bluetooth tethering**.

Connect to VPNs

A virtual private network (VPN) lets you access files on a secure network like an office network with a firewall. Contact your network administrator for VPN settings and any additional apps or requirements.

To set up a VPN connection:

1. Go to **Settings** > **Network & internet**.
2. Touch **Advanced** > **VPN**. If prompted, set a screen lock PIN or password.
3. Touch ➕.
4. Choose the type of VPN and enter settings from the network administrator.
5. To always remain connected to the VPN, check **Always-on VPN**.
6. Touch **Save**.

The network is stored in the VPN list so you can select it when you need to connect.

Connect with Bluetooth

You can use Bluetooth to connect your phone to other devices without a cord. After you pair a Bluetooth device for the first time, your devices can connect automatically.

Turn Bluetooth on/off

Bluetooth uses more of your battery, so turn it off when not in use.

1. Open quick settings.
2. Tap to switch it on/off.

Pair with and use devices

To connect with a new Bluetooth accessory or other device, you need to pair with it. You only need to do this once for each device.

Your devices stay paired until you unpair them.

Pair with a device

1. Set the device you want to pair (accessory, computer, other phone, etc.) to Bluetooth discovery mode so that your phone can find it. See the device manufacturer's instructions.
2. On your phone, go to **Settings** > **Connected devices**.
3. Tap .

   As the phone searches for available devices, you'll see .
4. Tap an available device to connect.
5. Do any of the following:
   - If a pairing code appears on your phone and Bluetooth device, make sure the codes match. (If they don't, tap **Cancel**, verify the name of the device you want to pair with, and try again.)
   - If your device shows a passkey (like 0000 or 1234), enter it on your phone. If you don't see a place to enter it, swipe down from the top of your screen and tap the Bluetooth notification.
   - If your device doesn't show a passkey and you must enter one for the device to pair, see the device manufacturers' instructions.
6. Tap **Pair** on your phone. Check the other device for a pairing prompt as well; if it has one, you'll need to confirm on both devices or pairing will fail.
7. Set sharing options if you'll want to share contacts, phone audio, media audio, or internet access.

Tip: If you use a screen lock, you can define a paired Bluetooth device as a trusted device, keeping your phone unlocked while connected to it. When you disconnect or move out of range, your phone locks again. Go to **Settings** > **Security** > **Smart Lock** > **Trusted devices**.

Can't pair? Troubleshoot the issue.

Use paired device

Tip: Bluetooth connections can really drain your battery. Save power by turning Bluetooth off when you're not connected to a device.

After pairing with a device, you'll need to set sharing options and then you can use Bluetooth to:

- Make or receive calls with a headset
- Make or receive calls and play music over your car's audio system
- Transfer music
- Share photos
- Share contacts
- Share your phone's internet connection with your computer

Reconnect with a device

1. Open quick settings and turn on.
2. Turn on the Bluetooth device.

Configure, rename, or remove

Set sharing options for paired device

1. Go to **Settings** > **Connected devices**.
2. Do one of the following:
   - For a currently connected device, tap the device name.
   - For a previously paired device, next to the device name touch .
3. Turn sharing options on or off.
4. On the paired device or in the device's app, look for Bluetooth settings to review and adjust. For more information, see the paired device manufacturer's instructions.

Change phone's name

You'll see your phone's name on other Bluetooth devices when you're pairing with them. You can change the name.

1. Go to **Settings** > **Connected devices**.
2. Tap > **Device name**.

Remove (unpair) a device

1. Go to **Settings** > **Connected devices**.
2. Next to the device, tap > **FORGET**.

Turn off Bluetooth scanning

When Bluetooth is off, your phone can still scan and automatically connect to a previously paired device. To prevent this, turn off Bluetooth scanning.

To turn off scanning:

1. Go to **Settings** > **Location**.
2. Touch **Wi-Fi and Bluetooth scanning**.
3. Turn **Bluetooth scanning** off .

If you turn this off, apps that use your location won't work as well.

Share files and links with nearby devices

Share content easily and securely. You can share things like photos or videos, contacts, documents, and links. Send them to another device near you without using an internet connection.

You can share with Android 6+ devices and Chromebooks, and with selected Windows devices through an app. Sharing with iPhones isn't supported. For more about supported devices and countries, see Google's help.

Send and receive content

Turn on sharing

1. On your phone, make sure Bluetooth and Location are turned on.
2. Go to **Settings** > **Connected devices** > **Connection preferences** > **Quick Share**.

   Tip: To add Quick Share to quick settings, open quick settings, tap , then drag the tile where you want it.

3. Tap **Who can share with you**.
4. Choose who can see your phone for sharing.

Share content

1. Open the content to share.
2. Tap or tap > **Share**, then select **Quick Share**.

   Your phone will look for nearby devices.
3. Hold your phone and the other phone close to each other.
4. When you see the other phone in your list of nearby devices, tap its name to send the item.

   The other person can accept or reject the transfer.

Receive content

1. When someone shares content with you, you'll get a notification.

   If needed, tap the notification to make your phone visible.
2. To get the content, tap **Accept**.

Turn off sharing

Go to **Settings** > **Connected devices** > **Connection preferences** > **Quick Share** and turn it off .

Tip: You can change your phone's name to something less identifiable before sharing or receiving. Go to **Settings** > **Connected devices** > **Connection preferences** > **Quick Share** > **Device name** and edit the name.

Choose who can see you for sharing

To adjust who can share with you:

1. Go to **Settings** > **Connected devices** > **Connection preferences** > **Quick Share**.
2. Choose who can see your phone for sharing:
   - **Hidden**: Your phone is visible to your other devices that are signed into the same Google account, even when the screen is off or locked.
   - **Contacts**: Your phone is visible to your nearby contacts when the screen is on and unlocked.
   - **Everyone**: Your phone is visible to anyone nearby when the screen is on and unlocked. To limit access to 10 minutes, mark the checkbox.

   If a contact isn't available, you'll need to add an email address associated with their Google account to their contact info.

Fix an issue

If you can't share content with someone, try these steps:

1. On both phones, check that Bluetooth is on.
2. On both phones, check that Location is on.
3. Bring the devices close together, within 1 foot (30 cm) of each other.
4. Turn airplane mode on and then off.
5. Turn your phone off and then on again.
6. Wait until no one else is sharing content with the other phone.

Transfer files between phone and computer (USB)

You can transfer music, photos, and other files between your phone's storage and computer (in either direction). Use a USB cable that's capable of data transfer and isn't for charging only.

When you connect the phone and computer with the USB cable, the phone’s USB connection type is set to charging mode, which charges your battery but prevents your computer from seeing files on your phone. Before transferring files, change the USB connection type to allow transfer of:

- Any type of file
- Only photos and videos

Step 1: Connect phone to computer

1. With the phone and computer turned on, connect the phone and computer with a USB cable.
2. Unlock the phone.
3. Change the USB connection type to allow file transfers:
   a. Swipe down from the top of your home screen and touch the **Charging this device via USB** notification.
   b. To transfer any type of file, tap **File transfer**.

      Or, to transfer only photos and videos, tap **PTP**.

Step 2: Transfer files

With a Windows computer

1. Ensure the phone is properly connected to the computer using the steps above.

   If you don't unlock the phone and change the USB connection to allow file transfers, you won't see any files on your phone.
2. On your computer, open File Explorer, click the name of your phone, and navigate to its internal storage or SD card.
3. If you selected **PTP** when you connected the phone, in File Explorer choose whether to import pictures and videos automatically or manually.
4. Open a second File Explorer window to see your computer folders.
5. Navigate to the folders or files to transfer, then drag and drop them to and from the open phone storage and computer folders.

With a Mac

1. Ensure the phone is properly connected to the computer using the steps above.

   If you don't unlock the phone and change the USB connection to allow file transfers, you won't see any files on your phone.
2. On your computer, download the Android File Transfer application from www.android.com/filetransfer and follow the onscreen instructions.

Where to find transferred files

Files are stored in these folders on your phone:

- **DCIM**: (Digital Camera Images) Photos and videos taken with the Camera app
- **Pictures**: Photos you edited and photos from apps other than Camera
- **Download**: Files downloaded from the internet
- **Music**: Files for apps that play music
- **Ringtones**: Sound files for ringtones
- **Notifications**: Sound files for notifications
- **Alarms**: Sound files for alarms

Fix an issue

If you're having issues, try these troubleshooting steps.

Cast screen or media to TV

Mirror with Chromecast

To mirror your screen on a TV, showing all apps and screens you use on your phone, you must:

- Use a TV with Chromecast built-in.
- Or, plug a Chromecast into your TV's HDMI port. (Learn how.)

To start casting:

1. Make sure your phone and Chromecast or TV with Chromecast are connected to the same Wi-Fi network.
2. Go to **Settings** > **Connected devices** > **Connection preferences** > **Cast**.

   Or, from quick settings, tap .
3. Tap the name of the Chromecast or TV to connect.

To stop:

- On the casting notification, tap > > **Disconnect**.
- Or, from quick settings, tap > **Disconnect**.

Cast an app

You can cast an app if you:

- Have a smart TV that supports mobile apps for viewing or playing media from your phone. See your TV user guide for instructions to connect your phone.
- Have Chromecast or a TV with Chromecast built-in.

Miracast is not supported.

To cast an app:

1. Make sure your phone and smart TV or Chromecast are connected to the same Wi-Fi network.
2. In a cast-compatible app (like YouTube), tap .

   If you don't see or don't see your TV listed in the casting options, try these troubleshooting steps.

While casting:

- You'll see in the status bar.
- You can still make and receive calls and use your phone's other features.

To stop casting:

- In the app that's casting, tap and tap the option to disconnect.
- From the notification, tap .

Cast personal media with Wi-Fi Direct

If your TV supports Wi-Fi Direct, set up a connection between your phone and TV so that you can view or play media from your phone.

For information about using Wi-Fi Direct after you've connected, see the user guide that came with your TV.

Fix an issue

After each step, see if your issue is fixed.

Check the basics

1. If you're using a VPN, turn off the VPN and try again.
2. Make sure your phone and Chromecast or smart TV are connected to the same Wi-Fi network.
3. Move your phone to within 15 feet of your Chromecast or smart TV.
4. If you're using Chromecast or a TV with Chromecast built-in, check for updates to the Home app.

Phone can't find smart TV

First, check the basics. Then:

1. On the TV, open the app and start a video. Then on your phone, open the app and try casting to the TV again.
2. Link the app on your phone to the app on the TV:
   a. On your phone, open the app, open its settings, and look for options to watch on TV. (For example, **YouTube** > M > **Settings** > **Watch on TV** > **Link with TV code**.)
   b. Follow the app's onscreen instructions to complete setup.
3. Reboot your Wi-Fi router.
4. Check your TV for firmware and app updates. See the TV manufacturer's support website for information.
5. Check your TV manufacturer's support website to make sure the app is still supported on your TV model.

Check for app help

If you're having issues casting with one of these apps, check their help center for troubleshooting information:

- Netflix
- Hulu
- Amazon Prime Video
- YouTube
- Google TV

Print from your phone

Set up printing

To connect your printer and phone:

1. Before you begin:
   - If your printer is connected to a Wi-Fi network, be sure the phone and your printer are connected to the same network.
   - If your printer supports Wi-Fi Direct, set up a direct connection between the phone and printer.
2. Go to **Settings** > **Connected devices** > **Connection preferences** > **Printing**.
3. Touch **Default Print Service** to automatically find your printer.

   Once your printer is found, it is ready to print.

If your printer isn't found in Default Print Service:

1. Touch **Add service**.
2. In Play Store, search for “[printer brand] print service” and install the app for the printer's service plugin.
3. Once installed, return to **Settings** > **Connected devices** > **Connection preferences** > **Printing** and touch the print service plugin name to automatically find your printer.
4. If your printer isn't found automatically, touch > **Add printer** > .
5. Enter the printer's name and IP address (found in your printer settings on connected computer).

Print

1. Open the item to print, such as:
   - A photo in Photos
   - An email
   - A document in Drive
   - A web page in Chrome
2. Tap or > **Print**. (If you're using Chrome, > **Share** > **Print**.)
3. Select printer options if needed.
4. Tap .

About wireless sharing

What you can share

You can share your photos and videos, contacts, screenshots, and downloaded files.

When sharing photos and videos

When deciding how to share your photos or videos, consider these factors:

- Resolution (high versus low) of the photo or video; high resolution uses more data
- Number of photos to share (one photo or a few or an entire vacation album)
- Whether you want to share on the internet or from device-to-device
- Length of availability for sharing

Ways to share

Choosing how to share depends on the type and amount of content you're sharing, and how widely you want to share it.

Quick Share

Good for:

- Sharing securely with nearby devices
- Sharing a link, a contact, one or a few photos
- Fast, immediate sharing

Things to consider:

- The other device must be within 1 foot (30 cm).
- Can't be used to share with iPhones.
- No Wi-Fi or cellular data connection required.

Learn more.

Bluetooth

Good for:

- Sharing from phone-to-phone or other connected device
- Fast sharing

Things to consider:

- Your phone must be paired and connected with another device.

Message (MMS)

Good for:

- Sharing one photo or a low-resolution video
- Sharing with a friend or group
- Sharing immediately, as an event is happening

Things to consider:

- You and your recipients must have cellular data plans to receive multimedia text messages.
- Sending high resolution photos via text message uses more more data.
- Photos and video remain available until the recipient deletes the message.
- High quality videos are too large and cannot be shared in text messages.

Learn how

Email

Good for:

- Sharing one or a few photos
- Sharing with a friend or group

Things to consider:

- Some email providers limit attachment sizes. For large files, upload the file to a cloud storage and email the link instead of the file.
- Email attachments remain available for download until the recipient deletes the email.

Learn how

Cloud

Good for:

- Sharing high resolution photos, multiple photos, entire albums, and videos
- Controlling sharing via links
- Controlling how long you share something (You can easily delete it or turn off sharing privileges.)

Things to consider:

- Many cloud services offer free storage with a basic account.
- Cloud storage services are fairly secure, but not completely free from security breaches, so upload wisely.
- Upload over Wi-Fi to prevent cellular data charges.

Learn how

Social app

Good for:

- Sharing publicly, with large groups of friends, followers, and subscribers
- Sharing one photo at a time, or many photos, albums, or videos
- Controlling how long you share something (You can easily delete it or turn off sharing.)

Things to consider:

- Understand social network privacy and sharing policies before you post.
- Review updates to social network privacy and sharing policies often.
- Requires a Wi-Fi or cellular data connection.

Change app settings

Set or change default apps

If you have multiple apps that do the same thing, you can pick which app to use by default.

Pick when asked

Sometimes, your phone asks which app to use. For example, your phone might ask which app to use to open a PDF file.

To set a default when asked:

1. Tap the app to use.
2. Pick how often you want to use that app for this action: **Always** or **Just once**.

If you select Always, you won't be asked which app to use anymore. To have your phone ask you again, you can clear the default:

1. Go to **Settings** > **Apps & notifications**.
2. Tap **Default apps** > **Opening links**.

   Or, touch **Advanced** > **Default apps** > **Opening links**.
3. Tap the app you selected as default.
4. Turn **Open supported links** on .

Pick any time

You can change some default apps (such as browser or messaging) at any time:

1. Go to **Settings** > **Apps & notifications**.
2. Touch **Default apps**.

   Or, touch **Advanced** > **Default apps**.
3. Touch the default to change.
4. Touch the app to use.

Review or change permissions

Review by feature

The first time you use an app, and sometimes when you install or update it, you are asked to grant the app permission to access certain data and phone features. You can adjust these permissions any time.

To adjust permissions by feature:

1. Go to **Settings** > **Privacy**.
2. Tap **Permission manager** tab.
3. Tap a feature to see which apps have permission to use it.
4. Turn that permission on or off for each app as needed.

Review by app

To adjust permissions by app:

1. Touch & hold the app icon, then tap **App info** ⓘ.
2. Tap **Permissions**.
3. Turn each permission on or off as needed.

> **Tip:** To see how the app uses each permission, tap ⋮ > **All permissions**.

Adjust special app access

In **Settings** > **Apps & notifications** > **Advanced** > **Special app access**, you can adjust these settings:

- **Usage access**: Control which apps have access to data about your app usage (what other apps you're using and how often, your carrier, language settings, and other details).
- **Unrestricted data**: Allow certain apps to use background data even when Data Saver is on. Learn more.

You can also control whether apps have access to features such as Picture-in-picture, Battery optimization, and Do Not Disturb. In general, you shouldn't need to adjust these.

Choose how apps notify you

Turn off app notifications

When you receive unwanted notifications from an app, touch & hold the notification, then tap **Turn off notifications**.

To review all apps and adjust whether they can send notifications:

1. Swipe down to view your notifications.
2. At the bottom of the list, tap **Manage notifications**.
3. Do one of the following:
   - To stop all notifications from an app, turn it off.
   - To stop certain notifications from an app, tap the app name, then turn notifications or off for each category.
   - To stop an app from showing notifications as a banner across the top of an unlocked screen, like those for incoming calls, tap the app name, (if needed, tap the notification type), then turn **Pop on screen** off for the category.

Tip: To prevent notifications from all apps during certain times or calendar events, use Do Not Disturb.

Silence an app's notifications

Change to Silent

If you want an app's notifications to be less intrusive, you can categorize them:

- **Alerting**: You'll hear a sound and feel vibration (if on), get a message on your lock screen, and can see the app's icon in your status bar.
- **Silent**: You won't hear a sound or feel a vibration. But the notification will show up when you swipe down from the top of your screen.

Option 1: On a notification

1. Touch & hold a notification.
2. Tap **Silent**.

Option 2: In Settings

1. Go to **Settings** > **Apps & notifications** > **See all # apps**, select the app, and tap **Notifications**.
2. Tap the type of notification to change.
3. Tap **Silent**.

Change notification volume

To adjust the volume level of all notifications:

1. Press a Volume button and on the screen tap .

2. Adjust the **Ring volume** slider.

Change notification sound

You can modify the notification sound for all apps, or assign a distinctive sound to notifications from a specific app, replacing the default.

Set default notification sound

1. Go to **Settings** > **Sound** > **Advanced** > **Default notification sound**.
2. Do one of the following:
   - To change it, choose a new sound.
   - To turn notification sounds off, select **None**.

Set notification sound for a specific app

1. Touch & hold the app icon.
2. Tap ⓘ > **Notifications**.
3. Tap the category for enabled notifications, then tap **Advanced** > **Sound** and select a unique ringtone, or set it to none.

If you can't hear a notification

To let an app's notifications be heard when Do Not Disturb is on:

1. Touch & hold the app icon.
2. Tap ⓘ > **Notifications**.
3. Tap the category for enabled notifications, then tap **Advanced** and turn **Override Do Not Disturb** on .

Turn on app notifications

If an app isn't sending notifications but you want it to:

1. Go to **Settings** > **Apps & notifications** > **Notifications**.
2. Tap **See all from last ### days**.
3. At the top, tap ▾ and select **Turned off**.
4. Turn notifications on as needed.

Turn on snoozing

If you want to be able to snooze your notifications, turn on snoozing:

1. Go to **Settings** > **Apps & notifications** > **Notifications**.
2. Tap **Advanced**.
3. Turn **Allow notification snoozing** on .

Turn notification dots off/on

App icons show dots to alert you about unread notifications. You can turn off dots for one or all apps.



Turn dots off for all apps

1. Go to **Settings** > **Apps & notifications** > **Notifications**.
2. Tap **Advanced**.
3. Turn **Allow notification dots** off or on .

Turn dots off for one app

1. Touch & hold the app icon.
2. Tap > **Notifications**.
3. Tap **Advanced**.
4. Turn **Allow notification dot** off or on .

Control lock screen notifications

If you've set a pattern, PIN or password, you can control which type of notifications show on your lock screen and prevent them from revealing private information.

To adjust notifications for all apps:

1. Go to **Settings** > **Apps & notifications** > **Notifications**.
2. To hide sensitive content on your lock screen, turn **Sensitive notifications** off .

   You'll get lock screen notifications for an incoming email or chat, but they won't include message details.

   For finer control, leave this on to allow details, and instead hide sensitive content from specific apps.
3. To change which notifications show on your lock screen (show all, hide notifications from apps you silenced, or hide all), tap **Notifications on lock screen**.

To hide sensitive content from specific apps:

1. Set lock screen notifications for all apps to **Show alerting and silent notifications**.
2. Touch & hold the app icon, then tap > **Notifications**.
3. Types of notifications the app sends appear here. For each enabled notification that you want to hide:
   a. Tap the name.
   b. Tap **Advanced** > **Lock screen** > **Show sensitive content only when unlocked**.

Tip: When you turn on Lockdown, notifications won't show on your lock screen.

Charge phone

Some apps and features use more power than others. So, depending on what you use, the amount of time before you need to charge will vary.

How to charge

Your phone doesn't support wireless charging. Use a USB charger or connect it to a power source with a USB cable.

Connect to charger

1. Connect your phone to the charger that came with your phone, or to a charger that is compatible with your phone.

   Other chargers, including laptops, can charge more slowly.

2. Insert the plug into an electrical outlet.

See if your phone is charging

When the phone is off and charging, you'll see the outline of a battery and a percentage. If the battery is completely discharged, this will not appear until the phone has received the minimum voltage required to boot.

When the phone is on and charging, you'll see  in the status bar.

Tips for charging phone

- You can use your phone while charging. To charge faster, don't use your phone while charging.
- If you can't turn the phone on while it's charging, wait until it receives enough voltage before turning it on.
- When the battery gets low, the phone sends a notification.
- Use Battery saver mode when the battery is low.
- You can turn off charging sounds.

Extend battery life

Choose settings that use less battery

To get the most life from your battery:

- **Connections:** Turn off Bluetooth and GPS when you're not using them.
- **Wi-Fi:** Turn on Wi-Fi when the phone is in a location with Wi-Fi coverage.
- **Screen:** Turn down screen brightness, change to Dark theme, and set a shorter screen timeout.
- **Sync:** If you don't need it, turn off automatic syncing for all accounts. This means you won't receive notifications when updates occur and you'll need to manually sync to get new emails.

Temporarily conserve battery power

Use Battery saver mode to keep going on a low battery.

Also, avoid these battery-intensive activities until you can charge:

- Recording or watching videos
- Listening to music
- Taking pictures
- Using Live (animated) wallpaper

See what's using your battery

To see if a specific app or service is draining your battery:

1. Go to **Settings** > **Battery** > **USAGE DETAILS**.
2. Swipe up to view the list of apps and features using power since the last full charge.
3. Tap the app or feature using a lot of power.
4. Under **Manage battery usage**, tap options for reducing the power usage.

Keep adaptive battery and battery optimization on

To ensure that apps use your battery only when they need to, keep adaptive battery and battery optimization on.

Check that adaptive battery is on for your phone

When you keep adaptive battery on, infrequently used apps will run less when you're not using them. Your phone will learn how you use apps over time and adjust for best battery life.

1. Go to **Settings** > **Battery** > **Adaptive Battery**.
2. Turn **Use Adaptive Battery** on .

Check that battery optimization is on for each app

If you turn off Battery optimization for an app, that app can run when you're not using it, even when Adaptive Battery is on. This decreases battery life unnecessarily.

1. Go to **Settings** > **Apps & notifications** > **Advanced** > **Special app access**.
2. Tap **Battery optimization**.
3. Filter the list by **Not optimized**. Essential apps and services are listed as **Battery optimization not available**. If any apps are listed as **Not optimized**:
   a. Tap the app.
   b. Tap **Optimize** > **Done**.

Use Battery saver

Battery saver helps extend battery life until your next charge. Your phone can prompt you to activate it when the battery is low, or you can enable it anytime.

When Battery saver is on

When the phone is in Battery saver mode, you'll see in the status bar.

To save power, your phone will:

- Turn on Dark theme (You can turn it off, but that uses more battery.)
- Wait until you use an app to refresh its content, like email or news
- Stop apps from doing things in the background (like listening for you to say “Hey Google”)
- Stop using Location services when your screen is off

Turn Battery saver on/off

Open quick settings and tap to manually turn Battery saver on/off.

Turn Battery saver on automatically

To turn Battery saver on when your battery is below a specified level:

1. Open quick settings, then touch & hold .
2. Tap **Battery saver** > **Set a schedule** > **Based on percentage**.
3. Move the slider to adjust the percentage when Battery saver switches on.

Tip: Battery saver turns off while your phone is charging. It turns back on when you unplug the phone.

Let it turn off when your phone is charged

To prevent your phone from turning Battery saver on before you need it, you can set it to turn off when your phone is charged to 90% or above:

1. Open quick settings, then touch & hold .
2. Tap **Battery saver**.
3. Make sure **Turn off when fully charged** is on .

Show battery percentage in status bar

To show the percentage of battery power remaining in the status bar:

1. Go to **Settings** > **Battery**.
2. Turn **Battery percentage** on .

About storage options

Phone internal storage

You can store photos, videos, music, and applications on your phone. Files you downloaded from the internet and attachments you save from email or text messages are stored there, too.

You can free up space when needed.

SD card storage

You can store media files on an SD card. Just insert the card and move your files from phone storage to the SD card.

Benefits include:

- Immediate access to your files
- No cellular data or internet connection required to access files
- More control over privacy

Cloud storage

Clouds are great for storing files, like photos, videos, and music, you want to share and access from other devices.

Benefits include:

- Access your files from any device with an internet connection
- File synchronization - no need to keep track of multiple versions in multiple storage locations
- Backups of photos and videos available if phone is lost or damaged

Cloud storage providers typically offer free storage that can be expanded with a paid subscription once you reach the free-storage limit. Or you can manage your free storage by removing files you no longer need to make space for new ones.

Apps like Drive and Photos let you easily back up media to cloud storage.

Manage phone storage

Free up space by scanning

To scan your phone for old and unused items to remove, like downloads and unused apps:

1. Open the **Files** app.
2. Tap ☰ > **Clean**.

   You'll see suggestions for categories of items to check and free up space.
3. Tap the suggestions and follow onscreen instructions to uninstall, move, or delete items.

If you don't see suggestions to free up space, check that suggestions are on:

1. Open the **Files** app.
2. Tap ☰ > **Settings**.
3. Tap **Notifications** and turn on ones you want to receive.

Free up space manually

To free up space:

1. Open the **Files** app.
2. Tap a category (apps, images, videos, etc.) to view that type of item.
3. Do any of the following:
   - To uninstall apps, tap the app's name, then tap **Uninstall**.
   - To clear an app's cache, tap the app's name, then tap **Storage & cache** > **Clear cache**.
   - To clear your data for an app, tap the app's name, then tap **Storage & cache** > **Clear storage**.
   - To delete media or other files, touch & hold to select one or more items, then tap 🗑.

Schedule automatic removal of photos and videos

If you automatically back up your photos and videos, you can automatically remove copies from your phone's internal storage after 30, 60, or 90 days.

1. Go to **Settings** > **Storage**.
2. If you installed an SD card, tap **Internal shared storage**.
3. Tap **Storage manager** and turn it on.
4. Tap **Remove photos & videos** and select a duration.

If you store photos or videos on your SD card, this does not delete them.

Manage SD card

Move photos, videos, music to SD card

To free up internal storage on your phone:

1. Be sure you've inserted and set up your SD card.
2. Open the **Files** app and tap ☰ > **Clean**.

   Or, go to **Settings** > **Storage** > **Internal shared storage** > **FREE UP SPACE**.
3. If there are media files to move, tap the option to free up space.
4. Select items to move.
5. Tap ⋮ > **Move to** > **SD card**.

Tip: You can set the camera to store all new photos and videos on the SD card.

Move apps to SD card

You cannot store apps on the SD card because it is portable storage. If needed, you can free up space on your phone.

Eject SD card

Drag the SD card notification down, and tap **Eject**.

If you don't see the notification:

1. Go to **Settings** > **Storage**.
2. Next to your SD card name, tap ⏏.

It's now safe to remove the card from the phone.

To insert the card into another device (computer, projector, etc.) that uses different card dimensions, you may need the adapter that came with your card. See device manufacturer's instructions for the type of adapter required and insertion instructions.

Erase SD card

1. Go to **Settings** > **Storage**.
2. Select your SD card.
3. Tap ⋮ > **Storage settings** > **Format**.
4. Follow onscreen instructions to format the card.

Find downloaded files

You can download files and store them on your phone, including:

- Photos, videos, and documents you save from emails or texts
- Books, movies, or other content that you buy from Play Store and save for offline viewing
- Other files or images you download from the web

When the file has finished downloading, you'll see  in the status bar. Tap the notification to open the file in the appropriate app.

To view, edit, or delete downloads:

1. Open the **Files** app.
2. Tap **Downloads**.
3. Do any of the following:
   - To open or play a file, tap it. You can only edit some types of files.
   - To sort files by name, date modified, or size,  > **Sort by**.
   - To share a file, touch & hold it, then tap .
   - To delete a file, touch & hold it, then tap .

Tip: To access downloads from a computer, connect your phone with a USB cable. Then open the phone's internal storage, and look for files in the Downloads folder.

Recover recently deleted files

You can try to recover recently deleted photos, videos, or texts. But do so as soon as possible. The more you use the phone, the more likely the file will be overwritten with new data.

1. Search for “file recovery” in Play Store and install one of the apps.
2. Use the app to scan your phone.
3. If you can't recover recently deleted items, try connecting your phone to your computer with a USB cable and using a desktop program for file recovery.

Tip: Back up your photos to the cloud so you won't lose them if you delete them from your phone.

Upload music to cloud

You can store songs from your library in the cloud, for free, with Google YT Music (not available in all countries). Then you can instantly listen to your tunes wherever you are.

You can upload music from your:

- iTunes library
- Windows Media Player library
- My Music folder, or any folder on your computer

To upload your music:

1. On your computer, visit music.youtube.com
2. Click on your profile picture > **Upload music**.

   To learn more, read Google's help.

After you've uploaded your music, you can listen to it:

- On your computer by visiting music.youtube.com
- On your phone with the YT Music app

Upload photos and videos

Back up automatically

1. Open the **Photos** app.
2. Touch your profile icon > **Turn on backup**.

   You can change back up settings any time.

Adjust back up settings

To adjust settings for your automatic backups:

1. Open the **Photos** app.
2. Touch your profile icon > **Photos settings** > **Backup**.
3. Adjust settings as needed:
   - To choose high quality or original size for uploads, touch **Backup quality**.
   - To back up items in your Download, Screenshots, and third-party app folders, touch **Back up device folders**.
   - To back up items over your cellular network, touch **Mobile data usage**, then adjust options for photos, videos, and roaming.

Back up manually

1. Open the **Photos** app.
2. Open the photo or video.
3. On the photo or video, touch . (Swipe up if you don't see .)

View your backed up photos and videos

From your phone, open the Photos app.

From your computer, sign in to photos.google.com.

Manage your storage

1. Open the **Photos** app.
2. Touch your profile icon > **Photos settings** > **Backup**.
3. Touch **Manage storage**.
4. View how many GB of storage you have used and approximately how much time your remaining storage will last. If you're running low, follow onscreen instructions to get more storage.

5. To review and delete recommended photos:
    a. Under **Review and delete**, touch a category (such as large photos and videos, blurry photos, screenshots).
    b. Touch & hold an item to delete, then touch others to include.
    c. Touch .

More help

To learn more, read Google's help.

Scan documents and make copies

Scan document to Drive

Use your phone to scan documents directly to Google Drive.

1. Open the **Drive** app.
2. Touch .
3. Position the document in the camera frame and hold your phone steady until the scan completes.
4. If desired, use the tools at the bottom of the screen to crop, rotate, filter, or clean the scan.
5. Tap **Done**.
6. If desired, change the document title, location, or file type, then tap **Save**.

In Drive, open the file and tap to share or print the scan.

Scan and save to folders from your home screen

Add Drive Scan widgets to your home screen to scan and save to new or selected folders. Each widget saves to a single folder on Drive. So, add multiple widgets, one for each folder you need (receipts, billing statements, recipes, etc.).


Adjust volumes

Use Volume buttons

In-call audio. When you're on a call, the Volume buttons control the volume of the other person.

Media. When you're not on a call, the Volume buttons control media volume during playback or before you listen.

Phone ringtone, notification sounds, and alarms. To adjust these volumes, press a Volume button and then use this shortcut on your home screen:

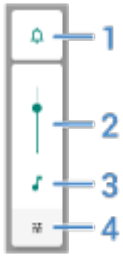

1. Tap to toggle the phone ringtone and notification sounds between on , silent , and vibration only .
2. Slide to adjust media volume.
3. Tap to mute media volume.
4. Tap to access all volume controls (call, ring/notification, alarm, media).

Silence with Power & Volume buttons

To silence a ringing phone, press either the **Power** button or the **Volume down** button.

To switch to vibrate at any time, press & hold the **Power** + **Volume up** buttons until you feel a vibration and see .

If you want to customize Power & Volume up so that it silences the phone instead of vibrating:

1. Go to **Settings** > **System** > **Gestures**.
2. Touch **Prevent ringing** > **Mute**.

Tip: Use Do Not Disturb to silence all calls, messages, events, and reminders. Turn it on from quick settings, or schedule it to turn on automatically during certain times or during calendar events.

Pick up to silence

You can simply pick up your phone to silence incoming calls and alarms, and to turn vibration on.

To enable this gesture:

1. Go to **Settings** > **Sound** > **Advanced**.

   Or, open the **Moto** app and tap > **Moto Actions**.

2. Tap **Pick up to silence** and turn it on .
3. If you want this gesture to silence calls but not alarms (or vice versa), tap **Settings** and turn the appropriate option off .

Set ringtones

Change default call ringtone

1. Go to **Settings** > **Sound**.
2. Do one of the following:
   - If your phone has one SIM card, tap **Phone ringtone**.
   - If your phone has dual SIMs, tap the ringtone for the SIM you want to change.
2. Tap **Advanced** > **Phone ringtone**.
3. Do one of the following:
   - Select a ringtone from the list.
   - To use a song as the ringtone, tap **Add ringtone** at the bottom of the list. Then tap ☰ > **Audio** and select the song stored on your phone.
   - For silence, tap **None** at the top of the list.

Vibrate phone for calls

To extend battery life, turn vibrate off.

You can set the phone to vibrate when it rings for calls.

1. Go to **Settings** > **Sound**.
2. Turn **Vibrate for calls** on or off .

Set call ringtone for a contact

You can choose a unique ringtone for calls from specific people so you'll know instantly who's calling.

1. Open the **Contacts** app.
2. Tap the contact's name.
3. Swipe to move down and tap **Contact ringtone**.
4. Do one of the following:
   - Select a ringtone from the list.
   - To use a song as the ringtone, tap **Add ringtone** at the bottom of the list. Then tap ☰ to browse and select the song stored on your phone. Tap ⋮ to show internal storage.
   - For silence, tap **None** at the top of the list.

Set ringtone for app notifications

You can set a default sound for notifications from apps including messaging and email. You can also set a unique ringtone for notifications from specific apps. Learn how.

Tip: To change your alarm sound, open the Clock app and tap . Then tap .

Get more ringtones

Although your phone comes with lots of ringtones, you can get more:

- Search for “ringtones” in Play Store and install an app that provide ringtones.
- Search for “ringtone maker” in Play Store and install an app that lets you create custom ringtones. Open the app and use it to select entire songs or portions of songs.
- If you have songs that are .mp3 files stored on your computer, connect your phone and computer with a USB cable, then copy the song to your phone.

Fix an issue

If you're not hearing your ringtones:

- Look for in your status bar, which means you're in Do Not Disturb mode. Open quick settings and turn Do Not Disturb off.
- Check that your ringtone volume is set to .

Enhance sound

Automatically adjust sound

Your phone automatically identifies the type of media you're playing and how you're listening (phone's speaker, headphones, or other connected audio device), and adjusts sound for that experience. You don't have to do anything. Moto Audio is always on, unless you turn it off.

Set sound profile for headphones or connected device

You can select a preset sound profile for your headphones or other connected device, and your phone will remember the next time you connect it.

1. Go to **Settings** > **Sound** > **Moto Audio**.
2. Choose how to adjust sound:
   - To automatically adjust based on the media playing, turn **Auto** on.
   - To use a preset sound profile, select **Music**, **Movie**, or **Game**.
3. To customize a selected sound profile, next to the profile name tap , then:
   - Choose an equalizer preset to enhance treble, bass, or vocals.
   - To get a surround sound experience from any set of headphones or stereo speakers, turn **Surround virtualizer** on.
   - To keep the same volume level when you switch between audio sources, turn **Volume leveler** on.
   - To learn more about these settings, touch > **Help**.
   - To revert to original profile settings, tap > **Reset**.

Note: If you don't want to save settings for your connected headphones, touch > **Saved audio settings** and turn **Remember this device** off.

Reset all audio settings

1. Go to **Settings** > **Sound** > **Moto Audio**.
2. Touch > **Reset**.

Turn Moto Audio off

To turn Moto Audio off for headphones or another connected device:

1. Connect your headphones or other audio device.
2. Go to **Settings** > **Sound** > **Moto Audio**.
3. Turn it off.

To turn it off when you're listening through the loudspeaker:

1. Go to **Settings** > **Sound** > **Moto Audio**.
2. Tap > **About**.
3. Tap the image three times to add the on/off switch.
4. Turn it off .

Silence calls & notifications

When you're busy, use Do Not Disturb to mute ringtones for incoming calls, stop vibration, and block notifications.

Quickly turn Do Not Disturb on or off

Turn it on

1. Open quick settings and tap .

   You'll see in the status bar when Do Not Disturb is on.

2. To change how long it stays on, in quick settings, touch & hold , tap **Default duration**, and then choose one:

   - To keep it on indefinitely, tap **Until you turn off**.
   - To select a duration, tap **For 1 hour**, then tap + or - to adjust the time.
   - To choose each time you turn Do Not Disturb on, tap **Ask every time**.

Turn it off

Open quick settings and tap .

If it's turning itself on again, but you don't want it to:

- Make sure you're not automatically silencing on a schedule or during calendar events.
- If you're using Bedtime mode, tap **Settings** > **Digital Wellbeing & parental controls** > **Bedtime mode** > **Customize** and turn **Do not Disturb for Bedtime mode** off .

Set down to start

You can turn on Do Not Disturb by placing your phone face down on a surface. To enable this gesture:

1. Go to **Settings** > **Sound** > **Advanced**.

   Or, open the **Moto** app and tap > **Moto Actions**.

2. Tap **Flip for DND** and turn it on .

Set overall behavior

Sound and vibration

When Do Not Disturb is on, sound and vibration are muted. Alarms and media aren't muted by default, but you can mute them too.

To adjust settings for alarms, media, and touch sounds:

1. Go to **Settings** > **Sound** > **Do Not Disturb**.
2. Touch **See all exceptions**.

3. For each category, select whether sound and vibration is muted or not .

Notifications

When Do Not Disturb is on, you won’t see or hear notifications by default. You can change settings to:

- Allow visual notifications but no sound
- Allow or prevent the screen from turning on or waking
- Show or hide notification dots, status bar icons, pop-up notifications
- Show or hide notifications in the notification list

To change how Do Not Disturb handles notifications:

1. Go to **Settings** > **Sound** > **Do Not Disturb**.
2. Touch **Restrict notifications**.
3. Do one of the following:
   - To block sound from notifications but still see them on your screen, select **No sound from notifications**.
   - To block all visual notifications, select **No visuals or sound from notifications**.
   - To block or allow selected visual notifications, select **Custom** and turn features on or off.

If Do Not Disturb is off and you expect but aren't getting notifications from an app, check your settings for the app's notifications.

Allow exceptions

When Do Not Disturb is on, incoming calls, messages, and calendar events or reminders are muted. You can allow exceptions.

Calls

1. Go to **Settings** > **Sound** > **Do Not Disturb**.
2. Touch **Calls** > **Allow calls**.
3. Choose whether to allow calls from:
   - Anyone
   - Contacts only
   - Starred (favorite) contacts only
   - None
4. To let calls through from repeat callers (the same person calling a second time within 15 minutes), turn **Allow repeat callers** on .

Text messages

1. Go to **Settings** > **Sound** > **Do Not Disturb**.
2. Touch **SMS, MMS, and messaging apps** > **Allow messages**.

3. Choose whether to allow messages from:
   - Anyone
   - Contacts only
   - Starred (favorite) contacts only
   - None

Calendar events and reminders

1. Go to **Settings** > **Sound** > **Do Not Disturb**.
2. Touch **See all exceptions**.
3. Turn **Allow reminders** and **Allow events** on .

Silence automatically

Your phone can automatically switch into and out of Do Not Disturb mode, either based on your calendar events or on a schedule you create.

Silence during calendar events

1. Open quick settings, then touch & hold .
2. Tap **Schedules**.
3. Do one of the following:
   - To use an existing one, turn it on.
   - To create a new one, tap **Add more**. Tap **Event**, then enter a name and tap **Add**.
4. Adjust options to select the calendar to use and your reply status.

Silence using a schedule

1. Open quick settings, then touch & hold .
2. Tap **Schedules**.
3. Adjust settings:
   - To use an existing schedule, tap its name, like **Sleeping**. To adjust times or settings, tap .
   - To create a new one, tap **Add more**. Tap **Time**, then enter a name and tap **Add**. Specify its days, start and end times, and level of silence.

Stop automatic silencing

If you don't want your phone to switch automatically into and out of Do Not Disturb:

1. Go to **Settings** > **Sound** > **Do Not Disturb**.
2. Tap **Schedules**.

3. Do any of the following:
   - To use the schedule later, uncheck it to turn it off.
   - To delete a schedule, tap > .
   - To delete multiple schedules, tap > **Delete schedules**.

Stop phone from speaking

Silence replies to voice commands

Some voice commands (like “What's up?” and “What is the current weather?”) cause Google Assistant to speak in response.

To quickly silence a voice command response, tap .

To have your phone show responses to voice commands on screen and not speak them:

1. Open the **Google** app.
2. Tap your profile icon > **Settings**.
3. Tap **Voice** and turn off speech output.

Turn off screen reader

If your phone describes everything you touch on screen, speaking your notifications, and reading messages aloud, you might have turned on a screen reader. This accessibility feature helps people with visual impairments.

To turn it off:

1. Press & hold both Volume Up and Down buttons for three seconds. If TalkBack was reading the screen, this pauses readout so you can update settings more easily.
2. Go to **Settings** > **Accessibility**.
3. Turn off all screen readers, such as TalkBack or Select to Speak.

Silence “Hello Moto” during power up

If you don’t want your phone to say “Hello Moto” when it powers up:

1. Go to **Settings** > **Sound** > **Advanced**.
2. Turn **Power on sounds** off .

You can't adjust the volume level for this sound.

Turn off charging sounds

If you don’t want your phone to make a sound when it comes in contact with a charger:

1. Go to **Settings** > **Sound** > **Advanced**.
2. Turn off **Charging sounds and vibration**.

Turn touch sounds on/off

1. Go to **Settings** > **Sound** > **Advanced**.
2. Do any of the following:
   - To hear a tone when you dial a number, turn on **Dial pad tones**.
   - To hear a click when you lock or unlock the screen, turn on **Screen locking sounds**.
   - To hear a click when you touch something on the screen, turn on **Touch sounds**.
   - To feel a vibration when you type on the keyboard, turn on **Touch vibration**.

If you don't want any of these sounds, just turn them off .

Hear other notification sounds

You can assign a ringtone for notifications from specific apps.

You can also control sounds that notify you of other events:

1. Go to **Settings** > **Sound** > **Advanced**.
2. To hear a confirmation tone and feel a vibration when you successfully connect your phone to a charger, turn **Charging sounds and vibration** on .

If you don't want any of these sounds, just turn them off .

Adjust screen brightness

To set your screen's brightness, open quick settings and slide .

Your phone automatically adjusts your screen to the light around you, with Adaptive brightness. When the feature is on, you can still fine tune the brightness in quick settings. To turn this feature off:

1. Go to **Settings** > **Display**.
2. Turn **Adaptive brightness** off.

Use Dark theme

Give your eyes and battery a break by changing to a dark background.

When Dark theme is on:

- The dark background applies to your settings and apps.
- Colors don't change in media, such as videos.
- Not all apps support Dark theme. To change those apps to a dark background, in order to reduce eye strain while reading, use color inversion.

When it's off, if you run low on battery, Battery saver switches temporarily to the dark background until the phone has charged.

Turn it on or off

1. Go to **Settings** > **Display**.
2. Tap **Advanced**.
3. Turn **Dark theme** on or off.

Tip: To add Dark theme to quick settings, open quick settings, tap , then drag the tile where you want it.

Change font and display size

You can make the text or other items on your screen smaller or larger for your comfort and convenience.

1. Go to **Settings** > **Display** > **Advanced**.
2. Do any of the following:
   - To adjust the size of text on the screen, touch **Font size**, then drag the slider to the size you want.
   - To adjust the size of icons and other screen elements, touch **Display size**, then drag the slider to the size you want.

If you need more help seeing the screen

Turn on accessibility features, like magnification to zoom in and out or a screen reader to hear audio descriptions of what you touch on the screen.

Stop automatic rotation

Prevent screen from rotating

Open quick settings and turn Auto-rotate off.

In this mode, you can manually rotate the current app. Turn your phone the direction you want, then touch in the corner.

Allow screen to rotate

To allow rotation for all apps, open quick settings and turn Auto-rotate on.

You can also adjust this in **Settings** > **Display** > **Advanced** > **Auto-rotate screen**.

Tip: If your home screen isn't rotating but Auto-rotate is on, then check your home screen settings. Touch & hold a blank spot on your home screen, then tap **Home settings** > **Allow Home screen rotation**.

Adjust colors at night

If you selected a color mode, it will resume outside of night hours.

Automatically change screen to amber

Your phone can automatically filter out blue light and adjust screen colors to warmer tones at night, making it easier to view and read in dim light. You might even fall asleep more easily.

1. Go to **Settings** > **Display** > **Night Light**.
2. Touch **Schedule**, then:
   - To start and stop at specified times, touch **Turns on at custom time** and enter times.
   - To filter from dusk to dawn, touch **Turns on from sunset to sunrise**.

To adjust filter intensity, open quick settings, touch & hold , then use the slider to change the intensity of the amber filter.

Turn it off

To temporarily switch back to regular colors from amber, open quick settings and turn off Night Light.

To stop automatically changing to amber, select **Settings** > **Display** > **Night Light** > **Schedule** > **None**.

Automatically change screen to grayscale

To help you wind down at night, your phone can change to grayscale (black and white).

1. Go to **Settings** > **Digital Wellbeing & parental controls** > **Bedtime mode**.
2. Touch **Bedtime routine**, then set your schedule.
3. Touch **Customize** > **Screen options at bedtime**.
4. Turn **Grayscale** on .

Turn it off

To temporarily switch back to regular colors from grayscale, open quick settings and touch .

To stop automatically changing to grayscale at night, go to **Settings** > **Digital Wellbeing & parental controls** > **Bedtime mode** > **Customize** > **Screen options at bedtime** and turn **Grayscale** off .

Choose color mode

You can change the intensity of color on your screen for a realistic or enhanced look.

1. Go to **Settings** > **Display**.
2. Tap **Advanced** > **Colors**.
3. Choose one:
   - To see the most accurate colors, tap **Natural**.
   - To see accurate colors with more vividness, tap **Boosted**.
   - To see the most vivid colors, tap **Saturated**.

Tips:

- If colors don't appear as you expect, troubleshoot the issue.
- If you're color blind, use color correction instead.

See Peek Display notifications

About Peek Display notifications

When your screen is off, battery-friendly notifications fade in and out, lighting only the pixels needed and showing notifications delivered since you last woke your screen. You can select which apps show notifications and limit content to control your privacy.



These notifications aren't displayed:

- When the phone is in your pocket or purse
- When the phone is lying face down
- When you are on a call
- When Do Not Disturb is on

Respond to Peek Display notifications

Check for notifications

If you haven’t seen activity for a while, to wake your phone, bump it.

Peek at contents

Touch & hold an icon to preview the notification.

View more and take action

For more details and notifications, drag an app icon up, or drag it to . Then:

- To respond, drag the app icon to an action, like reply or archive .
- To dismiss, drag the app icon to **Dismiss**.

Change Peek Display settings

1. Go to **Settings** > **Display** > **Peek Display**.

   Or, open the **Moto** app and tap > **Moto Display** > **Peek Display**.

2. Tap **Settings** and do any of the following:
   - To see these notifications by tapping on the screen, turn **Tap to wake** on.
   - To prevent phone from vibrating when you tap a notification or drag it to an action (like Dismiss), turn **Vibrate on touch** off.
   - For more privacy when the screen is locked, tap **Level of details to show**.
   - To allow replies without unlocking the phone, turn **Safe reply** off. To require unlocking to reply, keep it on.
   - To stop specific apps from showing these notifications, tap **Block apps** > and tap the app's name.
   - To start conversations with Google Assistant in Peek Display, turn **Google Assistant** on.

Stop Peek Display notifications

1. Go to **Settings** > **Display** > **Peek Display**.

   Or, open the **Moto** app and tap > **Moto Display**.

2. Turn **Peek Display** off.

To restart the notifications, turn Peek Display on.

Change screen timeout

Change when your screen turns off

1. Go to **Settings** > **Display** > **Advanced**.
2. Touch **Screen timeout** and select the time of inactivity before your phone sleeps.

> **Tip:** Set a shorter time to extend battery life.

Stay on until you look away

Use Attentive Display to keep the screen on when you're looking at it and turn it off when you look away:

- Your screen won't dim or sleep when you're looking at it.
- Your screen will sleep sooner when it doesn't see you, saving battery.

In certain lighting conditions, your phone may have difficulty detecting when you've looked away.

To turn Attentive Display on:

1. Go to **Settings** > **Display** > **Advanced**.

   Or, open the **Moto** app and tap ☰ > **Moto Display**.
2. Tap **Attentive Display** and turn it on.

If you don't want to use Attentive Display, then turn it off .

Change lock screen features

Use these options to control what content and features appear on your lock screen.

You can also control when your screen locks.

Limit lock screen notifications

Control which notifications appear

If you've set a pattern, PIN or password, you can control which notifications show on your lock screen.

1. Go to **Settings** > **Display** > **Advanced** > **Lock screen display**.
2. Touch **Lock screen**.
3. Select whether or not to show notifications.

   If you show notifications but hide sensitive content, then you'll receive notifications for incoming emails or chats, but they won't include message details.

Add message to lock screen

To add your name or a short message to your lock screen for anyone who finds your phone:

1. Go to **Settings** > **Display** > **Advanced** > **Lock screen display**.
2. Tap **Lock screen message**.
3. Type the text to display and tap **Save**.

Tip: Don't put your mobile number as contact info on your lock screen unless you can access your voicemail from another device.

Quickly tighten lock screen security

Unlocking with the fingerprint sensor and setting up automatic unlocking make it easier to keep your phone secure and minimize when you need to enter your PIN, pattern, or password. But sometimes you need to trade convenience for more security. You can temporarily tighten locks and prevent lock screen notifications.

To set it up:

1. Go to **Settings** > **Display** > **Advanced** > **Lock screen display**.
2. Turn **Show lockdown option** on .

To use it:

1. Press & hold the Power button.
2. Touch **Lockdown**.

   Your fingerprint sensor and automatic unlock settings are disabled and notifications won’t be displayed on your lock screen.
3. To exit Lockdown, unlock your phone with your PIN, pattern, or password.

Visual assistance

Adjust colors if you’re color blind

Color correction is an experimental feature and might not work correctly everywhere on your phone.

Turn it on

1. Go to **Settings** > **Accessibility**.
2. Tap **Color correction** and turn **Use color correction** on .
3. Choose an option.

How you see colors	Option to choose
It’s difficult to tell violet from blue. Yellow and green appear redder.	Deuteranomaly (red-green)
Colors aren’t bright. Red, orange, and yellow appear greener.	Red-green (Red weak, protanomaly) Protanomaly (red-green)
It’s difficult to tell yellow and red from pink. Blue appears greener.	Tritanomaly (blue-yellow)

If colors don't appear as you expect, troubleshoot the issue.

Add a shortcut

To use an accessibility shortcut for quickly turning Color correction on/off:

1. Go to **Settings** > **Accessibility** > **Color correction**.
2. Turn **Color correction shortcut** on .
3. Tap **Color correction shortcut** and choose one or more shortcuts:
   - For a shortcut on your home screen, select **Tap accessibility button**.
   - To press & hold both Volume buttons simultaneously, select **Hold volume keys**.

Use color inversion

Color inversion flips all colors on your screen, turning light screens dark and dark screens light. This affects everything on screen, including media and images. While it can make reading text easier (light text on a dark background), it can also make it harder to understand images and videos.

If you're using Dark theme to reduce eye strain when reading, you might encounter specific apps that don’t support it and still have a light background. Turn Color inversion on to use those apps with a dark background. You can use quick settings or a shortcut to easily turn Color inversion on and off.

Turn it on

1. Go to **Settings** > **Accessibility**.
2. Tap **Color inversion**.
3. Turn **Use color inversion** on .

   is added to your quick settings so you can easily turn it off/on.

Add a shortcut

To use an accessibility shortcut as an alternate to the quick setting:

1. Go to **Settings** > **Accessibility** > **Color inversion**.
2. Turn **Color inversion shortcut** on .
3. Tap **Color inversion shortcut** and choose one or more shortcuts:
   - For a shortcut on your home screen, select **Tap accessibility button**.
   - To press & hold both Volume buttons simultaneously, select **Hold volume keys**.

Use it

Open quick settings and tap to turn it on/off.

Or, if you set up accessibility shortcuts, tap or press & hold both Volume buttons.

Magnify the screen

You can magnify the screen by triple tapping it or by swiping up from the bottom of the screen with two fingers. If you're using 3-button navigation, you can add to magnify.

Turn it on

To set up the way to start (zoom in) and stop (zoom out) magnification:

1. Go to **Settings** > **Accessibility** > **Magnification**.
2. Select an option and turn it on :
   - To touch the screen three times, choose **Magnify with triple-tap**.
   - To swipe up from the bottom of the screen with two fingers (gesture navigation), choose **Magnify with shortcut**.
   - To add to the buttons (3-button navigation), choose **Magnify with shortcut**.

When magnification is on, you'll see an orange border around the screen.

Use magnification

1. Start magnification using the method you selected: triple tap, swipe up from bottom of screen with two fingers, or tap .

2. Tap the area of the screen to magnify, then:
   - Drag two or more fingers to scroll.
   - Pinch two or more fingers to adjust zoom.

To zoom temporarily:

1. Start magnification using the method you selected: triple tap, swipe up from bottom of screen with two fingers, or tap .
2. Touch & hold anywhere on the screen, then:
   - Drag to move around the screen.
   - Lift your finger to zoom out.

You can't zoom in on the keyboard or the buttons.

Fix an issue

If you open or close an app when zoomed in, your phone automatically zooms out. To zoom in again, use .

Use TalkBack to read screens

Hear descriptions of everything you touch.

Set it up

1. Go to **Settings** > **Accessibility**.
2. Tap **TalkBack** and turn **Use service** on .
3. Tap **Settings** and set the options you want.

Add a shortcut

To add an accessibility shortcut for quickly turning TalkBack on/off:

1. Go to **Settings** > **Accessibility** > **TalkBack**.
2. Turn **TalkBack shortcut** on .
3. Tap **TalkBack shortcut** and choose one or more shortcuts:
   - For a shortcut on your home screen, select **Tap accessibility button**.
   - To press & hold both Volume buttons simultaneously, select **Hold volume keys**.

When TalkBack is on

To hear descriptions:

- Tap an item. Your phone speaks the name.
- Start typing. Your phone speaks each number or letter.
- Drag status bar down. Your phone speaks all of the notifications.
- Open a message, file, or book. Your phone reads the text out loud.

To change readout volume:

- Press a Volume button to open volume settings, then use the slider to adjust the level.
- Or, during voice readout, repeatedly press a Volume button.

Stop readout

To pause or resume readout, press & hold both the Volume Up and Down buttons at the same time for three seconds, until you hear confirmation that TalkBack is on or off. You can change the accessibility feature associated with this shortcut.

Or, turn TalkBack off:

1. Go to **Settings** > **Accessibility**.
2. Touch **TalkBack** and turn **Use service** off .

More assistance

You can also:

- Use voice commands
- Dictate text instead of typing
- Set your phone to make confirmation sounds after you touch or unlock the screen
- Assign a ringtone for notifications from specific apps

Hearing assistance

Turn on video captions


1. Go to **Settings** > **Accessibility**.
2. Tap **Caption preferences** and turn **Use captions** on .
3. Specify options (language, text size, and style) for closed captioning.

Use hearing devices

To get phone audio in your hearing device, pair it with your phone.

1. Tap .
2. Tap > **Settings** > **Accessibility**.
3. Turn **Hearing aids** on .

During a call, hold the phone to your ear, then rotate or move it to get the best position for speaking and listening.

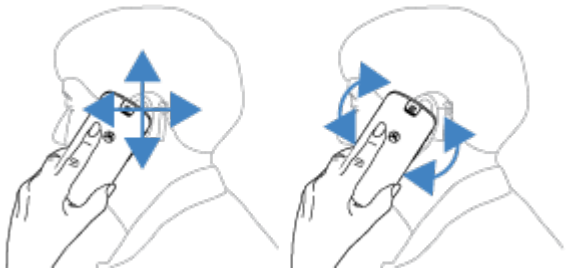

Use real-time text (RTT) during calls

Not all carriers support this feature.

Real-time text (RTT) lets you use text to communicate during a phone call. Your phone sends text as you type and the recipient can read your message while you write.

RTT:

- Uses call minutes, just like a voice call
- Doesn't require additional accessories

Turn RTT on

1. Tap .
2. Tap > **Settings** > **Accessibility**.
3. Tap the real-time text option and turn it on or select when you want it to appear.

Make a call with RTT

1. Tap .
2. Call the number.

   While the phone rings, the other person's screen displays an RTT indicator.
3. After the other person answers, enter a message in the text field.

   The text that you enter is visible to the other person as you type.
4. During a call, you can tap to mute the call, turn on the speaker, return to the keypad, or add a call.
5. To end the call, tap .

Use real-time text (RTT) during calls

Not all carriers support this feature.

Real-time text (RTT) lets you use text to communicate during a phone call. Your phone sends text as you type and the recipient can read your message while you write.

RTT:

- Uses call minutes, just like a voice call
- Doesn't require additional accessories

Turn RTT on

1. Tap .
2. Tap > **Settings** > **Accessibility**.
3. Tap the real-time text option and turn it on or select when you want it to appear.

Make a call with RTT

1. Tap .
2. Call the number.

   While the phone rings, the other person's screen displays an RTT indicator.
3. After the other person answers, enter a message in the text field.

   The text that you enter is visible to the other person as you type.
4. During a call, you can tap to mute the call, turn on the speaker, return to the keypad, or add a call.
5. To end the call, tap .

Set up TTY device

Not all carriers support this feature.

For text-based communication, you can use text messaging and email.

If you prefer to connect to a TTY device:

1. Tap .
2. Tap > **Settings** > **Accessibility** > **TTY mode**.
3. Select a mode:
   - **TTY Full**: Type and read text on your TTY device.
   - **TTY HCO**: Type text on your TTY and listen to voice replies on your phone.
   - **TTY VCO**: Speak into your phone and read text replies on your TTY.
4. Connect your phone and TTY with the audio cord that came with your TTY.

Dexterity assistance

Change time to take action

If you need more time to respond to a notification or messages that are visible only temporarily, you can adjust the time before they disappear:

1. Go to **Settings** > **Accessibility**.
2. Tap **Time to take action**.
3. Choose your preferred timeout.

Note: Not all apps support this setting.

Use external switch or keyboard

If you're unable to use a touchscreen, Switch Access lets you control the phone using external switches or keyboard keys to select items, scroll, enter text, and more.

To use Switch Access, you must have one of the following:

- **An external switch.** USB or Bluetooth switch devices send keystroke signals to your phone.
- **An external keyboard.** Standard USB or Bluetooth keyboards can work as switch devices by assigning one or more keys to actions.

Set up Switch Access

1. Go to **Settings** > **Accessibility**.
2. Tap **Switch Access**.
3. Turn **Use service** on .
4. Follow onscreen instructions to select:
    - Number of switches
    - Scanning options
    - Switch assignments

To adjust options for Switch Access later, go to **Settings** > **Accessibility** > **Switch Access** > **Settings**.

Use Switch Access

1. Connect the external device to your phone by pairing with Bluetooth or using USB. See the manufacturer's instructions for details.
2. Press the assigned switch or key to scan and highlight items on the screen or to select highlighted items.

Use accessibility shortcuts

About accessibility shortcuts

Shortcut: Essential controls for your phone

The accessibility menu gives quick access to essential features on your phone.

Shortcut: Accessibility features

Easily turn accessibility features on/off from any screen. For each feature you're using, you can:

- Add a button to the screen. The button fades when not in use.

  If you set up multiple buttons, they display as a group; drag to reposition the group around the sides of the screen.

  If you're using gesture navigation, you can set up a gesture instead of buttons.
- Set your phone so that you press both Volume buttons to turn the feature on/off.

  If you set this up for multiple accessibility features, you'll see a list of those features when you press both Volume buttons.

Use accessibility menu of essential controls

Open a large menu where you can:

- Call your assistant
- Open accessibility settings
- Lock or turn off the phone
- Adjust volume
- Adjust brightness
- See recent apps to return to one
- Take a screenshot
- Open quick settings

Turn it on

1. Go to **Settings** > **Accessibility**.
2. Tap **Accessibility Menu**.
3. Turn **Use service** on .
4. To increase the size of the buttons on this menu, tap **Settings**, then turn **Large buttons** on .

Use it

If you're using gesture navigation:

1. Use two fingers to swipe up from the bottom of the screen.

   If you've set other accessibility tools to use this gesture, swipe up with two fingers and hold to switch between tools.

2. Choose an option from the menu.

If you're using 3-button navigation:

1. At the bottom of the screen, tap .

   If you've set other accessibility tools to use this icon, touch & hold it to switch between tools.

2. Choose an option from the menu.

Manage accessibility buttons

For each accessibility feature you're using, you can add a button to the screen to quickly turn the feature on/off.

Add buttons

When you turn on an accessibility feature in **Settings** > **Accessibility**, if the feature supports shortcuts, you'll see a switch to turn on the shortcut. Tap the switch's name to see options for adding the button and assigning the feature to the Volume buttons.

Change button size and transparency

This setting applies to the shortcuts for all accessibility features.

1. Go to **Settings** > **Accessibility** > **Accessibility shortcuts**.
2. If you're using 3-button navigation, tap **Accessibility button**.

   If you're using gesture navigation, tap **Accessibility button & gesture**.
3. Adjust how the buttons look and work:
   - Tap **Size** and choose **Large** or **Small**.
   - To keep the buttons always visible, turn **Fade when not in use** off .
   - To make the buttons more or less transparent, drag the **Transparency when not in use** slider.

Gesture navigation: Choose between buttons and gesture

If you're using gesture navigation, you can choose between using a gesture or a button for accessibility shortcuts. This setting applies to the shortcuts for all accessibility features.

1. Go to **Settings** > **Accessibility** > **Accessibility shortcuts**.
2. Tap **Accessibility button & gesture**.
3. Tap **Use button or gesture** and select which to use.

Press Volume buttons for accessibility features

You can press the Volume buttons to turn an accessibility feature of your choice (TalkBack, Switch Access) on or off.

Set it up

1. Go to **Settings** > **Accessibility**.
2. Tap **Volume key shortcut**.
3. Turn **Use service** on .
4. To change the accessibility feature associated with the shortcut, tap **Shortcut service**.
5. To use the Volume buttons from the lock screen, turn **Allow from lock screen** on .

Use the shortcut

Press & hold the Volume Up and Down buttons at the same time for three seconds.

Find accessible apps and devices

Learn about accessibility features of various electronic devices, including mobile phones, tablets, smart TVs, and wearables at gari.info

App listings in the Play Store app have tags in the “About this app” section that identify their accessibilty features. Tap a tag to explore apps with similar accessibilty features.

About security

Screen lock options

To keep your phone secure, use a screen lock when it goes to sleep:

- Set up a pattern, PIN, or password to unlock your phone.
- Keep your phone unlocked when you're at a trusted place like home or work, when you're connected to a trusted device like your car audio system, or until you set your phone down.

When your phone is locked, you can:

- Access notifications and quick settings, start a call, and open the camera from the lock screen.
- Make emergency calls on a locked phone. A locked phone still rings; you don't need to unlock it to answer.

If you forgot your pattern, PIN, or password, follow these steps.

You can customize the lock screen by adding your contact info. You can also control which notifications appear on your lock screen.

Fingerprint sensor

Quickly and easily verify your identity using the fingerprint sensor on your phone, instead of entering a password, PIN, or pattern to unlock the phone, make online and in-store purchases, and sign into banking and financial apps.

You can add and remove fingerprints.

Fingerprints:

- Are created from features of your fingertip, converted to a mathematical representation, and then encrypted and stored only on the phone. No fingerprint images are ever stored.
- Are never shared with Google or Motorola.
- Are never shared with other apps. Your phone only shares the verification, not the fingerprint.

Note: A fingerprint screen lock may be less secure than a strong pattern or PIN lock. It is possible to unlock the phone using a physical copy of a matching fingerprint.

Additional security options

- Protect your phone in case it’s lost or stolen. Use Find My Device.
- Connect to a virtual private network if you need to access files on a secure network.
- Add a SIM lock to prevent others from using your cellular plan and accessing account information if your phone is stolen.
- Prevent viruses and other attacks on your data and privacy with Google Play Protect.

Protect against harmful apps

Scan phone for harmful apps

Play Protect helps keep your phone secure by automatically scanning your apps, including sideloaded apps, to check for potentially harmful apps (malware).

If Play Protect finds a potentially harmful app, it stops the app from running and warns you so that you can uninstall it.

To see the results or to rescan:

1. Open the **Play Store** app.
2. Tap your profile icon M > **Play Protect**.
3. Review the results of the latest scan, or tap **Scan**.

Play Protect is on by default.

To learn more, read Google's help.

If your phone seems slow

If you've scanned your phone to confirm there aren't any potentially harmful apps but your phone seems slow, troubleshoot the issue.

Make sure your phone can be found

Make sure your phone can be found. Find My Device allows you to remotely locate, lock, and erase your phone.

If you ever need to find your phone, your phone will need to:

- Be turned on
- Be signed in to a Google account
- Be connected to mobile data or Wi-Fi
- Have location services turned on. If location services are off, you can lock or erase the phone, but cannot locate it.
- Have Find My Device turned on

To check that Find My Device is on for your phone:

1. Go to **Settings** > **Security**.
2. Tap **Find My Device** and turn it on .

To confirm that you can find your phone, go to android.com/find on your phone or from a computer.

If you have lost your phone, consider calling your carrier to suspend your account. If your phone doesn't have a SIM lock and it's stolen, someone could use your SIM card.

Set a screen lock

You can set up a screen lock to secure your phone. Each time you turn on your phone or turn on the screen, you'll be asked to unlock it.

Set or change screen lock

1. Go to **Settings** > **Security**.
2. Tap **Screen lock** and select the type of lock you want.

   Some lock options aren't available if you added a VPN or a work (corporate) email account to your phone.

Tip: After you set up a pattern, PIN, or password, you can set up fingerprint security to unlock your phone with the fingerprint sensor.

Screen lock types

No lock:

- **None**: This gives no protection, but you can quickly access your home screen.
- **Swipe**: Swipe 🔒 up. This prevents accidental dialing but doesn't secure the phone.

Standard lock:

- **Pattern**: Draw a pattern on a grid.
- **PIN**: Enter a four to sixteen digit numeric code. Longer PINs are more secure.
- **Password**: Enter four to sixteen letters, digits, or symbols for the password. A long, strong password is the most secure option.

Unlock your screen automatically

If you're using a PIN, password, or pattern, you can:

- Stay unlocked when connected to a device, like your car audio system.
- Stay unlocked at a specific location.
- Stay unlocked when holding or carrying your phone.

Tips:

- You can swipe up from anywhere on the screen when unlocking. You don't need to tap the 🔒 icon.
- Some of these options aren't available if you added a VPN or a work (corporate) email account to your phone.

Remove screen lock

1. Go to **Settings** > **Security**.

2. Tap **Screen lock**.
3. Enter your current PIN, password, or pattern to confirm your identity.
4. Select **None** or **Swipe**.

Set advanced lock options

Use these options to control when your phone locks and whether your code is visible when you unlock.

You can also control what content is included on your lock screen.

Set time before locking

Unless kept unlocked automatically, your phone locks the screen five seconds after the screen turns off.

To increase or decrease the amount of time before automatically locking the screen:

1. Go to **Settings** > **Security**.
2. Next to **Screen lock**, tap .
3. Tap **Automatically lock**, then select a duration.

Stop Power button from instantly locking

You can manually lock your phone by pressing the Power button. If you want the Power button to turn off the screen but not lock it:

1. Go to **Settings** > **Security**.
2. Next to **Screen lock**, tap .
3. Tap **Power button instantly locks** off .

After the screen turns off, your phone will still lock after the time set for the automatic lock.

Hide your pattern

You can hide your PIN or pattern to prevent others from viewing it when you unlock your screen.

To hide patterns (if you're using a pattern screen lock):

1. Go to **Settings** > **Security**.
2. Next to **Screen lock**, tap .
3. Turn **Make pattern visible** off .

Hide passwords

To control whether characters briefly display when you enter a password to unlock your phone or log into websites and apps:

1. Go to **Settings** > **Privacy**.
2. Turn **Show passwords** off .

Use fingerprint security

Set up fingerprint security

Use the fingerprint sensor to unlock your phone, make fast and secure online and in-store purchases, and sign into bank and finance apps.

1. Go to **Settings** > **Security**.
2. Tap **Fingerprint**, then unlock your phone.
3. Follow the onscreen instructions to scan your fingerprint using the sensor on the back of your phone.

Fingerprints are stored securely on the phone.

Add more fingerprints

Keep in mind that:

- If multiple users share the phone, users should add their fingerprints from within their user profile, instead of adding multiple fingerprints to your owner profile.
- Anyone whose fingerprints are added to a user profile can unlock the phone and authorize purchases with the associated Google account or apps.

Add a fingerprint for each finger you want to use with the sensor:

1. Go to **Settings** > **Security**.
2. Tap **Fingerprint** and enter your pattern, PIN, or password to verify your identity.
3. Tap **Add fingerprint**.
4. Use the fingerprint sensor to scan another fingerprint.
5. Rename each fingerprint. Tap the current name, type a name, and tap **OK**.

Remove a fingerprint

1. Go to **Settings** > **Security**.
2. Tap **Fingerprint** and enter your pattern, PIN, or password to verify your identity.
3. Tap next to the fingerprint.

Use fingerprint to unlock phone

To wake and unlock your screen, or any time you see on the screen, touch the sensor to verify your identity.

Tip: You can temporarily tighten security by turning off fingerprint unlocking and lock screen notifications with Lockdown mode.

Use fingerprint to sign in to apps

To use the fingerprint sensor with third-party apps:

- Be sure the app supports fingerprint recognition.
- Install the app and open its settings to adjust options, like enabling fingerprint unlock.
- Consult the app's help info for more instructions.

Why am I still asked for PIN/pattern?

For maximum security, you still need to enter your pattern, PIN, or password:

- Every time you power up your phone
- When more than 72 hours have passed since you last unlocked the phone
- When you go to **Settings** > **Security** > **Fingerprint**
- When the sensor can’t read the fingerprint

Fix an issue

Issue: Sometimes the sensor can’t read my fingerprints.

Each finger has a unique print. If you’ve added only one fingerprint, add more for other fingers you want to use with the sensor.

The sensor may have trouble reading fingerprints if your finger is:

- Wet
- Oily
- Dirty
- Injured

If a registered fingerprint isn't working as expected, remove and re-add the fingerprint. If your finger is injured, add fingerprints for your other fingers and use them until healed.

Issue: Fingerprint option disappeared from Security menu.

After each troubleshooting step, check to see if your issue is fixed.

1. Turn your phone off and then on again.
2. Check if a software update is available for your phone.
3. Check for app updates.

   Open the **Play Store** app, then touch your profile icon M > **Manage apps & device**.
4. Use safe mode to see if apps you installed are causing the issue and uninstall as needed.

   If the sensor works correctly in safe mode, a 3rd party app is probably causing the issue. These apps can cause issues: lock screen apps, app locks that use the fingerprint sensor, RAM boosters, and RAM cleaners.
5. Reset the phone.

Stay unlocked when connected with a trusted device

Set up trusted devices

You can keep your phone unlocked when it is connected to a trusted device, like your Bluetooth watch or car.

1. Make sure you have:
   - Set a screen lock on the phone.
   - Turned on Bluetooth on the phone.
   - Paired your phone with the device.
2. Go to **Settings**.
3. Tap **Security** > **Smart Lock**.

   If you don't see Smart Lock, try the following:
   - Update Google Play services. In the Google Search widget on your home screen, search for “Google Play services”, then tap the app to open it in Google Play.
   - Go to **Settings** > **Security** > **Advanced** > **Trust agents** and enable **Smart Lock**.
4. Unlock your phone, then tap **Trusted devices** > **ADD TRUSTED DEVICE**.
5. Tap a device to select it from the list of connected devices.

> **Tip:** If your device isn't in the list, make sure you are paired with it.

When the phone is connected to the device, the phone automatically unlocks.

Remove trusted devices

1. Go to **Settings**.
2. Tap **Security** > **Smart Lock**.
3. Unlock your phone, then tap **Trusted devices**.
4. Tap the device name and confirm that you want to remove it.

Manually lock phone

If you need to make sure the phone stays locked even when you’re connected to a trusted device, you can manually lock the phone.

On the lock screen, tap 🔒. The phone stays locked until the next time you manually unlock it.

Unlock at trusted places

Set up trusted places

To avoid repeatedly unlocking your phone when you are at familiar and trusted locations (like home or work), use a Smart Lock. You can still manually lock the phone at trusted places when needed.

1. Make sure you have:
   - Set a screen lock on the phone.
   - Turned on location services.
   - Entered your Home and Work locations in Maps if desired. To learn how, read Google's help.
2. Go to **Settings**.
3. Tap **Security** > **Smart Lock**.

   If you don't see Smart Lock, try the following:
   - Update Google Play services. In the Google Search widget on your home screen, search for “Google Play services”, then tap the app to open it.
   - Go to **Settings** > **Security** > **Advanced** > **Trust agents** and enable **Smart Lock**.
4. Unlock your phone, then tap **Trusted places**.
5. Set up your places:
   - If you added Home or Work locations in Maps, tap the location name and turn it on if desired.
   - To add a location, tap **Add trusted place**. Verify your current location to add it, or tap , type the address to add, and tap **Select this location**.

Manually lock phone

To lock your phone when you're in a trusted place, on the lock screen, tap . The phone stays locked until the next time you manually unlock it.

Remove trusted places

1. Go to **Settings**.
2. Tap **Security** > **Smart Lock**.
3. Unlock your phone, then tap **Trusted places**.
4. Remove the location from your trusted places:
   - For your Home or Work locations in Maps, tap the location name to toggle it off. To remove the address entirely, you must remove it in Maps.
   - For custom places you added, tap the location name, then tap .

Keep phone unlocked while it's on you

You can keep your phone unlocked while you’re holding it in your hand or carrying it in your pocket or handbag. Just unlock it once, and it stays unlocked until you set it down (or manually lock it).

1. Make sure you have set a screen lock.
2. Go to **Settings**.
3. Touch **Security** > **Smart Lock**.

   If you don't see Smart Lock, try the following:

   - Update Google Play services. In the Google Search widget on your home screen, search for “Google Play services”, then touch the app to open it.
   - Go to **Settings** > **Security** > **Advanced** > **Trust agents** and enable **Smart Lock**.
4. Unlock your phone, then touch **On-body detection**.
5. Turn it on.

Pin your screen

Turn on pinning

Use pinning to keep the current app in view until you unpin it. For example, you can pin a game and your child cannot navigate anywhere else on your phone.

You can set up a pattern, PIN, or password required to unpin.

1. Go to **Settings** > **Security** > **Advanced** > **Screen pinning**.
2. Turn pinning on.
3. By default, you must always enter your pattern, PIN, or password when unpinning a screen. If you don't want this security before accessing your other phone screens, turn this option off.

Pin and unpin a screen

To pin a screen:

1. Make sure you've turned on pinning and have recently opened the app you want to pin.
2. Drag up from the bottom of the screen, hold, then release.
3. In the recent app list, touch the app's icon at the top of the preview to see .

   Be sure to touch the app's icon instead of the preview, which opens the app.
4. Touch .

To unpin it:

1. Drag up from the bottom of the screen and hold.
2. If you required a pattern, PIN, or password when you turned on pinning, enter it to unlock the phone.

Lock SIM card

Set up SIM lock

This feature is not available in all countries.

Your SIM card came with a default PIN from your carrier. You can use it to set up an optional SIM card lock, which prevents others from using your cellular plan and accessing account information if your phone is stolen.

If you add a SIM lock, you will be prompted to enter the PIN each time you swap SIM cards or restart the phone.

1. Be sure you have the PIN your carrier provided with the SIM card. If you don't have it, contact your carrier.
2. Go to **Settings** > **Security**.
3. Under SIM CARD LOCK, touch the SIM name.
4. Turn **Lock SIM card** on .
5. Enter your carrier-provided PIN and follow the onscreen instructions.

Unlock SIM card

When prompted, enter the PIN used to set up the SIM lock.

Caution: If you enter an incorrect PIN multiple times, the SIM will be disabled.

If you accidentally disabled SIM

If you enter an incorrect PIN multiple times, the SIM will be disabled.

Contact your carrier for a PIN unlock key (PUK) to re-enable the SIM.

Review or change permissions

Review by feature

The first time you use an app, and sometimes when you install or update it, you are asked to grant the app permission to access certain data and phone features. You can adjust these permissions any time.

To adjust permissions by feature:

1. Go to **Settings** > **Privacy**.
2. Tap **Permission manager** tab.
3. Tap a feature to see which apps have permission to use it.
4. Turn that permission on or off for each app as needed.

Review by app

To adjust permissions by app:

1. Touch & hold the app icon, then tap **App info** ⓘ.
2. Tap **Permissions**.
3. Turn each permission on or off as needed.

> **Tip:** To see how the app uses each permission, tap ⋮ > **All permissions**.

Hide your pattern

You can hide your PIN or pattern to prevent others from viewing it when you unlock your screen.

To hide patterns (if you're using a pattern screen lock):

1. Go to **Settings** > **Security**.
2. Next to **Screen lock**, tap .
3. Turn **Make pattern visible** off .

Use location services

About location information

You can let your phone use GPS, Wi-Fi networks, mobile networks, and sensors to estimate your location. Apps that have your permission can use this information to deliver location-based services, such as the ability to check in, view traffic, find nearby restaurants, or tag your photos with the location where you took them.

Turn location on or off

To control what location information your phone can use:

1. Go to **Settings** > **Location**.
2. Turn **Use location** on or off to give or remove permission to use your location information.

   When it's off, your phone can't find your precise location or share it with any apps. However, turning this off disables many useful features and apps.

Tip: To add a Location tile to quick settings, open quick settings. Tap . Then drag the Location tile where you want it.

Review apps using your location

To see which apps have recently accessed your location:

1. Go to **Settings** > **Location**.
2. Under RECENT LOCATION REQUESTS, review the list of apps that recently received your location.
3. To prevent an app from accessing your location:
   a. Touch **App permission**.
   b. Touch the app name.
   c. Select **Deny**.

Review services using your location

1. Go to **Settings** > **Location** > **Advanced**.

2. Tap a service to open its settings:
   - **Earthquake alerts**: Sends you an alert about nearby earthquakes of magnitude 4.5 or more. (Not available in all countries.)
   - **Emergency Location Service**: Sends your location to emergency responders when you call or text an emergency number.
   - **Google Location Accuracy**: Improves location accuracy for Maps and Find My Device.
   - **Google Location History**: Clear saved location details and turn location history on or off.
   - **Google Location Sharing**: View who's sharing your location, change sharing duration, and stop sharing.
   - **Carrier Location Access**: Improves carrier services and analytics.

Fix an issue

Issue: Location isn't working

After each step, check to see if the issue is fixed.

1. Turn location off and then on again.
2. Turn airplane mode on, wait 15-20 seconds, then turn it off again.
3. If you're using a case, remove it and check if GPS is working. The case might be obstructing the sensor.
4. Check if Battery saver is on. To save power, when Battery saver is on, your phone disables location services.
5. Turn your phone off and then on again.
6. Check for updates to the Maps app. After updating the app, restart your phone.
7. Clear the cache and data for the Maps app.
8. Use safe mode to see if apps you installed are causing the issue and uninstall as needed.

   If location works correctly in safe mode, a 3rd party app is probably causing the issue. A lot of apps use your phone's location. If these apps end up with corrupted files, it can affect your phone's location too.

Issue: Location isn't accurate

Turn accuracy on:

1. Go to **Settings** > **Location**.
2. Touch **Advanced** > **Google Location Accuracy**.
3. Turn **Improve location accuracy** on .

   When this setting is on, your phone uses GPS, Wi-Fi, mobile networks, and sensors to get the most accurate location.

   When it's off, your phone uses only GPS to find location, which can be slower and less accurate.

Let your phone scan for nearby Wi-Fi networks or Bluetooth devices:

1. Go to **Settings** > **Location**.
2. Touch **Wi-Fi and Bluetooth scanning**.

3. Turn **Wi-Fi scanning** and **Bluetooth scanning** on .

Add or remove accounts

Add accounts

You can connect to your accounts, including your Google account, your Moto account, email, and social networking accounts.

Google account

When you set up your phone, you were prompted to add a Google account. If you skipped it then, be sure to set one up now so you can download apps from Play Store, get a customized information feed, and take full advantage of the Calendar, Gmail, and other apps included with your Google account.

To add a Google account:

1. Go to **Settings**.
2. Tap **Accounts** > **Add account**.
3. Tap **Google** and follow the onscreen instructions to add an existing account or to create a new one.
4. Once the account is added, Calendar, Contacts, and other account features and apps are updated with information from that account. You can review and change what syncs with your phone for that account.

Tip: Keep your apps up-to-date. To see if newer versions of the apps associated with your Google account are available, open the Play Store app and tap your profile icon > **Manage apps & device**.

Email or other app account

Accounts are automatically added when you:

- Set up corporate email
- Set up personal email for non-Gmail addresses
- Install apps that require a username/password to log in, such as messaging, shopping, or streaming content

To review these accounts or add another:

1. Go to **Settings**.
2. Tap **Accounts** > **Add account**.
3. Tap the type of account to add and follow the onscreen instructions.

   If you don't see the type of account you want to add, install the related app from Play Store, then sign into your account through the app.
4. Once the account is added, account-related features and apps are updated with information from that account. To review and change what syncs with your phone, tap the account type, then account name.

Remove accounts

If you remove an account, information you synced will be removed from your phone, but it is not deleted from your account.

To remove an account:

1. Go to **Settings** > **Accounts**.
2. Tap the account name.
3. Tap **Remove account**.

Tip: If you have trouble removing a corporate account, go to **Settings** > **Security** > **Advanced** > **Device admin apps** and turn off the app for the account, then try to remove it again.

Change name & info in your Google account

You can update, add, and remove basic info for your Google account:

1. Go to **Settings** > **Google** > **Manage your Google Account**.
2. Touch **Personal info**.
3. Update information as needed. Add or change your profile picture, edit your name and birthday. Learn more.

Forgot your Google password, or want to change it? Learn how to reset your password.

Other questions about your account? Read Google's help.

Sync apps with your Google account

When your phone syncs, your Google apps refresh their data, and you get notifications about updates.

See which apps auto-sync

By default, apps made by Google sync automatically. You can turn auto-sync off and back on for individual apps.

Whether other apps (not made by Google) can sync varies by app.

See which Google apps auto-sync

1. Go to **Settings** > **Accounts**.
2. Tap the account name.
3. Tap **Account sync**.
4. Review the list of your Google apps and when they last synced.

Check other apps

To see if your other apps can auto-sync:

1. Go to **Settings** > **Accounts**.
2. Review the list of accounts:
   - If the app isn't listed, then it can't auto-sync.
   - If it is listed, tap its name to see any sync options you can adjust.

Turn off auto-sync

Turning off auto-sync doesn't remove the app or your data. It only stops the app from automatically refreshing your data.

Turn off for certain Google apps

1. Go to **Settings** > **Accounts**.
2. If you have multiple accounts on your phone, tap the one you want.
3. Tap **Account sync**.
4. Turn off the apps you don't want to auto-sync.

   For example, sync your Calendar and Gmail but don't sync Drive.

Turn off for your Google account

1. Go to **Settings** > **Accounts**.
2. Turn **Automatically sync data** off .

   To receive emails, calendar reminders, or other notifications from Google apps, you'll need to sync manually.

Tip: Turning off auto-sync can help save battery life. To resume auto-sync after your battery recharges, turn it back on again.

Sync manually

1. Go to **Settings** > **Accounts**.
2. Tap the account name.
3. Tap **Account sync** > > **Sync now**.

Fix an issue

Select an issue to see troubleshooting steps:

- Account sync issues
- Forgot password for Google account
- Problems with Facebook, WhatsApp, other apps

Control what info Google collects

Google collects information from you to provide personalized services and tailored content, as outlined in the Google Privacy Policy.

You can review, delete, and control the information Google collects about you. Learn more from Google about:

- Viewing and controlling what information is collected (search, YouTube, recordings of your voice commands, location).
- Deleting your search history and other activity.
- Reviewing your location history.
- Any other questions about your account.

Customize the keyboard

To customize Gboard, just tap in top row of the keyboard.

Or, go to **Settings** > **System** > **Languages & input** > **Virtual keyboard** > **Gboard**.

Resize keyboard to type more accurately

Give yourself more space to type and reduce typos by adjusting the height of the keyboard. You can also reposition it for your best fit.

1. On the top row of the keyboard, tap .
2. Tap
3. Adjust sizing:
   - Drag the handles on the frame to increase or decrease the keyboard height.
   - Touch & hold to drag the keyboard up or down.
4. Tap to save changes or to reset to the original size and position.

Tip: Voice typing can also improve typing speed and accuracy.

Change background appearance

1. On the top row of the keyboard, tap .
2. Tap **Theme**.
3. Select a color or landscape to use as the background.
4. Tap **Apply**.

Adjust keyboard sounds or vibration

The onscreen keyboard vibrates when you tap a key. Turn off vibration feedback if you prefer not to use it or want to improve battery life.

To adjust keyboard sounds or vibration:

1. On the top row of the keyboard, tap .
2. Tap **Preferences**.
3. To adjust vibration:
   - Turn **Haptic feedback on keypress** off or on.
   - If on, tap **Vibration strength on keypress** and move the slider.

4. To adjust sounds:
    - To hear sounds when you type, turn **Sound on keypress** on .
    - To adjust how loud the sounds are, tap **Volume on keypress**.

Disable glide typing

With glide typing, you drag your finger over the letters in a word. If you want to turn this off and only use multi-touch typing:

1. On the top row of the keyboard, tap .
2. Tap **Glide typing**.
3. Turn **Enable glide typing** off .

Limit or turn off suggestions

1. On the top row of the keyboard, tap .
2. Tap **Text correction**.
3. Adjust settings:
    - If you don’t want predictions based on your previous word, turn **Next-word suggestions** off . You will only see suggestions for the current word you're typing.
    - If you don’t want ANY suggestions, turn **Show suggestion strip** off .
    - You can also turn off (or on) offensive word blocking and suggestions for emoji, stickers, and information from Contacts.

Turn off auto-correction

1. On the top row of the keyboard, tap .
2. Tap **Text correction**.
3. If you don’t want words corrected while you type, turn **Auto-correction** off .

Use multiple languages

Change display language

You selected the language for your phone during set up. To change it:

1. Go to **Settings** > **System** > **Languages & input** > **Languages**.
2. Touch & hold the language you want and drag it to the first position in the list.
3. If you don’t see the language you want, tap + to add it, then drag it to the first position.

   All languages added to the list will appear on the keyboard's spacebar.

To remove a language, go to **Settings** > **System** > **Languages & input** > **Languages**, then tap ⋮ > **Remove**, select the language, and tap 🗑.

Add language to keyboard

If you want a keyboard for a language that isn't a display language:

1. On the top row of the keyboard, tap ⚙.
2. Tap **Languages**.
3. Tap +.
4. Select the language.
5. Tap **Done**.

Then, switch between languages on the keyboard by tapping 🌐.

Open apps faster with Adaptive performance

With artificial intelligence (AI), your phone learns which apps you use most, then manages memory more efficiently so they open faster.

To turn this feature on or off:

1. Go to **Settings** > **System** > **Adaptive performance**.
2. Turn it on  or .

Customize Power button gesture

You can customize the Power button so that pressing it twice either opens Google Assistant or opens your camera.

1. Go to **Settings** > **System** > **Gestures**.
2. Touch **Double press power key** and select what you want the gesture to do.

Change System navigation

You can choose how to move between apps and screens:

1. Go to **Settings** > **System** > **Gestures**.
2. Tap **System navigation**.
3. Choose an option:
   - **Gesture navigation**: Use drag and swipe gestures to return to your home screen, to switch apps, or to go back to the previous screen. Learn more about gestures. To adjust sensitivity of the back gesture, touch and move the slider.
   - **3-button navigation**: Use the back , home , and recent buttons. Learn more.

Shrink screen for one-handed use

You can temporarily shrink your screen to make it easier to use with one hand.

To enable this gesture:

1. Go to **Settings** > **System** > **Gestures**.

   Or, open the **Moto** app and touch ☰ > **Moto Actions**.

2. Touch **Swipe to shrink** and turn it on.

To shrink any screen, swipe from the center down to the bottom left or right corner of the screen.

To return to a full-size screen, touch anywhere in the black area around the small screen.

Swipe fingerprint for notifications

You can set the fingerprint sensor to open your notifications and quick settings when you swipe it.

Set it up

1. Go to **Settings** > **System** > **Gestures**.
2. Touch **Swipe fingerprint for notifications** and turn it on .

Use it

Swipe down on the fingerprint sensor:

- Swipe once to view notifications.
- Swipe again to view quick settings.

Turn flashlight on and off

To turn your flashlight on or off:

- Open quick settings and tap .
- Or, make a chopping motion.

If the camera opens instead of turning on the flashlight, be sure to use a chop gesture, not a twist gesture.

To control the chop gesture:

1. Go to **Settings** > **System** > **Gestures**.

   Or, open the **Moto** app and tap > **Moto Actions**.

2. Tap **Fast flashlight** and turn it on or off.

Twist phone to open camera

Open your camera instantly from any screen, even your lock screen, with Quick capture.

Twist your phone twice like this:



The Camera opens, and you're ready to shoot.

Twist twice again to switch to the front (selfie) camera.

If you don't want others to access your camera, you can turn Quick capture off. But if you use a screen lock, don't worry--only your Camera app is accessible. To view existing photos or access any other features or apps, you must unlock your phone.

To turn Quick capture on or off:

1. Go to **Settings** > **System** > **Gestures**.

   Or, open the **Moto** app and tap > **Moto Actions**.

2. Turn **Quick capture** on or off.

Shrink screen for one-handed use

You can temporarily shrink your screen to make it easier to use with one hand.

To enable this gesture:

1. Go to **Settings** > **System** > **Gestures**.

   Or, open the **Moto** app and touch ☰ > **Moto Actions**.

2. Touch **Swipe to shrink** and turn it on.

To shrink any screen, swipe from the center down to the bottom left or right corner of the screen.

To return to a full-size screen, touch anywhere in the black area around the small screen.

Adjust screenshot settings

You can adjust settings for capturing screenshots at any time.

1. Go to **Settings** > **System** > **Gestures**.

   Or, open the **Moto** app and tap ☰ > **Moto Actions**.

2. Turn **Use Three finger screenshot** on or off.

Back up phone

Back up to Google

You can automatically back up the following items to your Google account:

- Apps and app data
- Call history
- Contacts
- Phone settings (including Wi-Fi passwords and permissions)
- Photos and videos (synced to your Google Photos library, not to Google Drive)
- SMS text messages (if using Messages)

Tip: Back up over Wi-Fi to prevent cellular data charges.

Not all apps back up data automatically. Check with the app developer.

To automatically back up to Google Drive:

1. Go to **Settings** > **System** > **Advanced**.
2. Touch **Backup**.
3. Check that **Back up to Google Drive** is on. If needed, turn it on.
4. If you have multiple Google accounts, touch **Account** to select an account.
5. Follow the onscreen instructions.

To back up other files that aren't automatically backed up, like attachments or downloads:

1. Open the Drive app.
2. Touch +.
3. Touch **Upload**, then choose the files or folder to upload.

Manage your backup in Drive

On your phone:

1. Open the Drive app.
2. Touch ≡ > **Backups**.

To learn about managing phone backups from a computer, read Google's help.

Restore backed up data

When you add your Google account to a phone, photos, contacts, settings and app data that you previously backed up to that account are restored onto the phone.

Share your phone

Ways to share your phone

- **Add users.** If you share your phone with family, friends, or within a business, you can set up separate user spaces for each of them.
- **Lend to people as guest.** This is a more temporary space that you or the guest can delete when finished.
- **Pin the screen.** This lets you keep one specific app or screen in view. For example, you can pin a game and your child cannot navigate anywhere else on your phone.

About owners, users, and guests

The owner can:

- Determine whether users and guests can make phone calls and send text messages, which also allows them to see the phone's call history and text history.
- Reset, update, and uninstall any apps.
- Delete user and guests, removing any associated accounts and data from the phone.

Users and guests can:

- Set up Google accounts and other types of accounts.
- Set up a screen lock.
- Customize the home screen and settings for their spaces.
- Add and delete apps for their spaces, and update any apps they use, regardless of who installed them.

Important: To prevent others from switching to your owner profile and accessing your information, set a screen lock before you share your phone with users or guests.

When sharing your phone with users and guests, some apps are only available to the owner, not to other users and guests.

Switch users

Only the owner can switch to the guest profile for loaning the phone and can switch between user profiles.

To switch user profiles or see which is currently active, open quick settings. At the top of the screen, you'll see one of these icons after you've set up a user or added a guest.

Icon	Meaning
	Owner (If you set up your profile in Contacts and included a picture, you'll see it and your name instead.)



Guest



Added user

Add, modify, remove users

Add a user

You must be the device owner to add users.

1. To prevent others from switching to your owner profile and accessing your information, set a screen lock before you share your phone.
2. Go to **Settings** > **System** > **Advanced** > **Multiple users**. If needed, turn it on.

   Tip: To add users from quick settings on your lock screen without unlocking the phone, go to **Settings** > **System** > **Advanced** > **Multiple users** and turn **Add users from lock screen** on.
3. Tap **Add user** > **OK**.
4. Give the phone to the new user to set up the profile.

Restrict calls and messages

From your owner profile, you control whether users can call and send texts with your phone:

1. Go to **Settings** > **System** > **Advanced** > **Multiple users**.

   Or from quick settings, tap > **More settings**.
2. Next to the user name, tap .
3. To prevent the user from making calls or sending messages, switch off **Turn on phone calls & SMS**.

Remove a user

You can remove yourself as a user. You must be the device owner to remove other users.

1. Go to **Settings** > **System** > **Advanced** > **Multiple users**.

   Or from quick settings, tap > **More settings**.
2. Do one of the following:
   - To remove yourself as a user, tap .
   - To remove other users if you are the device owner, next to the user name, tap .
3. Tap **Remove user**.

Add or delete guest

Create a temporary guest profile for sharing your phone with someone.

If you need a space for someone to use on a regular basis, where apps and data can be saved, add a user instead of a guest session.

Lend to guest

1. Go to **Settings** > **System** > **Advanced** > **Multiple users**.
2. If you want to prevent the guest from making calls, touch and switch **Turn on phone calls** off.
3. Touch **Guest**.
4. If you've lent your phone to a guest previously, tap **Start over** to clear the last guest settings, or tap **Yes, continue** to keep last guest settings.

End guest session

1. Go to **Settings** > **System** > **Advanced** > **Multiple users**. Or from quick settings, tap .
2. Tap **Remove guest** > **Remove**.

   All data from and apps installed during this session are deleted.

Record your IMEI number

An IMEI (International Mobile Equipment Identity) number is a unique code that identifies your phone. Phones with two SIM have two IMEI numbers, one for each SIM. This allows the phone to be identified separately on each network that the SIMs connect to.

You'll need your IMEI number if you contact support regarding a warranty, and it's important to have if your phone is stolen. Service providers can use the IMEI to block a stolen phone from cellular networks, and many police departments keep a record of stolen phones using this number.

You might never need your IMEI number, but it's a good idea to record it, just in case.

To find the IMEI number:

1. Go to **Settings** > **About phone**.
2. See **IMEI** for your SIM.
3. Record and save the number where you can easily access it.

You can also find your IMEI number by dialing ***#06#** in the Phone app. On some phones, the MEID HEX number is your IMEI number.

If your phone doesn't turn on, check the box it came in or the receipt for the IMEI number.

Find legal and product information

To view the electronic regulatory label for your phone, go to **Settings** > **About phone** > **Regulatory labels**.

For safety, environmental, warranty, and other legal information, go to **Settings** > **About phone** > **Legal information**.

Printed legal information may also be provided with your phone.

To find your phone's model or serial number, go to **Settings** > **About phone** > **Model & hardware** > **Model Number (SKU)**.

Phone is slow or unstable

If **a certain app is slow**, try these app-specific troubleshooting steps.

If your phone is slow **when viewing online content**, it could be an issue with your connection. If you're on Wi-Fi, use a different Wi-Fi network, switch to mobile data, or contact your Internet Service Provider. If you're using a mobile connection, switch to Wi-Fi.

If **all apps are slow**, it's probably an issue with your phone, not an app on your phone. Try these troubleshooting steps. After each step, check to see if the issue is fixed:

1. Turn your phone off and then on again.
   - If your phone is frozen, reboot it by pressing and holding the Power button for 7-10 seconds.
2. Check for system updates.

   Go to **Settings** > **System** > **Advanced** > **System updates**.
3. Check for app updates.

   Open the Play Store app and touch your profile icon > **Manage apps & device**.
4. Check available storage and clear space if needed.

Phone feels warm or hot

Overview

It's normal for your phone to feel warm, or even hot, depending on how you're using it.

If your phone gets hot, it will slow charging, reduce brightness, and limit other functions until it cools down, or automatically shut off if it gets too hot.

If your phone is too hot to touch, use a different phone, tablet, or computer to contact Motorola support.

Reasons your phone may get warm

- Playing graphics-intensive games in high performance mode for an extended period
- Using GPS navigation
- Tethering or using your phone as a Wi-Fi hotspot
- Using phone while it's charging
- Fast charging with a high-wattage or wireless charger
- Downloading or uploading large amounts of data, such as during initial setup when copying data from your old phone, backing up or restoring data, or downloading and updating multiple apps
- Taking multiple photos or recording high-resolution videos for an extended time
- Using your phone in areas with weak signals for an extended period

Ways to keep your phone from heating up

- Pause resource-intensive features or apps until your phone cools down
- Use the charger that came with your phone, or a charger that is compatible with your phone
- Keep your phone away from direct heat sources like electric blankets, heaters, hot air vents, or excessive sunlight
- Don't charge or use your phone in enclosed or poorly ventilated places, such as on a pillow or blanket, where heat can quickly accumulate
- Lower your phone's display brightness

If you're not using or charging it

Sometimes a process can get stuck in the background. If your phone is hot but you're not using or charging it, turn your phone off and on again. This will stop the previously stuck process and resolve the issue.

Phone won't turn on

If your phone isn't starting, has a black or blank screen, or turns on but immediately turns off, try these steps to fix the issue.

1. Press & hold the Power button for 5-7 seconds, or up to 30 seconds.

   This restarts (reboots) your phone.

2. Charge the phone.

   If your phone has a sign-of-life indicator look for a white light near the top front of the phone. This indicates that the phone is charging but battery is too low to power the screen.

   If you're having problems charging, try these troubleshooting steps.

3. If you don't see a battery icon after you, plug your phone in to charge, the issue could be with your screen. Check if your phone rings by calling it from another phone. If it rings, the issue is with your screen and you can try these troubleshooting steps.

4. Perform an external reset of your phone. Learn how.

5. If you have a Windows PC, download Software Fix to your PC and try reinstalling the phone's system software.

Phone restarts or crashes

If your phone randomly reboots, restarts, or shuts down without restarting, try the following.

1. Restart your phone:
   a. Hold down the Power button for about 30 seconds.
   b. If this doesn't work, connect your phone to charge for at least 5 minutes. Then, while connected to the charger, restart again by holding down the Power button for 30 seconds.
2. Troubleshoot your phone:
   a. Check if a software update is available for your phone.
   b. Check available storage and clear space if needed.

      You may see issues if your phone's internal storage is almost full. To free up space, remove unnecessary files and clear cached data.
3. Troubleshoot your apps:
   a. Check for app updates.
   b. Use safe mode to see if apps you installed are causing the issue and uninstall as needed.

      If your problem doesn't go away in safe mode, restart your phone and continue to the next section.
4. Reset to factory settings:

   To remove any processes on your phone that may be causing the issue, you can reset your phone to factory settings.

   A factory data reset will remove all data from your phone.
5. If you have a Windows PC, download Software Fix to your PC and try reinstalling the phone's system software.

Screen is frozen or won't respond

Tip: If your screen goes black when the phone rings so you can't answer the call, clear data for the Phone app.

If your phone freezes, stops responding, or is stuck on a blank or white screen, try the following:

1. Restart your phone. Hold down the Power button for about 30 seconds.
2. If this doesn't work, charge your phone for at least 5 minutes. Then, while connected to the charger, restart again by holding down the Power button for 30 seconds.

If your phone freezes again, check for a larger issue:

1. Restart your phone to unfreeze it.
2. Check if a software update is available for your phone.
3. Check available storage and clear space if needed.

   You may see issues if your phone's internal storage is almost full. To free up space, remove unnecessary files and clear cached data.
4. Check for app updates.

If you can't unfreeze the phone, reset your phone to factory settings, to remove any processes that may be causing the issue.

A factory data reset will remove all data from your phone.

Screen displays wrong colors

Everything is grayscale, black and white

Go to **Settings** > **Digital Wellbeing & parental controls** > **Bedtime mode** > **Customize** > **Screen options at bedtime** and turn **Grayscale** off.

Everything is negative, reversed colors

Go to **Settings** > **Accessibility** > **Color inversion** and turn it off.

Learn more.

Tones, hues are different or missing

- If the screen shows warmer tones than usual, check quick settings. If **Night Light** is on, turn it off.
- If certain colors appear diminished or their hues are different, go to **Settings** > **Accessibility** > **Color correction** and turn **Use color correction** off.

Background turned dark/light

Go to **Settings** > **Display** > **Advanced** and turn **Dark theme** off.

Screen brightness automatically too dim or bright

Adaptive brightness uses the ambient light sensor and machine learning to adjust your display brightness automatically. When you change the brightness slider, your phone learns your preferred levels for various lighting environments. Ideally, you'll need to use the slider less and less.

If Adaptive brightness stops working as desired, you can reset it to retrain the system.

1. Go to **Settings** > **Apps & notifications** > **See all # apps**.
2. Tap ⋮ > **Show system**.
3. Search for "Device Health Services" then tap **Device Health Services**.
4. Tap **Storage & cache** > **Clear storage** > **Reset adaptive brightness**.

If you prefer to manually adjust brightness, go to **Settings** > **Display** > **Adaptive brightness** and turn **Use adaptive brightness** off .

If Battery saver is on, the screen dims when the battery gets low.

SD card issues

Phone doesn't recognize new SD card

If your phone isn’t recognizing a new card that you inserted, try these steps. After each step, check to see if the issue is fixed.

1. Turn your phone off and then on again.
2. Inspect card for damage or alignment issue:
    a. Turn your phone off and remove the card. Inspect for damage. If not damaged, reinsert the card.
    b. Be sure the card sits completely in its slot and that the tray slides easily into the phone.
    c. Turn the phone on.
3. Check that the card is mounted:
    a. Go to **Settings** > **Storage**.
    b. If you see **Ejected** under the card name, touch the name then touch **MOUNT**.
    c. Turn your phone off and then on again.
4. Check that the card’s type and capacity is compatible with your phone. If not, use a different SD card that meets the requirements.
5. Insert a different SD card to confirm that the issue is with the original card and not with your phone.

Phone can't format SD card

Try the following:

- Check that the card’s type and capacity is compatible with your phone. If not, use a different SD card that meets the requirements.
- Try formatting the card using an SD card reader and an SD card formatter app on a Windows computer.

Phone stopped reading SD card

After each step, check to see if the issue is fixed:

1. Turn your phone off and then on again.
2. Inspect card for damage or alignment issue:
    a. Turn your phone off and remove the card. Inspect for damage. If not damaged, reinsert the card.
    b. Be sure the card sits completely in its slot and that the tray slides easily into the phone.
    c. Turn the phone on.
3. Check that the card is mounted:
    a. Go to **Settings** > **Storage**.
    b. If you see **Ejected** under the card name, touch the name then touch **MOUNT**.
    c. Turn your phone off and then on again.

4. If the card is formatted as portable storage, use another device to check if the card is readable:
    a. Insert card into another device.
    b. If that device can read the card and files are present, back up files to your computer.

        This won't work for cards formatted as internal storage.
5. Check for errors with a USB SD card reader connected to a Windows computer:
    a. Insert the card into a USB card reader.
    b. Open My Computer, right-click on the SD card, and select **Properties** > **Service** > **Check disk for errors**. Depending on the size of your card and usage, this process could take up to an hour.
6. Reformat card using an SD card reader and an SD card formatter app on a Windows computer. Formatting the card erases all data on the card. Before you reformat, if you can access your SD card files from your PC, copy them to your computer. Then, use the SD card formatter app to format your card to FAT32.
7. Try a new SD card.

Apps can't view files on SD card

If none of your apps can view files on the card:

1. Install a different file manager app from Play Store. Use that app to check if files are visible on the card.
2. Check if files are visible using a Windows computer:
    a. Turn your phone off and remove the card.
    b. Put the card in the computer’s SD card slot or a connected USB SD card reader.

If a specific app can’t view files the card:

1. Open the app from which files are missing.
2. In the app's settings, set the storage location to be the SD card, not internal or phone memory.

Computer can't view files on SD card

After each troubleshooting step, check to see if your issue is fixed:

1. Use a USB cable that’s capable of data transfer and isn’t for charging only.
2. Be sure you have set the USB connection type to allow file transfer.

Troubleshoot issues with calls

Select the statement that best describes your issue:

- Can't make calls
- Can't answer calls
- Phone doesn’t ring
- People can’t hear me
- Can't hear calls
- Don’t get calls/texts
- Screen goes black
- Calls drop

Can't make calls

After each troubleshooting step, check to see if your issue is fixed.

Phone app icon is missing

If disappeared from your home screen, you just need to add a shortcut for the Phone app.

SIM card not recognized

If you see or in the status bar or a message that the SIM is not recognized:

1. Turn your phone off and then on again.

   Press & hold the Power button, then touch **Power off**. Then turn it on to establish a new connection with the network.

2. Turn off your phone, then remove and reinsert the SIM.
3. Contact your carrier to make sure your account is set up properly.
4. Ask your carrier to replace the SIM card.
5. Perform an external phone reset.

No signal

1. If you usually have a signal but the status bar shows in your current location, move to another area where you can receive a signal, like outdoors. If you're uncertain whether your carrier provides service in that location, check the coverage map on your carrier's website.
2. If airplane mode is on, turn it off.
3. Turn your phone off and then on again.
4. Check for app updates.
5. Check if a software update is available for your phone.
6. Check that the **Preferred network type** is set to **Global**. (**Settings** > **Network & internet** > **Mobile network** > **Preferred network type**.) If you're experiencing service issues when it is set on **Global**, try a different setting. Not all carriers support this feature.
7. Remove your SIM card and reinsert.
8. Use safe mode to see if apps you installed are causing the issue and uninstall as needed.
9. Reset the phone.

Have signal, but can't make calls

1. Turn your phone off and then on again.

   Press & hold the Power button, then touch **Power off**. Then turn it on to establish a new connection with the network.

2. Clear the cache for the Phone app.
3. Use safe mode to see if apps you installed are causing the issue and uninstall as needed.

4. Check if a software update is available for your phone.
5. Reset the phone.

Consistent busy signal

Outbound calls

1. If you hear a fast busy signal when you call a number, all cellular circuits may be in use, preventing the call from going through. Try calling again later.
2. If you hear a fast busy signal every time you call the same number, your number may be blocked by an app. Try calling from a different number.

Incoming calls

If you have a signal and can make calls, but callers tell you they consistently get a busy signal when calling you, check that you haven't blocked their numbers.

Can't answer or phone doesn't ring

After each troubleshooting step, check to see if your issue is fixed.

Phone doesn’t ring or ring loud enough

1. Check your volume setting.
2. Look for in your status bar. If you see it:
   - Open quick settings and touch to turn Do Not Disturb off. Your phone will ring for incoming calls.
   - Make sure your phone is set to screen calls at the appropriate times.
3. Check that your ringtone is not set to **None**.
4. Is your phone connected with a Bluetooth device? If so, all audio is routed to the Bluetooth device.
5. If you're using a ringtone that you installed, try using a ringtone that came with the phone.
6. Use safe mode to see if apps you installed are causing the issue and uninstall as needed. Begin with application types like launchers, task killers, or anti-virus apps.

Can't answer ringing phone

1. Clear the data for the Phone app.

   Touch & hold , then touch > **Storage & cache** > **Clear storage**.

Consistent busy signal

Outbound calls

1. If you hear a fast busy signal when you call a number, all cellular circuits may be in use, preventing the call from going through. Try calling again later.
2. If you hear a fast busy signal every time you call the same number, your number may be blocked by an app. Try calling from a different number.

Incoming calls

If you have a signal and can make calls, but callers tell you they consistently get a busy signal when calling you, check that you haven’t blocked their numbers.

Don’t get calls/texts

1. If airplane mode is on, turn it off.
2. Turn your phone off and then on again.
3. Check for updates to your phone and messaging app.
4. Check if a software update is available for your phone.

Calls go to voicemail

Check your **Do Not Disturb** settings:

1. Look for in your status bar. If you see it, then your phone is sending calls to voicemail so you're not interrupted. To have your phone ring for incoming calls, open quick settings and touch to turn off Do Not Disturb.
2. Check your schedules for Do Not Disturb and delete any you don't want.
3. If you're using Bedtime mode but don't want to send calls to voicemail when you're sleeping, touch **Settings** > **Digital Wellbeing & parental controls** > **Bedtime mode** > **Customize** and turn **Do not Disturb for Bedtime mode** off .
4. You can start Do Not Disturb by placing your phone face down on a surface. If you don't want to send calls to voicemail when your phone is face down, go to **Settings** > **Sound** > **Advanced** > **Flip for DND** and turn it off .

Issues during calls

After each troubleshooting step, check to see if your issue is fixed.

Screen goes black

1. If you are using a case, cover or screen protector, remove it and see if it was causing the issue.
2. Check your proximity sensor.

   Dial a call and set the phone on a table (don't use speaker mode), then hold your hand over the proximity sensor to see if you can turn the screen off and on.
3. Use safe mode to see if apps you installed are causing the issue and uninstall as needed.

Calls are dropping

1. Check your signal strength:
   - Weak signal from your cellular provider is a common cause of dropped calls. In the status bar, see how many bars your network connection has. If you see only one or two bars, change locations to improve your signal strength, particularly if you are indoors.
2. Turn your phone off and then on again.

   Press & hold the Power button, then touch **Power off**. Then turn it on to establish a new connection with the network.
3. During a call, check that the proximity sensor works by covering it to confirm that it turns off your screen, preventing accidental touches during calls. You can also download an app to automatically lock your screen during calls; search for “call screen lock” on Play Store.
4. Use safe mode to see if apps you installed are causing the issue and uninstall as needed.
5. Check if a software update is available for your phone.
6. Reset the phone.

People can’t hear me

People can't hear me on calls

1. Check that nothing is covering the microphone:
   - If you are using a case, cover or screen protector, remove it and see if it was causing the issue.
   - Check that the protective film that ships with the phone has been removed.
2. Check to see if your phone is using Voice privacy. (This feature is not available on all models.) Turn it off to see if sound quality improves:
   a. Tap .
   b. Tap > **Settings** > **Calls**.
   c. Turn off **Voice privacy**.

3. If the issue occurs while using the speakerphone or a Bluetooth headset, check your signal strength.

   In the status bar, see how many bars your network connection has. If you see only one or two bars, change locations to improve your signal strength, particularly if you are indoors.

4. Turn your phone off and then on again.

   Press & hold the Power button, then tap **Power off**. Then turn it on to establish a new connection with the network.

5. Check if a software update is available for your phone.

6. Turn off Voice Match.

   a. Open the Google app.

   b. Tap your profile icon > **Settings** > **Assistant** > **Hey Google & Voice Match**.

   c. Turn **Hey Google** off .

   Saying “OK, Google” won't work from all screens, but you can tap the search widget first, then say “OK, Google”.

7. Use safe mode to see if apps you installed are causing the issue and uninstall as needed.

8. Reset the phone.

People can’t hear me on apps like Meet or WhatsApp

1. Force stop the app. This completely shuts down the app, including any background services that may be causing your issue.

2. Check for updates to the app.

3. Turn your phone off and then on again.

4. Clear the app's cache.

Poor sound quality on calls

Start by checking your volume setting. You can only adjust the call volume with the Volume buttons while you’re on a call.

How are you listening to the call?

Wired headset

1. Make sure the headset is inserted completely into the headset jack.

2. If you are using a case or cover, remove it and re-insert the headset to see if it was interfering.

3. Try a different headset to determine if the issue is with the original headset.

Earpiece

1. Check that nothing is covering the microphone:

   - If you are using a case, cover or screen protector, remove it and see if it was causing the issue.

   - If the phone was shipped with a protective plastic film, remove the film.

2. While in a call, try using the speakerphone or a wired headset to see if the sound quality improves. If it doesn’t, the issue is probably network signal strength instead of hardware.

3. Turn your phone off and then on again.

   Press & hold the Power button, then tap **Power off**. Then turn it on to establish a new connection with the network.

4. Use safe mode to see if apps you installed are causing the issue and uninstall as needed.
5. Check if a software update is available for your phone.
6. Reset the phone.

Connected Bluetooth device

Check the battery level of Bluetooth device and phone, and charge if necessary. Paired Bluetooth devices may disconnect or create noise when the phone or Bluetooth battery are low.

Charging issues

Try these troubleshooting steps. After each step, check to see if your issue is fixed.

1. Make sure the USB plug fits securely into the phone.
2. If the battery is completely depleted, connect the charger and wait about 10 minutes until it has enough voltage to charge, then press the Power button.
3. If you're charging by connecting to a wall outlet:
   - If the outlet is controlled with a switch, check that it is turned on.
   - Use the charger that came with the phone, or a charger that is compatible with your phone.
   - Remove any case, to see if it's impeding the charger/port connection.
   - Inspect the charger for damage to the wire or plug. If you see damage, try charging by connecting to your computer with a USB cable.
   - Check the outlet for damage or loose parts. If you see damage, try another outlet.
4. If you're charging by connecting to your computer, check the USB connection:
   a. Swipe the status bar down.
   b. On the USB notification, tap ⌄, then tap the notification.
   c. Tap **No data transfer**.
5. Reboot the phone by holding the Power button for 7-10 seconds.
6. Reset the phone.

Phone gets hot while charging

The TurboPower charger, which provides efficient, rapid charging can cause the battery to heat up, which is normal. If the battery reaches 111 degrees (F), the charging rate slows down. Once the battery cools down, the charger begins rapid charging again.

TurboPower charging not working

When the battery is below 78%, the TurboPower charger charges rapidly. When the battery is at 78% or higher, it charges at regular speed.

If your battery is below 78% and isn’t charging rapidly, disconnect your phone from the charger and plug it back in again.

Battery drains too fast

Battery life varies

The way you use your phone can really affect how long you can go before recharging your battery. Navigating, playing games, browsing the web, making calls and texting all require energy. So, your battery life may vary day to day, depending on what you're doing.

If your battery is draining faster than expected

If your battery life seems shorter than usual, a quick and easy step is to reboot your phone, especially if you haven't turned it off in longer than a week.

1. Press & hold the Power button.
2. Touch **Restart**.
3. Plug your phone in and charge it normally.

Tips:

- Adjust settings to extend your battery life
- Check your phone's battery health to determine if it's time to replace the battery

Bluetooth issues

Bluetooth turning on automatically

After each step, check to see if your issue is fixed:

1. When Bluetooth is off, your phone can still scan and automatically connect to a previously paired device. To prevent this, turn off Bluetooth scanning.
2. Some third-party apps that control Bluetooth devices (smart watches, fitness and vehicle monitors, etc.) automatically turn Bluetooth on. If they do, this can prevent you from turning Bluetooth off.

   To check if a third-party app you installed is automatically turning Bluetooth on, use safe mode to identify the problematic app, then uninstall it.

Can't pair

After each step, check to see if your issue is fixed:

1. First, check the basics.
2. Make sure the phone and Bluetooth device are in discovery mode.
3. Refresh the available devices list:
   a. Go to **Settings** > **Connected devices**.
   b. Touch **Pair new device**.
4. Check if a software update is available for your phone.
5. If you're having trouble pairing with your car, see the car manufacturer's instructions for your model.
6. Reset the phone's connections, then power cycle the phone.

Can't reconnect previously paired device

Unpair the Bluetooth device, then pair it again:

1. Go to **Settings** > **Connected devices**.
2. Next to the paired device, tap ⚙ > **FORGET**.
3. Pair the device again.

Can't hear music

After each step, check to see if your issue is fixed:

1. First, check the basics.
2. Check that the volume is up on your phone and car or Bluetooth device.
3. Check that other devices paired with your phone aren't playing the music.

4. Check that **Media audio** is on:
   a. Go to **Settings** > **Connected devices**.
   b. Next to the paired device, touch ⚙.
   c. Make sure **Media audio** is checked.
5. If the problem is with a car, check the car's instructions.

Can't make or hear on calls

After each step, check to see if your issue is fixed:

1. Check that other devices paired with your phone aren't getting your calls.
2. Check that **Phone audio** is on:
   a. Go to **Settings** > **Connected devices**.
   b. Next to the paired device, touch ⚙.
   c. Make sure **Phone audio** is checked.
3. If the problem is with a car, check the car's instructions.

Connection drops

After each step, check to see if your issue is fixed:

1. Check battery level on your phone and on the Bluetooth device and charge if needed. Bluetooth devices may disconnect or create noise when the phone or Bluetooth battery is low.
2. Adjust positioning:
   - Make sure you are wearing or positioning the device appropriately.
   - Keep metal objects, such as keys or coins, away from the phone and device to avoid interference.
3. Clear data for this system app:
   a. Go to **Settings** > **Apps & notifications**, then touch **See all # apps**.
   b. Touch ⋮ > **Show system**.
   c. Touch **Bluetooth** > **Storage** > **Clear storage**.

Paired device can't see contacts

Check that contact sharing is on:

1. Go to **Settings** > **Connected devices**.
2. Next to the paired device, touch ⚙.
3. Make sure **Contact sharing** is on.
4. Check and adjust sharing settings on the paired device or in the device's app.

Fix it: Check the basics

After each step, see if your issue is fixed:

1. Check battery level on your phone and Bluetooth device, and charge if either is low.
2. Keep the phone and Bluetooth device within 30 feet of each other, closer for better performance.
3. On your phone, turn Bluetooth off and then on again.
4. Turn off the Bluetooth device to disconnect it. Then turn it back on to automatically reconnect with the phone.
5. Power cycle both your phone and the Bluetooth device.

If that doesn't fix it, follow the steps for specific problems in the sections above.

Wi-Fi issues

After each troubleshooting step, check to see if the issue is fixed.

Can't connect to a network

1. When you enter the password to connect:
   - Get the password from the Wi-Fi router and make sure you enter it correctly on your phone.
   - If the **CONNECT** button is greyed out, the password you entered isn’t long enough. Confirm the router’s password and re-enter it on your phone.
2. Check if a software update is available for your phone.
3. Check that the Wi-Fi router firmware is up to date.
4. Reset the phone’s network connections.
5. Reset the phone.

Connection drops

After each troubleshooting step, check to see if the issue is fixed.

1. Turn off Wi-Fi scanning.
2. Remove the network connection. Then set up the Wi-Fi connection again.
3. Check if a software update is available for your phone.
4. Restart your wireless router by unplugging it from the power outlet for about 30 seconds and then plugging it back in. Once the wireless router is running again, try to reconnect.
5. On a computer, log into your router and try adjusting one or more of these router settings:
   - If the router has multiple bands, disable the lower band.
   - Change the encryption/security setting of the SSID from WPA-password to WPA-PSK.
   - Don't use automatic channel selection. Instead, assign a fixed channel, such as Channel 6.
6. Reset the phone’s connections.

Hotspot problems

If you can't turn your hotspot on, check that:

- Cellular data is on.
- Data Saver is turned off.

If you can't connect a computer or tablet to your phone's Wi-Fi hotspot:

1. The cellular network for your phone may not be in range. Check the signal icon in your status bar to ensure you have strong connection. If not, try these troubleshooting steps.
2. Re-enter the password on the device to match the hotspot password set up on your phone. Make sure that the encryption type and security settings match on the device and your phone.

3. Disconnect and then reconnect:
    a. Turn off the connection from your device.
    b. Turn off the phone's hotspot.
    c. Restart your device.
    d. Wait for 1 minute, then turn on and enable the hotspot on your phone.
    e. Reconnect the device.

If you've connected a computer or tablet but can't access certain web sites:

1. Power cycle your computer or tablet.
2. Make sure the browser version is up to date.

Can't transfer files or connect USB to computer

If you're having problems using a USB connection to connect your phone to your computer, try these troubleshooting steps.

Check your USB connection

- On your phone, check that your USB connection is set to File transfer mode.
- Try a different USB cable. Not all USB cables can transfer files.
- If your phone detected moisture in the USB port, which can occur in high humidity environments or if the phone came in contact with water, unplug the phone, wipe it dry, and gently shake it about 10 times with the USB port facing downward to remove moisture. Place it on a cloth to air dry, or use a fan to help dry it faster.
- To test the USB port on your phone, connect your phone to a different computer.
- To test the USB port on your computer, connect a different device to your computer.
- To connect your phone to a car, projector, or other device, refer to the user manual that came with the device.

Check your computer

Windows PC

1. On your PC, check that **Settings** > **Advanced system settings** > **Hardware** tab > **Device installation settings** is set to automatically detect and install drivers for new devices.
2. Restart your PC.

Mac computer

1. Check that your computer is running Mac OS X 10.5 or later.
2. Check that your computer has Android File Transfer installed and open.
3. Restart your computer.

Check your phone

1. Check if a software update is available for your phone.
2. Turn your phone off and then on again.

   Press & hold the Power button, then tap **Power off**.

Forgot unlock code

If you forgot your PIN, pattern, or password for unlocking your screen, you need to erase your phone, set it up again, and set a new screen lock.

1. Make sure you know your Gmail address and password, which you'll need when setting up the phone. If you've forgotten them, use Google's website to retrieve them.
2. Perform an external reset of your phone.

Can't sign in to Google

If you’ve forgotten the Gmail address and password for your Google account:

1. Visit Google’s website to reset the password.
2. On a computer, log in to Gmail and confirm that the new password works.
3. Wait 24 hours after changing your password before resetting your device. For security, you can't use an account to set up a phone after reset if that password changed within 24 hours.

Account sync issues

If your account is having problems syncing, you may see a message or an icon.

In most cases, these issues are temporary and your account will sync again after a few minutes. If you keep having sync issues, try the solutions below.

Sync account manually

1. Go to **Settings** > **Accounts**.
2. Touch the account to sync.
3. Touch **Account sync**.

If your phone syncs, your issue is fixed. If not, try the troubleshooting solutions below.

Basic troubleshooting

After each troubleshooting step, try manually syncing to test if sync works.

1. Check that auto-sync is on.
   a. Go to **Settings** > **Accounts**.
   b. Touch the account.

      by the account name means that some or all of the account's information is configured to auto-sync.

      by the account name means that the account will not auto-sync.
2. Make sure your Internet connection works.

   For sync to work, you need an Internet connection. To test if your connection is working, open a browser and load a website. If the website doesn't load, get help connecting to Wi-Fi or to cellular data.
3. Check if you have account issues.

   For sync to work, you need to be able to sign in to your Google account. Make sure that you can sign in to your account in other ways and on another device. For example, try checking your Gmail with your computer's browser.

   - If you can sign in, the issue is with your phone. You can move on to the next solution.
   - If you can't sign in, your account may have an issue.
4. Check if a software update is available for your phone.

Advanced troubleshooting

After each troubleshooting step, try manually syncing to test if sync works.

1. Remove and re-add your account.

2. Clear cache and data for the Contacts app.
    a. If you've saved any contacts since you last synced, back them up. Open the **Contacts** app, then tap **Organize** > **Export**. Then export to a VCF file and email the file to yourself.
    b. Clear the cache and data for the Contacts app.
    c. Download the VCF file that you emailed to yourself, then import those contacts (**Contacts** app > **Organize** > **Import**).

App or widget issues

App or widget missing from home screen

If a widget disappeared from your home screen, then add the widget by touching & holding an empty spot on your home screen.

If an app disappeared from your home screen, the shortcut for opening the app was removed and you just need to add a shortcut.

If an app disappeared from your list of all apps, you need to reinstall it.

App icons being replaced in favorites

If the apps in your favorites tray are being replaced by apps you haven't selected and you don't want them to change, turn off app suggestions.

App crashes, won’t open, or isn’t working

After each step, check to see if the issue is fixed:

1. Turn your phone off and then on again.

   Press & hold the Power button, then tap **Power off**.

2. Check that you have not disabled permissions for the app. If any permissions are turned off, turn them on and try using the app again.
3. Update the app.
4. Force stop the app. This completely shuts down the app, including any background services that may be causing your issue.
5. Clear the app’s cache. This frees up space by removing temporary files.
6. Clear the app’s data. This erases all data saved in this app.
7. Contact the app’s developer.
   a. Open the Play Store app.
   b. Touch your profile icon > **Manage apps & device**.
   c. Touch the app and swipe down to see contact information.
8. If all else fails, delete the app.

Tip: To figure out which third-party app is causing performance problems, use safe mode.

App is slow to open

If you experience a lag when opening an app, turn on performance settings.

App disabled in safe mode

If apps are disabled because you’re in safe mode, you can’t use them until you exit safe mode.

To exit safe mode, turn your phone off and then on again.

If you can't update apps

If you see apps waiting to update that are stuck in “Pending” status, update the Chrome app first.

1. On the “Pending downloads” screen, cancel all downloads.
2. Swipe to **Chrome** and tap **Update**.
3. After Chrome has updated, touch **Update all**.

   Apps will now update normally.

Problems with app you installed

After each step, check to see if the issue is fixed:

1. Check for updates to the app.
2. If you can open the app, touch or > **Help** and look for troubleshooting information.
3. Clear the app's cache.
4. Go to the developer’s website for support.
   a. Open the Play Store app.
   b. Touch your profile icon > **Manage apps & device**.
   c. Touch the app and swipe down to see a link to the website.

Camera issues

Photo looks blurry

Wipe the lens clean with a soft, dry cloth and retake the photo.

If new photos still look blurry:

- Increase resolution (photo size) in the Camera app. A smaller photo size results in lower image quality.
- Avoid zooming when taking a photo. Pixelation always occurs when you zoom a digital photo. If you use zoom during the shot itself, pixelation will be more evident.
- If you're indoors and taking a panoramic photo, switch to regular mode. Panorama works best for outdoor shots; the algorithm that stitches the images together isn't optimized for indoor, up-close shots.

Accidentally deleted photos

You can try to recover recently deleted photos.

If recovered, be sure to back up your photos to the cloud.

Can't delete photo

If a photo or video you deleted comes back, check if it's on your SD card. To delete it, use the Files app. (If you don't have this app, download a file manager app and use it to delete the photo from your card.)

Or, remove your card from the phone and use a computer to delete photos from the card.

WhatsApp camera issues

If you installed WhatsApp and have problems taking photos or videos with it:

1. Check for updates to the app.
2. Clear the app's cache.
3. If the problem continues, open WhatsApp, touch ⋮ > **Settings** > **Help**, and search for information about your issue.

Error: Please restart Camera to continue

After each troubleshooting step, check to see if the issue is fixed:

1. Turn your phone off and then on again.
2. Clear the cache for the Camera app.
3. Check for updates to your Camera app.
4. Use safe mode to see if apps you installed are causing the issue and uninstall as needed.

   If the camera works correctly in safe mode, a third-party app is probably causing the issue.
5. If you're storing photos/videos on your SD card, remove the card and see if you can take photos without getting the error. If so, replace the SD card with a new card. Make sure the new card is certified A1 and has a fast write speed.

Error: Camera Busy

This error can occur if you use the camera in one app and then switch to another app that requires permission to access the camera.

After each troubleshooting step, check to see if the issue is fixed:

1. Turn your phone off and then on again.
2. Check which apps have permission to access the camera.

   Settings > **Apps & notifications** > **Advanced** > **Permission manager** > **Camera**

   Review the list of the apps on your phone that request camera access and remove access for apps that look suspicious or that you don't use.
3. Clear the cache and data for the Camera app.

Error: Trash is full

If you're getting messages about the trash being full:

1. Open the **Photos** app.
2. Touch **Collections** > **Trash**.
3. Touch > **Empty trash**.
4. Touch **Delete permanently** to confirm the deletion.

Messaging issues

If you’re having issues sending or receiving messages, try the following:

1. Check for updates to your messaging app.
2. Check if a software update is available for your phone.
3. Turn your phone off and then on again.
4. If the issue persists, follow the steps below for specific issues. After each troubleshooting step, check to see if your issue is fixed.

Red ! on text message

If you see , your text message was not sent.

1. Check your signal strength.

   Weak signal from your cellular provider is a common cause of unsent messages. In the status bar, see how many bars your network connection has. If you see only one or two bars, change locations to improve your signal strength, particularly if you are indoors.

2. Open the conversation and resend the message.

Can't hear notifications

1. Check that message notifications are turned on.
2. Look for in your status bar. If you see it:

   - Open quick settings and touch  to turn Do Not Disturb off.
   - Make sure your phone is set to screen calls at the appropriate times.

3. If you're using a 3rd party launcher, switch back to the Moto launcher. If this fixes the issue, then find an alternative launcher to use.

Can't send or receive messages

1. Change your preferred network to **Global**. (Not all carriers support this feature.)
2. If you recently switched from iPhone and are having trouble sending messages to or receiving them from an iPhone, your phone number may still be associated with iMessage. You need to deregister your account.
3. Contact your carrier.

Can't send or receive pictures or videos

Check that:

- Cellular data is turned on.
- Your data plan supports MMS (multimedia messages).

Messages app stopped

1. Check that you have not disabled permissions for the Messages app. If any permissions are turned off, turn them on and try using the app again.
2. Force stop the app. This completely shuts down the app, including any background services that may be causing your issue.
3. Uninstall any recent app updates.

   Touch & hold , then tap **App info** > > **Uninstall updates**.
4. Clear the app's cache. This frees up space by removing temporary files.
5. Reset the phone.

Keyboard not working

If your keyboard has problems, like a missing spacebar:

1. Check for updates to your keyboard app.
2. Turn your phone off and then on again.
3. Clear the cache for the keyboard app.

Problems with Facebook, WhatsApp, other apps

If you're having problems with messaging apps that you installed:

1. Check for updates to the app.
2. If you can open the app, touch or > **Help** and look for troubleshooting information.
3. Turn your phone off and then on again.
4. Clear the app's cache.

Gmail issues

For help with Gmail, read Google's troubleshooting information.

Play Store issues

For help with Play Store, read Google's troubleshooting information.

Update Android software

For best performance, keep your phone updated with the latest available Android software.

Check Android version number

To check what version of Android your phone is running:

1. Go to **Settings** > **About phone** > **Android version**.
2. The number displayed is your phone's Android version.

Install Android software updates

Your phone notifies you if an Android software update is available.

To manually check for updates, go to **Settings** > **System** > **Advanced** > **System updates**.

If an upgrade is available, follow the onscreen instructions to install it.

Tips:

- To save data charges, use a Wi-Fi connection to download software updates.
- For safety reasons, your phone may download security updates (not OS upgrades) automatically over your mobile network if Wi-Fi is not available within a few days after you receive a notification that a security update is available. In this case, data charges may apply depending on the carrier.

You can't downgrade to a previous software version after installing an update.

Check if and when updates are available

Types of updates:

- **Security updates** contain fixes and improvements from Google for your current version of the Android operating system. Motorola provides these updates to most phones on a regular basis.
- **Android OS updates** are new versions of the Android operating system. Motorola provides OS updates from Google to eligible phones as soon as possible.

To see if an OS update will be available for your phone, or if your phone is still eligible for security updates, see the software update website for your country. Our support agents get their Android update information from here too. If the website doesn't have a update release date for your phone, then we don’t know the release date yet.

For Android OS updates, with several phone models, regions, and distribution channels we may have hundreds of software versions to test before releasing an update to your phone. Because dependencies on carriers and other key partners for certifications, independent testing, and requests for changes take more time, all phone owners don't receive updates at the same time, even in the same region.

Reset Wi-Fi, cellular data, and Bluetooth

Use this reset if:

- Wi-Fi doesn't work. Wi-Fi network name doesn’t show on your phone.
- Cellular/mobile data: No signal and  in the status bar. You can't make/receive calls, or calls frequently drop.
- Bluetooth doesn't work or disconnects automatically.
- VPN doesn't work as expected.

What gets deleted/removed when you reset

- All Wi-Fi devices and passwords set up on your phone
- All cellular/mobile settings, like preferred cellular network
- All paired Bluetooth devices set to connect with your phone, like ear buds, car audio, speakers
- All VPN configurations set up on your phone

You cannot choose individual connections to reset; they will all reset.

Reset

If you're having problems with connections, review this information first:

- Wi-Fi
- Bluetooth
- Cellular data
- Hotspot (internet sharing)

Then, if you’re still experiencing problems, try resetting all network settings:

1. Go to **Settings** > **System** > **Advanced** > **Reset options**.
2. Tap **Network settings reset** > **RESET SETTINGS**.
3. Tap **RESET SETTINGS**.
4. Try to reconnect to Wi-Fi, cellular data, and Bluetooth, or try to share your internet connection again.

Reset phone

What a reset does

Resetting your phone erases all data and brings it back to out-of-the-box condition. This data will be erased from the phone:

- Google account
- Media (music, photos, videos)
- System settings and data
- App settings and data (including text messages)
- Downloaded apps

Before you reset

1. Back up your data.

   If your phone works and you can unlock it:

   - If you aren't automatically saving your photos and videos to your Google Photos library, back them up now or copy them to a computer.
   - Back up files and folders to Drive.
   - Make sure that any changes you made to contacts or calendar are synced to an account.

2. Make sure you have your security information:

   - The username for a Google account on your phone. (**Settings** > **Accounts**)
   - The password for that Google account. If you've forgotten the password, you can reset it. Wait 24 hours before resetting the phone if you reset your password.
   - If you set a screen lock, make sure you know the PIN, pattern, or password.

   To restore your data after resetting, you'll need to enter security information. This shows that you or someone you trust did the reset and helps prevent others from using your phone without permission.

3. If you’re going to give your phone to someone else, disable Factory Reset Protection (FRP):

   a. Remove the screen lock.

   b. Remove your Google accounts from the phone.

   FRP is security measure that keeps your data safe if your phone is lost or stolen, and that requires logging into the phone with the owner's account to reset the phone. Removing your account and screen lock before the reset lets the person you're giving it to set it up with their own information.

Reset phone from Settings

To erase all data and reset your phone:

1. Go to **Settings** > **System**.
2. Tap **Advanced** > **Reset options** > **Erase all data (factory reset)**.

Reset phone if you can't open Settings

If you can’t open Settings, do an external reset.

1. Charge your battery 30% or more.
2. Turn off the phone.
3. Press & hold the Volume Down button and the Power button at the same time until the phone turns on.
4. Press the Volume Down button until you see Recovery mode.
5. Press the Power button to restart in Recovery mode.
6. If you see an Android robot with an exclamation mark, press & hold the Power button and, while holding it down, press & release the Volume up button.
7. Use the Volume buttons to scroll to **Wipe data/factory reset**, then press the Power button to select it.
8. Use Volume buttons to scroll to **Factory data reset**, then press the Power button to select it.

   Allow several seconds for the reset to complete.
9. Use Volume buttons to scroll to **Reboot system now**, then press the Power button to select it.

   Allow several minutes for the reboot to complete. If the phone doesn't finish rebooting, press & hold the Power button until the screen turns dark, then release it to power up normally.
10. If you reset your phone because you suspect a third-party app is causing problems, when you set up the phone again, be sure you don't copy all apps. Restore one app at a time and use the phone for a while. If the phone has no issues, install the next app and retest.

Get more help

Issue	Where to get help
Billing or cellular network issues	Contact your carrier.
Learn to use an app	Open the app and touch ⋮ or ☰ > **Help**.
Phone issue	Visit mobilesupport.lenovo.com for solutions, user forums, live contact options.

Send feedback to Motorola

If you have comments or suggestions about your phone, we want to hear them. Go to **Settings** > **Rating & feedback**.

To send feedback frequently, including a screenshot of the previous screen, open quick settings and touch Share feedback. (You can add this to quick settings.)

To send feedback about a Motorola app, in the app, touch ☰ or ⋮ or ⚙ > **Feedback**.